


NHR BT-868 Headset User Guide

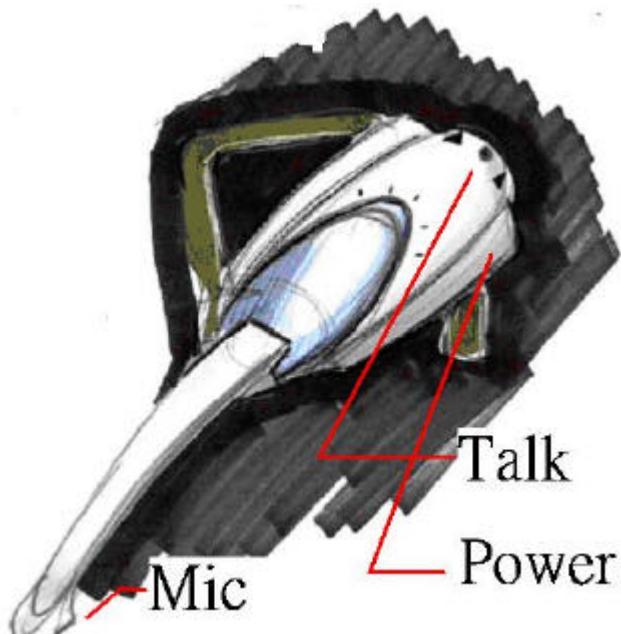

1. Functions on the headset

- (1) Power ON/OFF Switch :
 - A. One touch to switch the power of headset "ON" or "OFF".
 - B. Press the button longer than 5 seconds, it will enter Parity mode.
- (2) Talk Switch:
 - A. Push to make or receive a phone call, again to end a phone call.
 - B. Adjusting the volume To increase or reduce volume in your headset, press successively on the Upper (+) or lower (-) part of the lever switch on the headset.
- (3) Powersaving: To save battery, BT-868 automatically turns to idle when out of range for more than 2 minutes. By pressing on the talk button, the headset will wake up and start flashing per 5 sec

2. Adjusting the headset for your comfort

You can wear the headset on your right or left ear, whichever side you prefer.

3. Pairing with an Audio Gateway

To drive the headset you will need a Bluetooth Audio Gateway device such as a Bluetooth enabled cellular handset (such as ERICSSON T39mc).

- (1). Power on the headset
- (2). Put the headset into pairing mode by performing a "hard reset":
 - A. Hold down the Power ON/OFF button (more than 5 seconds will be sufficient)
 - B. Release the buttons
 - C. The headset will automatically go into pairing mode. This is indicated by the LED flashing approximately once every four seconds
- (3). Use your Audio Gateway to perform a search for Bluetooth devices. It should find the headset. If it does not repeat step 2.
- (4). Pair the Audio Gateway with the headset. When prompted for a PIN code enter 1234.

4. Using the headset to make and receive phone calls

- A. The headset has four states:
 - (1). Connect as slave (LED on) – wait for a call from the Audio Gateway
 - (2). Connect as master (LED on) – initiate a connection with the Audio Gateway
 - (3). Idle (deep sleep, red LED activity) – low power consumption
 - (4) Off (Power off, no LED activity) – no power consumption
- B. After pairing the headset will automatically go into Connect as slave mode. In this mode it will be able to Receive calls from the Audio Gateway. When a call arrives the headset will sound a ring tone.
- C. Press the “Talk” button to answer the call.
- D. To Connect as master mode press the “Talk” button once while in connect as slave mode. The headset will connect to the Audio Gateway.
- E. This feature is useful for cellular handsets that support **voice dialing**. Many handsets will automatically enter voice dialing mode to allow voice instructions to be received from the headset.
- F. The headset enters idle mode when it is reset (switched on and off). Press the “Talk” button once to change from idle to connect as slave mode.

5. Charging the battery

When BT-868 is not in use, plug the charger to the connector of the headset. The battery charging indicator automatically lights up and the headset is charged. It takes 1 1/2 - 3 hours to fully charge the battery of a BT-868. A fully charged battery provides up to 3 hours of talktime. If battery power gets too low, BT-868 lets you know by flashing red LED 2 times every 5 seconds in your headset.