

ECHO

USER'S MANUAL



WC World wide

Contents

1. Features	2	5) Time setting	7
2. Controls & Indicators		6) Alarm setting	7
1) MODE (▶) button	3	7) Automatic power on/off	8
2) READ (■) button	4	8) Message Read, Lock, Erase ...	8~10
3) Indicators	4	9) Message memory full	11
3. Operations		10) Battery low indication	12
1) Turning your pager off	5	11) Unread message warning	12
2) Turning your pager on	5	12) No Page	12
3) Selecting each function mode ...	6	13) Back Light	13
4) Selecting Alert	6	14) Duplicate Message Indicator ...	13
		15) Service Area Indicator	13

1. Features

■ User-Friendly design

- Convenient 2 buttons
- Wide LCD readout
- Small & Sleek size

■ Functions

- Capacity
 - Message slot : 16
 - Message storage capacity : 12
- Time display
 - Message time-stamping
 - Duplicate message indicator with latest time-stamp
 - User selectable time & calendar display


• Message receiving

- User selectable alerts (8 Melodies, 5 Beeps, Vibration)
- Unread message reminder alert & indicator
- Full message indicator
- Service area indicator
- Selective erase and erase all
- Low battery warning & Indicator
- Battery level meter

• Others

- Backlit display in low light condition
- Alarm function

2. Controls & Indicators

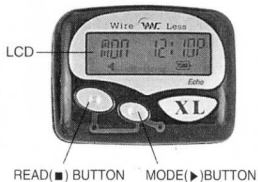

■ MODE (▶) BUTTON

- Select function mode
- Read locked message
- Lock received message or Delete
- Return to Stand-by mode while reading messages
- Change setting value in function mode
- Power on

■ READ (■) BUTTON

- Read message
- Confirm selection in each function mode
- Lock or delete each message

■ LCD Panel & Indicators



→ Pager Status Symbols

Audible Alert Mode	
Melody Mode	
Alarm Mode	
Auto On / Off	AUTO

→ Message Status Symbols

Locked Message	
Duplicate Message	
Unread Message	
Next Page	

→ Other Symbols

Antenna	
Battery Level Meter	
Full Message	FULL

3. Operations

1) Turning your pager off



"POWER OFF" mode is used when you want to stop all the system.
Select "POWER OFF?" mode by pressing Mode button (►) for 2 seconds and press READ button (■)

2) Turning your pager on

Press MODE (►) button for 3 seconds for power-on

3) Select each function mode

When power-on and Stand-by mode, you can select each function mode by pressing MODE (▶) button. Each function mode is displayed in following order SET ALERT → POWER OFF → SET TIME → SET ALARM → SET AUTO → DELETE ALL → STAND-BY MODE

4) Selecting Alert

In SET ALERT mode, you can select 5 beeps, 8 melodies, and vibrator for your pager alert. by pressing READ (■) and MODE (▶) button.

SET ALERT ?
◀ ▶


beep 5
◀ ▶

MELODY 8
◀ ▶

vibrator
◀ ▶


5) TIME Setting

In SET TIME? mode, you can correct the desired time by pressing READ (■) and MODE (▶) buttons.

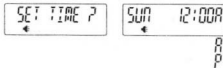

6) Alarm Setting


In SET ALARM? mode, you can set the desired alarm time and alarm on/off by pressing READ (■) and MODE (▶) buttons.

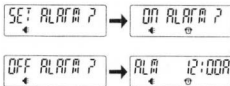

7) Automatic Power on/off

In SET AUTO? mode, you can select automatic power on and off mode & on/off time by pressing READ (■) and MODE (►) button.

 Power on and off time setting can be done by same procedure of SET TIME mode.

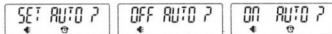


8) Message Read, Lock, and Erase

- When a message is received, you can read it by pushing READ (■) BUTTON. When no message received, NO PAGE is displayed.



- Locking message

 
While reading the received message, if MODE (▶) button is pressed, then LOCK? is displayed and if READ (■) button is pressed, the message will be locked.

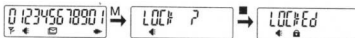

- Erasing received message


When LOCK? is displayed at above procedure, MODE (▶) button is pressed again, then DELETE? is displayed and this message will be erased by pressing

READ (■) button and
DELETED will be
displayed.

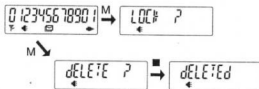

- Erase all message

In DELETE ALL? mode, you can erase all received and locked messages by pressing READ (■) and MODE (▶) buttons.

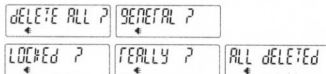

- Erase selective message

While reading locked message if MODE (▶) button is pressed, DELETE? will be displayed. READ (■) button is pressed, then the message is erased and DELETED will be displayed.

NOTE) In battery low condition, locked messages cannot be erased but can be read.

- Reading locked message

In order to read locked messages, there should be no unread messages.

In stand-by mode, press MODE (►) button and read the number of locked message and enter into Locked message reading mode.

NOTE) If no locked messages, locked message reading mode cannot be accessed.

9) Message Memory Full

You pager can receive up to 16 messages of 20 characters and if the message is received more than 16 messages, FULL will be displayed. A new message will be saved and the oldest message will be erased automatically.

10) Battery low Indication

 
Your pager can detect the battery level and display the low battery level by battery icon and make warning once after first battery low detection.

11) Unread message warning

If you have an unread message, your pager make warning at every 3 minutes by tone alert or vibrator.

12) No Page

There are no messages stored in memory, "NO PAGES" is displayed.

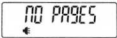


NO PAGES

13) Back Light

In low light condition, the pager's back light makes the easy to read. Press the read button (■) approximately 2 seconds on standby screen, and lamp on and if no key is pressed for 8 seconds lamp off.


14) Duplicate Message Indicator

 If a message is received which is exactly the same as a message already in memory,  symbol is displayed on the screen while reading message. The original message is updated with the time stamp of the newest message.

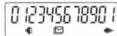

15) Service Area Indicator

 Icon of service area indication is displayed on the screen to show the pager is within the active service area.

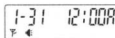 

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received including interference that may cause undesired operation.