

Wireless Remote for Nintendo Wii®



Please read this user's guide before using your new remote.

Package contents

 
- Wii Remote
- Wrist Strap
- Quick Start
- Silicone skin
- User's Guide

Features

- Works with all Wii games
- Speaker enhances game play
- Silicone skin provides a comfortable and more secure grip

① Install batteries

1. Open the battery compartment cover.
2. Insert 2 AA batteries (not included) into the battery compartment, matching the polarity symbols (+ and -) marked inside.

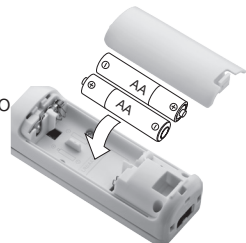


3. Replace the battery cover.

Battery Notes:

- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the remote for more than one week, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

② Install the Silicone Skin

 1. Insert the remote into the protective silicone skin.
2. Press the cover on the bottom to snugly fit the external extension connector.

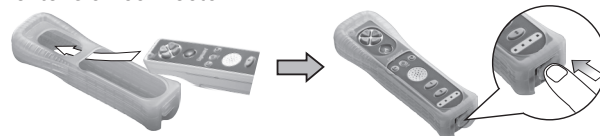


Notes:

- The power button can be operated with the silicone skin in place.
- Remove the silicone skin before you connect a Nunchuk or MotionPlus accessory.

③ Attach the wrist strap

 1. Insert the small end of the strap into the hole.
2. Loop the larger end in through the small end and pull to secure the strap firmly.

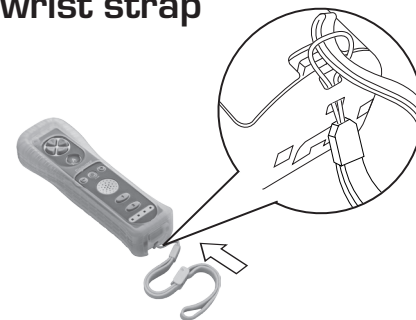

Caution - Wear the wrist strap

 
Game play with the Wii Remote can involve vigorous motion. To avoid losing your grip on the remote and causing injury or damage to objects and people around you, please be sure that all players wear a wrist strap during game play.

④ Set up the Wii Remote

Standard Mode Synchronization

Standard Mode Synchronization adds additional Wii Remotes to your system or re-synchronizes your original remote.

1. Turn on the Wii console.
2. Remove the remote's battery cover. Press **SYNC.** inside the compartment. The Player LEDs will blink.
3. Open the SD Card Slot cover on the front of the Wii console. Press the Wii's SYNC button inside the compartment.

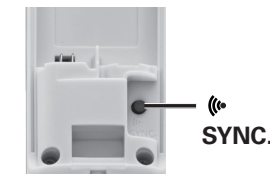

4. When the Player LEDs blinking stops, connection is complete. The LED that remains lit indicates the player number.

Notes:

- Only a Wii Remote in Standard Mode can turn your console on/off.
- The remote will stay synchronized with the console unless you synchronize the remote to a different console.

One Time Mode Synchronization

One Time Mode Synchronization allows you to temporarily use your remote with another console. It does not delete the Standard Mode setting stored in the remote.

1. Press **HOME** on the remote.
2. Select the Wii Remote Settings option from the Home menu, then select the Reconnect option.
3. Press **1** and **2** simultaneously on the remote.

4. The Player LEDs will blink during synchronizing. When the blinking stops, the connection is complete.

 
 
5. Operate the remote according to the game.

The Wii Remote will cancel synchronization if you:


- turn off the console
- return to the Wii menu
- reset the console.

⑤ Using your Wii Remote


1. Open the lever on the wrist strap lock, loosen the strap, and place your hand through the wrist strap.
2. Slide the strap lock up, tightening the strap comfortably but securely.
3. Snap the lever closed to secure the lock.
4. Use your remote according to your game's instructions.

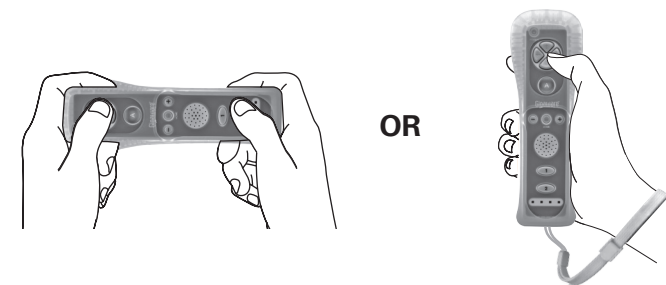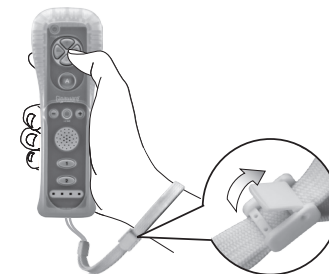

Front View

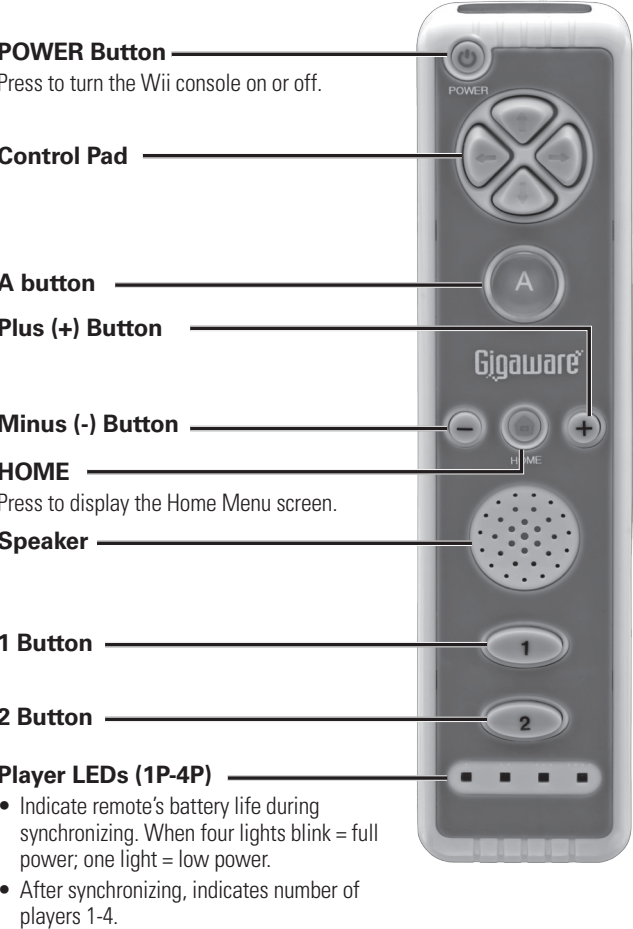 

Back View

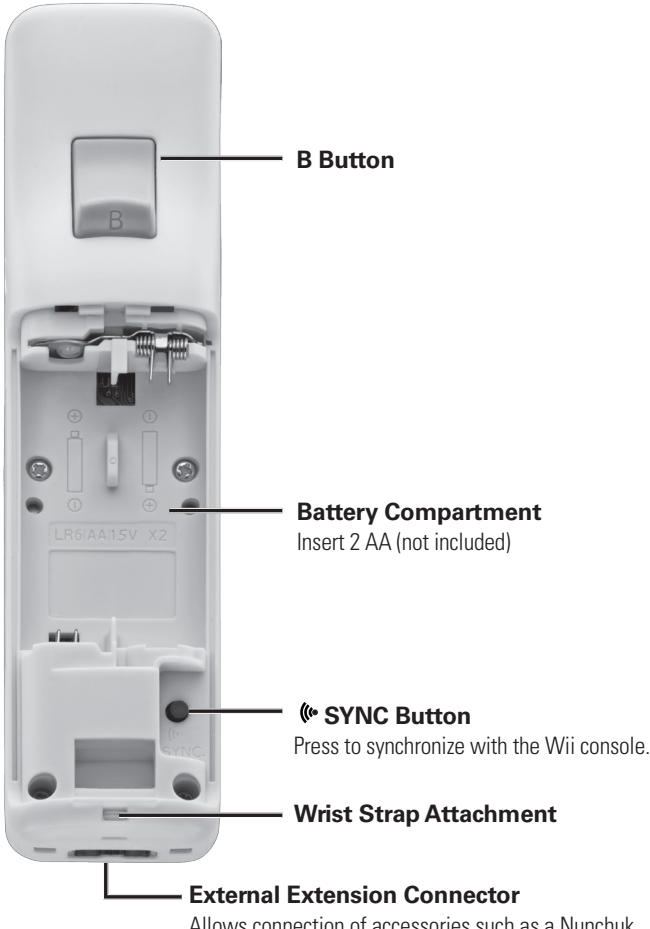 

Specifications

Power Supply 2 AA batteries/DC 3V
Connectivity Wireless
Input Motion sensing
Range up to 26 feet
Specifications are subject to change and improvement without notice.
Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by Ignition L.P. could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDI-

RECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at: Ignition L.P., 3102 Maple Ave. Suite 450, Dallas, TX 75201

For product support, call **1-866-315-0426**

Nintendo and Wii are either registered trademarks or trademarks of Nintendo of America, Inc. This product is not sponsored, endorsed or approved by Nintendo.

Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

© 2010. Ignition L.P. All rights reserved. Gigaware is a registered trademark used by Ignition L.P. Printed in China 07A10 2601712