

Mobile Phone

Brand Name: CL PHONE

Model Name: F33

FCC ID: Q2YF33

CONTENT

1.WARNINGS	- 1 -
2.GETTING STARTED.....	- 2 -
3.YOUR PHONE	- 3 -
4.FUNCTION MENU	- 3 -
4.1.CONTACTS.....	- 4 -
4.2. MESSAGE.....	- 3 -
4.3. CALL LOGS	- 4 -
4.4.MULTIMEDIA.....	- 4 -
4.5. SETTINGS	- 6 -
4.6. MY FILE	- 6 -
4.7. TOOLS.....	- 7 -
4.8. CALENDAR.....	- 7 -
5. CARE AND MAINTENANCE.....	- 7 -
6. TECHNICAL INFORMATION.....	- 9 -

1. Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

2. Getting Started

2.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

2.2 Battery Installation

Caution: Install according to the illustration above to avoid breaking the battery connectors.

2.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

2.4 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, etc.

2.5 USB Cable

You can transfer and store files, such as MP3, MP4 and

pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

3. Your Phone

3.1 Key function

1. Right key: Move the cursor with the direction of right.
2. Left key: Move the cursor with the direction of left.
3. Send key: To dial and pickup calls; on standby mode, to see the record of all calls made.
4. End key: To end a call or reject incoming calls. Under most circumstances pressing this key will put the mobile phone into standby mode. Hold down this key to power On/Off.
5. Number keys: To enter numbers and letters; the number keys from 2-9 can be set for one-key dialling.
6. * key: cycle according to * keys to switch and input *, +, P, W, display symbols list in edit mode;
7. # key: long press # key scene mode switch

4. Function menu

4.1. Contacts

You can store contacts' personal information and numbers while also search for previously stored contacts. Press left soft key to access Options.

4.2.Message

After entering Messages, in: Templates, Voice Mail Server, Broadcast Message, SMS Settings, and Message capacity.

4.2.1. Write Message

Text message

This function can begin a new SMS. After completing the SMS, press left soft key to access to options.

4.2.2 Inbox

To check received messages in inbox.

4.2.3 Outbox

Checks the information of unsuccessfully sent message in outbox .

4.2.4 Drafts

You can save unsent and edit incomplete messages in drafts box.

4.2.5 Sentbox

Check the sent messages in sent box.

4.2.6 Templates

5 a template for choice

4.3. Call Log

In the call history menu, you can check dialed calls, received calls, missed calls, rejected calls, delete all, call timers, call cost.

4.4.Multimedia

4.4.1 Image

Enter the “Image ” submenu.

4.4.2 Camera

Press left soft key or OK key to select the function. The photo

can be previewed in the screen; press OK key to shoot and right soft key to back, left soft key to access Options. Use navigation keys, you can choose and enter the functions list on screen.

4.4.3 DV

In the video recorder interface, press left soft key to access Options. Use navigation keys, you can choose and enter the functions list on screen.

4.4.4 Audio

This function menu is used to store and play the multimedia file. Press the left soft key or OK key to enter and use the Navigation keys, OK key, or Music Control Keys to operate. Press up key and down key to adjust volume. Press left soft key to access Options.

4.4.5 Video

Preview the videos. Press up key and down key to adjust volume. Press navigation keys to select and then press OK key confirm to enter. Press left soft key to access to "List", then press right soft key to return.

4.4.6 FM radio

Enter FM radio (insert earphone). Press left/right key to change frequency, Press the left soft key to access Options.

4.4.7 TV

Into the TV, you can search for television, broadcast television, set the countries and regions.

4.4.8 Recorder

You can take a recorder in this function. In the play mode, use up key and down key to adjust the volume. Press OK button to record. After record, access Options. After entering the file list, select one file, access to Options

4.5. Settings

4.5.1 Profiles

This phone provides several profiles, by pressing left soft key, you can enter to set: Active, Customize, Rename, and Enhance Sound.

4.5.2. Phone settings

Time&date/Selectlanguage/Shortcutsettings/Autopoweron/off;
Power management/Restore factory settings Input default
password 1234 to restore factory settings

4.5.3 Display

Wallpaper Setting, Idle display settings; Contrast; Backlight;
Keypad backlight time; Animation effect ;

4.5.4 Security

PIN/Modify PIN2/Phone locked/
modify the cellphone password/
privacy /Lock screen by end-key
/Fixed dialnumber/Blacklist
Default psaaword 1234

4.5.5 Call Settings

Network selection;Call divert; Call barred;Call waiting;Hide
ID;Selet line;Filght mode; Others

4.5.6 Connections

Select network count from the list or you can do some options
You can select connect when needed, always connect

4.6.My files

Enter this menu; you can check the files store on Phone and
T-flash card. Press left soft key, you can do options.

4.7. Tools

4.7.1 Internet

Your phone supports WAP function. You can use your phone
to browse WAP pages. Press left soft key, you can select

options to perform.

4.7.2 Bluetooth

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization. Press left soft key to do options

4.7.3 Ebook

It supports TXT electronic book

4.7.4 Calculator

This feature can use your phone as a calculator for simple calculations. Press corresponding keys to enter the numbers.

4.7.5 World clock

You can setting Local time and another city time.

4.7.6 Alarm

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify. There are 3 alarm clocks can be edit and set.

4.7.7 Unit conversion

Include weight ,length conversion.

4.7.8 Flashlight

This phone can use as flashlight when you in need.

4.8 Calendar

You can use this feature to view the year, date and solar term easily. Use navigation keys to navigate other date. Press left soft key, you can enter to submenu to do options.

5. Care and maintenance

Battery care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend

the lifespan of the battery, use all the battery's power before recharging.

- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a week. Overcharging may shorten its lifespan.

- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 50 °C, the battery cannot be charged.

- Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery.

- Battery performance is particularly limited in temperatures below freezing.

- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations. Please recycle when possible. Cellphones are not considered household waste.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before

replacing it.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

6. Technical Information

Weight

Size Length ×Width ×Depth

Battery

Networks:

Battery work times refer to the list below (Will not announce if the capacity is changed):

The operation time of the battery depends on conditions such as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

Warning

- **Please used original matched battery. If wrong battery is used, there will be danger of explosion**
- **Disused old battery, Please handle it according to local environmental protection law and don't throw it at random.**

All pictures are for reference only in the instruction book; please refer to the actual phone.

Important regulatory information

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 0.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 0.5cm is 1.223W/kg; next to the head is 0.769W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15

of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.