

User Manual

1. Slide the batter compartment cover in the direction of arrow to remove it. Place the 9V battery in the compartment according to the polarity symbols (+ and -) marked inside. Replace the cover and snap it shut.
2. Push the Forward/Back Control Stick to move forward: ship or boat move forward and the LED indicator on. Push the Forward/Back Control Stick to move back: ship or boat move back and the LED indicator on.
3. Push the Forward/Back Control Stick to move forward, and push the Left/Right Stick to move left: ship or boat move forward on left and the LED indicator on. If push the Left/Right Stick to move forward: ship or boat move forward on right and the LED indicator on.
4. Push the Forward/Back Control Stick to move back, and push the Left/Right Stick to move left: ship or boat move back on left and the LED indicator on. If push the Left/Right Stick to move back: ship or boat move back on right and the LED indicator on.

Note:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

