

Mobile Phone

DMD Mobile M3, M5, M8

User Manual

Safety Information

IT IS IMPORTANT THAT YOU READ THIS MANUAL PRIOR TO USING YOUR M3 ANDROID NFC PHONE.

It contains essential safety information related to your Android NFC phone.

Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others.

Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.
- Periodically backup personal information kept on your SIM/UIM card, memory card, or stored in your device memory. If you change to a different device be sure to move or delete any personal information on your other device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by DMD Mobile or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.

- Your device may provide detection and diagnostic information to third-party application providers. Third-party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact us at <http://www.dmdmobile.net/contact.html>

What is in Your Box

- Mobile Phone
- Headset
- Charger
- Quick Start Guide
- USB Cable
- Battery


More Information

For more information about how to use your phone, please go to <http://www.dmdmobile.net/contact.html>

Know your new M3

 All pictures and images shown in this guide are for your reference only. The actual appearance and display features depend on the mobile phone you purchase.

 

1	 Navigate Key	2	 Send Key
3	 OK Key	4	 Home Key
5	 Menu Key	6	 Alt Key
7	 Cap Key	8	 Smiley Key
9	 Space Key	10	 Symbol Key
11	 Enter Key	12	 Delete Key
13	 Search Key	14	 Return Key
15	 End Key	16	 Power Key
17	Volume Key	18	NFC Key
19	Headset Jack	20	Speaker
21	Camera	22	Charge/Data port

Important functions at Your Fingertip



- Press to activate your phone.
 - Press and Hold to open Option Menu.
 - Press to lock screen while phone is active.
-



- Touch to return to previous screen.
 - Touch to leave from active application.
 - Touch to hide keyboard.
-



 
- Touch to open option menu on current screen.
-




- Touch to return to Home screen.
 - Touch and hold to view last used application.
-



- Touch to open Google search to browse your phone and websites.
-



 
- Press to call or answer call.
 - Press to go to Call Log.
-



- Press to activate your screen lock
 - Press to end call.
 - Press to go to Home Screen
-




 - Touch to move and select item on screen.
-




- Press to enter the selected item.
-

 
Installing your SIM Card

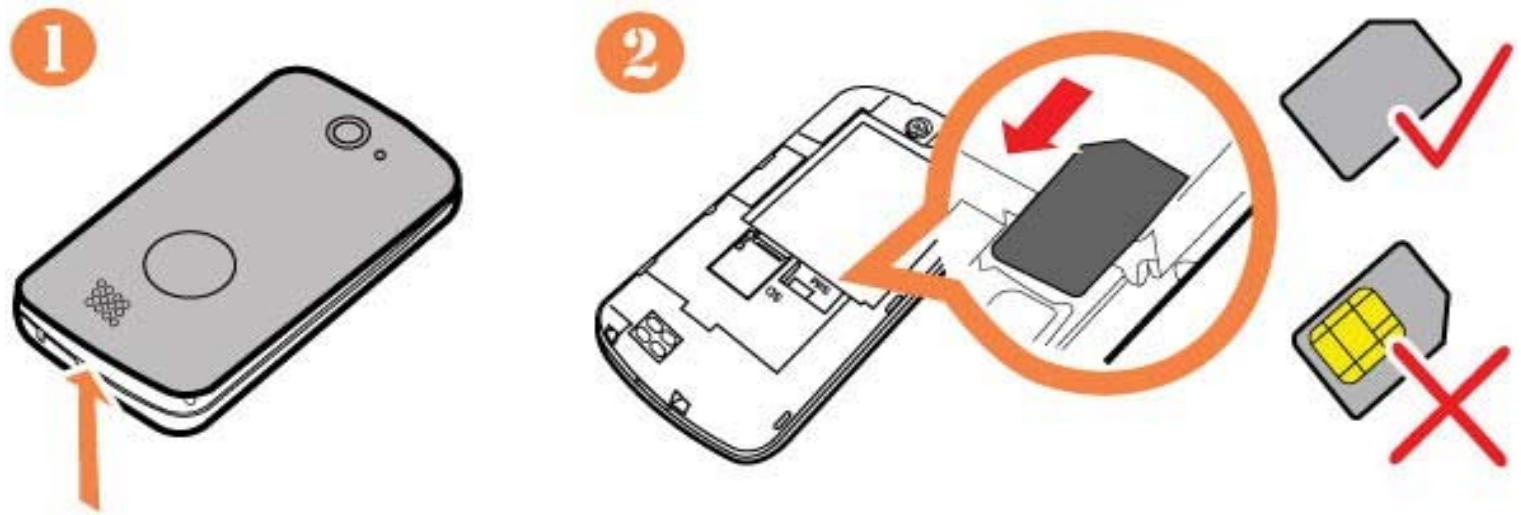

Installing the Battery

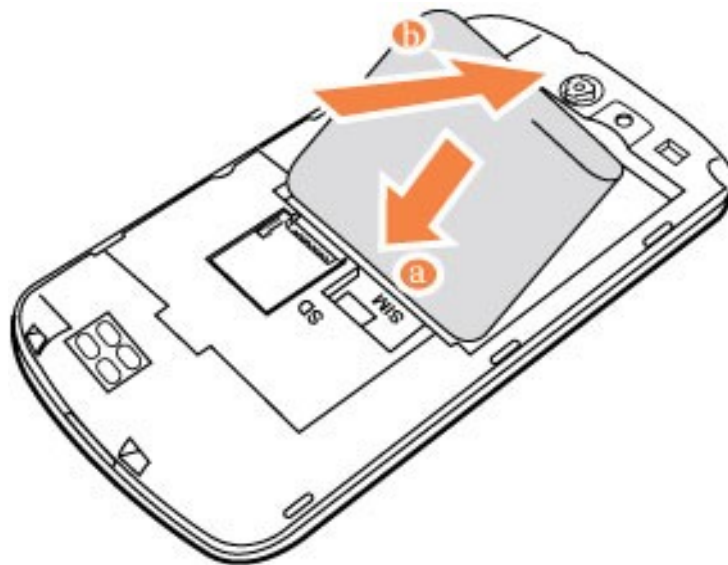 

Charging Phone Battery

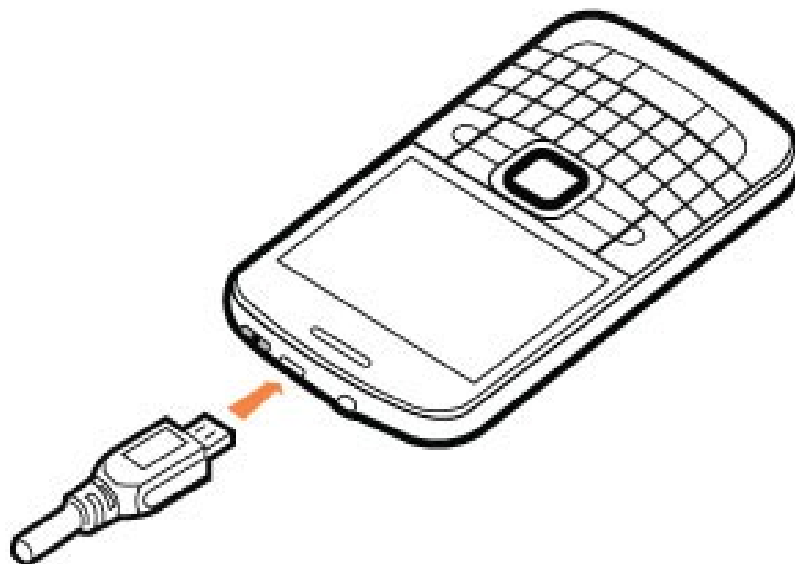 

If your mobile phone is charged when it is powered on, the battery icon on the notification bar shows the charging status. When the battery icon changes to , it indicates that your mobile phone is fully charged.

Power On or Off Your Mobile Phone

 
Powering On Your Mobile Phone

Press  The first time you power on your phone, you will be asked to sign in to your account and set up your mobile phone.


Powering Off Your Mobile Phone

1. Press and hold  to open the **Phone options** menu.
2. Touch **Power off**.

Home Screen

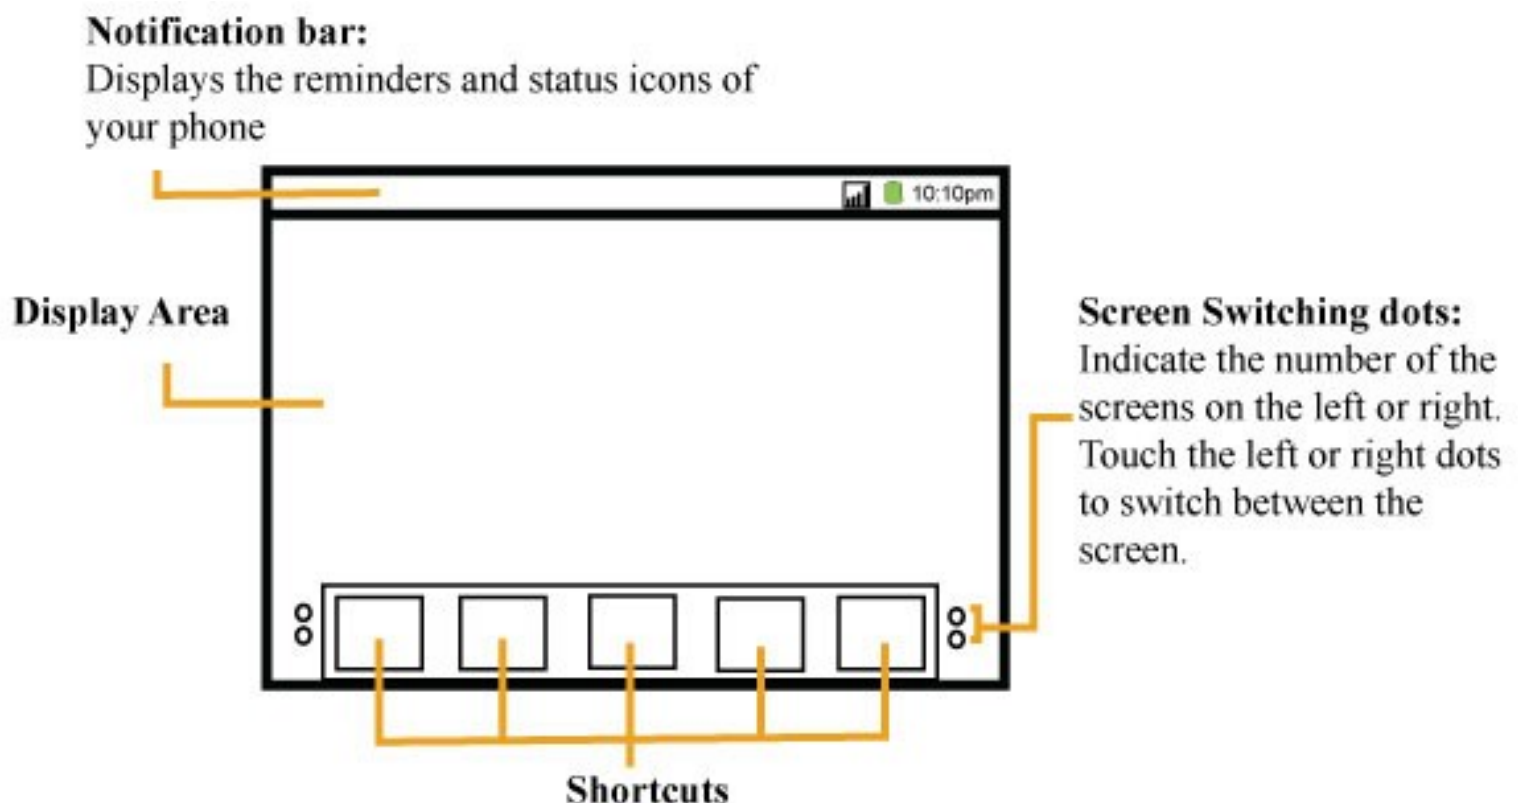

Viewing Other Parts of the Home Screen

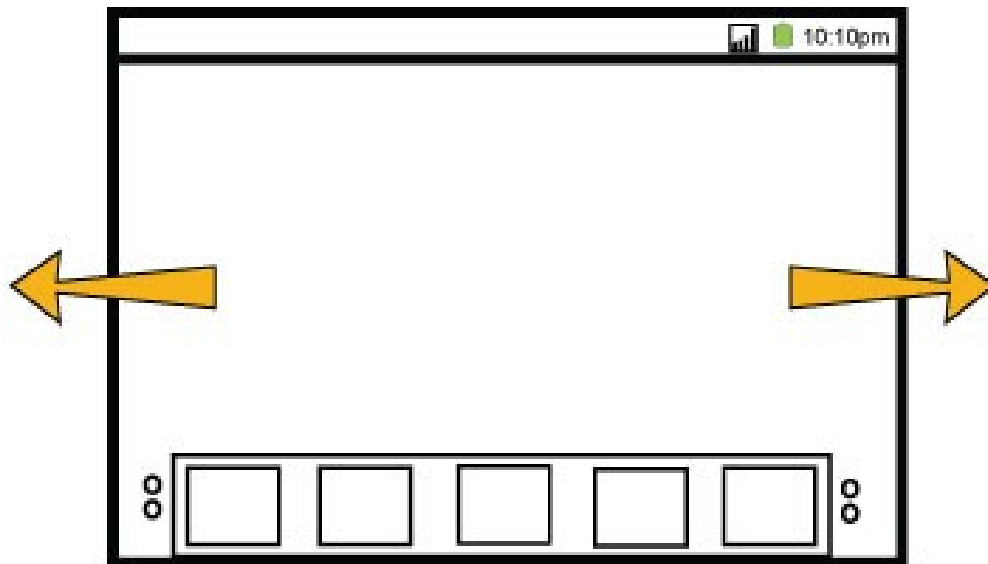 

Flick your finger left or right across the Home Screen

Adding a New Screen Item

1. Touch and hold a blank area on the Home screen until the **Add to Home screen** menu is displayed.
2. Select an item to add it to the Home screen.

Changing the Wallpaper

 
1. On the Home screen, press  > **Wallpaper**.
2. Touch the following menu items to select a picture and set it as the wallpaper.
 - **Gallery**
 - **Live wallpapers**
 - **Wallpapers**

Locking the Screen

- When your phone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If your phone is idle for a while, the screen will lock automatically.


Unlocking the Screen

1. Press  or  to wake up the screen.
2. Drag the lock icon from the bottom to top to unlock the screen.

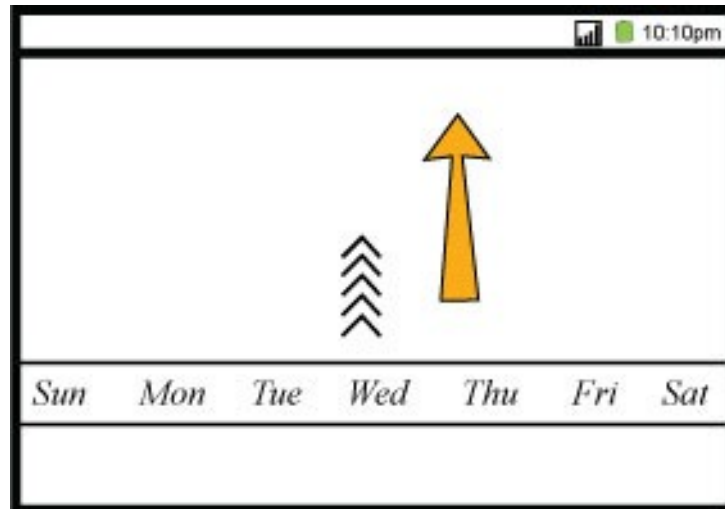

Quick Action Tab

 1. Drag down the notification tab on the Home Screen
2. Flick finger left or right to select the desired action.

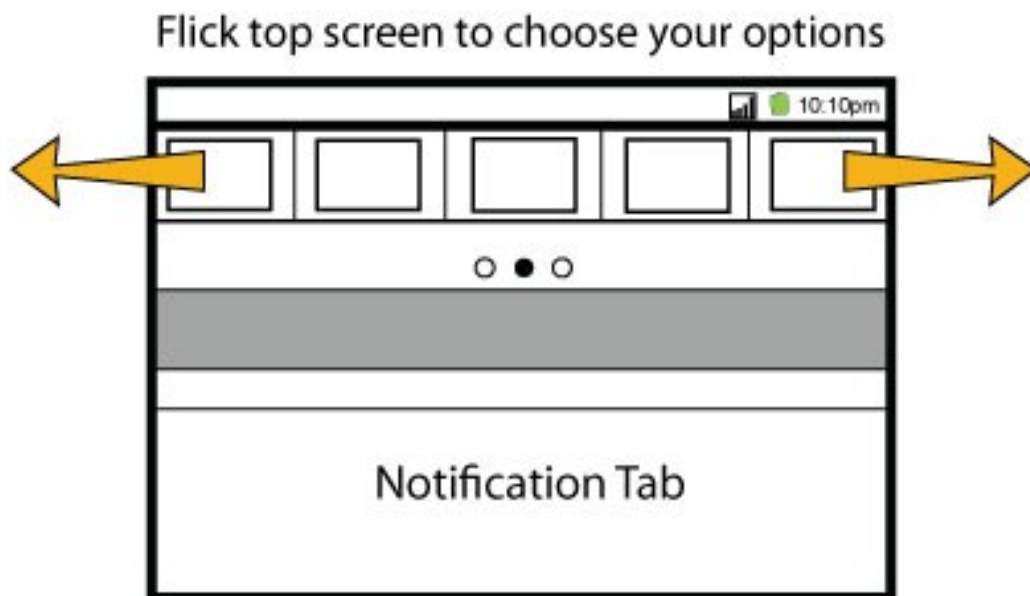

Importing Contacts from a SIM Card

1. In the **Contact List**, press  > **More** > **Import/Export**.
2. Touch **Import from SIM card**.
3. Wait for the SIM card contents to be loaded. Select the contacts you want to import or touch  > **Import all** to import all contacts.

4. If you have more than one account on your phone, touch the account into which you want to import the contacts.

Making a Call

To make a call, you can select a number from **Contacts** or **Call log**.

When you are on a call, you can press  to use other functions. To return to the calling screen, flick the notification bar down and touch **Current call**.

 Do not block the microphone at the bottom of your phone if you want your voice heard.

Answering an Incoming Call - Press  to answer the call.

Rejecting an Incoming Call - Press  to reject the call.

Choosing an Input Method

1. Touch and hold the space where you enter your text until the **Edit text** menu is displayed.
2. Touch **Input method**.
3. Select the input method.

The keyboard panel will be displayed automatically.

Using the phone Keypad

To enter an upper character of one key, press  first and then the desired key.

CURSOR



To enter only upper characters, press

 twice before typing.

CURSOR



Press  again to switch

back to lower-case letters.



To enter one upper-case letter, press

 first then a key.

CURSOR



To enter only upper-case letters, press

 twice before typing. Press  again to input back lower-case letters

CURSOR

 


To switch input language, press


 + . The selected language will be displayed on the notification bar.



- Press  to input a smiley face.
- Press and hold  to display all expressions.

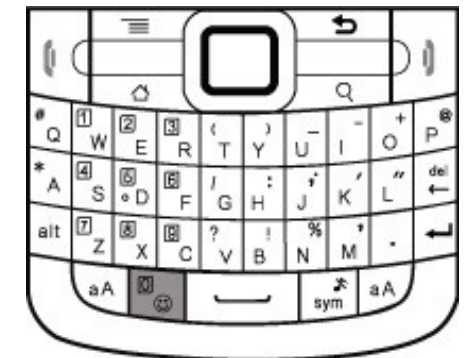

 - Press  to display all symbols.
- Press and hold  to mute the phone.

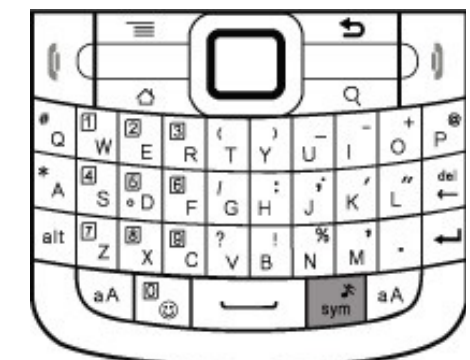

Creating and Sending a Multimedia Message

1. Touch  > **Messaging** > **New message**.
2. Enter a phone number in the **To** field.
3. Touch the composition text box to start entering your message.

4. Press  to display the option panel.
 - Touch **Add subject** to add the message subject. Your mobile phone is now in multimedia message mode.
 - Touch **Attach** to add a picture, music or video file.
5. When the message is ready to be sent, touch **Send**.

Getting Connected

Turning on the Data Service

1. Touch  > **Settings**.
2. Touch **Wireless & networks > Mobile Networks**.
3. Select the **Data enabled** check box to turn on the data connection.

 If you do not need a wireless network, you can uncheck the **Data enabled** check box to save data traffic costs.

Turning On Wi-Fi

1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Wi-Fi** check box to turn on Wi-Fi.
3. Alternatively, you can drag down the notification bar and select the Wi-Fi icon to activate it.

Connecting to a Wireless Network

1. After turning on Wi-Fi, touch  > **Settings**.
2. Touch **Wireless & networks > Wi-Fi settings**. You will see a list of detected Wi-Fi networks in the **Wi-Fi networks** section.
3. Touch a Wi-Fi network to connect to it.

Sharing your Phone's Data Connection as a Portable Wi-Fi Hotspot

1. Touch  > **Settings**.

2. Touch **Wireless & networks > Tethering & portable hotspot.**

3. Select the **Portable Wi-Fi hotspot** check box to share your data connection.

Staying close to your friends

Touch  > Streams, you can stay close to your friends through social networks.

 The first time you do this, you will be asked to sign in to your account.

Opening the Browser

 
Touch  > **Browser** to open the home page.

 When the known or open Wi-Fi networks and the mobile networks are present at the same time, your phone will preferably select a Wi-Fi network for internet access.

Opening Your Camera

- Touch  > **Camera** to open the camera. The camera opens in landscape mode, ready to take a picture or record a video.
- Press  to close the camera.

Capture Screen

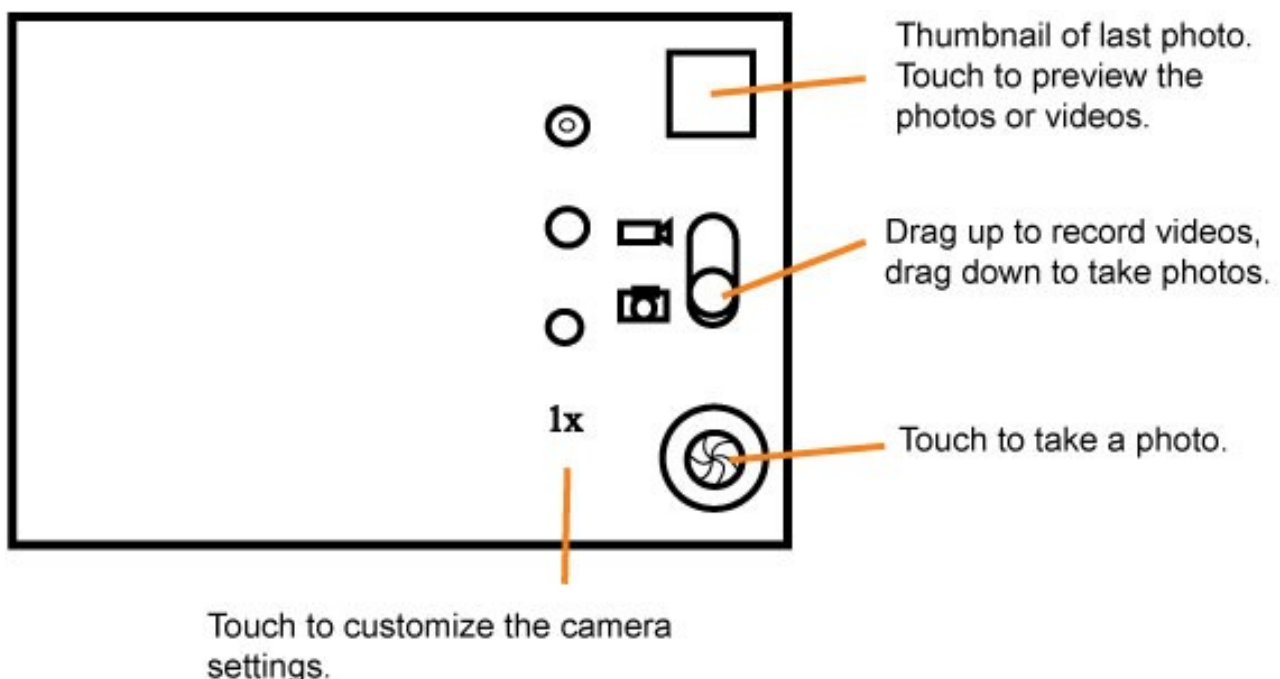

Enjoying Music

Before using your music player, you must copy music files from your computer to the microSD card.

Once you have done this, the player will search for music on the microSD card. After the search is complete, you will be able to view all available music files in the music library.

Opening the Media Library

Touch  > **Music** to display the media library.

Playing Music

1. Touch a category on the music library screen.
2. Touch the song you want to play.

Using the microSD Card as USB Mass Storage

1. Connect your mobile phone to your PC with the USB cable. Your PC will detect the microSD card as a removable disk.
2. Open the notification bar, and then touch **USB connected**.
3. Touch **Turn on USB storage** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.

FAQ

Q: How do I set a song as phone ringtone?

A : In the media library, touch and hold the song to be set as ring tone, and then touch **USE as phone ringtone**.

Q: How do I prevent automatic switching of orientation when rotating phone?

A: Touch  > **Settings > Display > Auto-rotate screen** to disable the function.

Q: How do I set the unlock pattern?

A: Touch  > **Settings > Location & security > Set up screen lock > Pattern**.

Q: How can I change the input method?

A: Touch and hold the area where you write text and then select the input method you prefer.

Q: How do I stop the song playing in the background?

A: Touch the notification bar, flick downwards to open the notifications panel, and then touch the music playing notification to go to the music playing screen.

Q: How do I return to the calling screen?

A: While on a call, if you're on another screen, you can touch the notification bar, and drag downwards to open the notifications panel. Then touch the current call notification to return to the calling screen.

Q: How do I create an application shortcut on the Home screen?

A: Touch and hold an application icon on the main menu screen until the Home screen is displayed. Then drag the icon where you want it to go and release your finger.

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to

the operations of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.0cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.0cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulation, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to childcare's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other type of battery, charger or accessory may invalidate any warranty for the device, may be in violation of local rules or laws, and may be dangerous. Please contact your dealer for information about the availability of approved batteries, charger, and accessories in your area.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharge hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specification of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- If battery electrolyte leaks out, ensure the the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of batter deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Do not modify or re-manufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids expose to fire, explosion or other hazard.

- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a qualified service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- Promptly dispose of used batteries in accordance with local regulation.
- The device should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

Cleaning and Maintenance

- The device, battery and charger are not water resistant. Keep them dry. Protect the device, battery and charger from water or vapor. DO not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.
- If the device screen is broken by colliding with hard objects, do not touch or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.248 W/kg, and when properly worn on the body is 0.424 W/kg.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Trademarks and Permissions

 are trademark or registered trademark of DMD Mobile Sdn. Bhd.

Android is a trademarks of Google Inc.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not match exactly as the product or its accessories you purchased.

DMD Mobile Sdn. Bhd. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

DMD Mobile Sdn. Bhd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, DMD Mobile Sdn. Bhd. will not provide any warranty of any kind for these third-party software and applications. Neither will DMD Mobile Sdn. Bhd. provide support to customers who use these third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time. DMD Mobile Sdn. Bhd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of DMD Mobile Sdn. Bhd. To the greatest extent permitted by applicable law, it is explicitly stated that DMD Mobile Sdn. Bhd shall not compensate or be liable for services provided by third-party service provider, or the interruption or termination of third-party contents or services.

DMD Mobile Sdn. Bhd. shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos, or software. Customers shall bear the risk for any and all effects including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-sources Android™ platform. DMD Mobile Sdn. Bhd. has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. DMD Mobile Sdn. Bhd. shall not be liable for any of such situation.

DISCLAIMER OF WARRANTIES

THE CONTENTES OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

LIMITATIONS OF LIABILITY

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL DMD MOBILE SDN. BHD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF DMD MOBILE SDN. BHD. ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

THIS DOCUMENT IS FOR INFORMATION PURPOSE ONLY, AND DOES NOT CONSTITUTE ANY KIND OF WARRANTIES.

All the pictures in this guide are for your reference only. The actual appearance and display features depend on the mobile phone you purchase.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2)

this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance 1.0cm between the radiator & your body.