


Programming of Hand Held Remote

LED Light Conditions:

- Green Led “on” = 110vac present
- Green Led “blinking” = Remote signal received
- Red Led “on” = Receiver looking for Remote
- Red Led “off”= Remote programming is complete

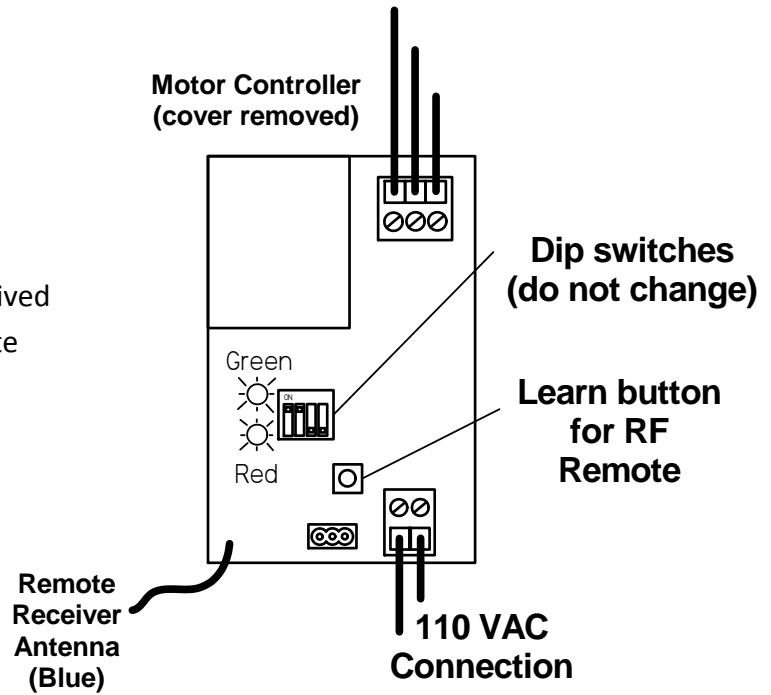

To Program the Hand Held Remote:


- 1) Insert 2 - CR2032 batteries into Remote (not included)
- 2) Press and hold “Learn” button on Motor Controller
 - a. Release button once the “Red” led lights.
- 3) Press and hold the top (open) end of a selected button on the remote. (button #1 is typical)
 - a. The “Red” led will blink and go out when programming is complete.
- 4) Reinstall cover on Motor Control Pack (2 screws)
 - a. Be Careful not to pinch any wires.
- 5) Insert Motor Control Pack into double gang box and install cover plate. (Do Not Use A Metal Cover Plate)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any modifications not expressly approved by Truth Hardware will void your authority to operate this device.



Truth Hardware
 700 West Bridge St.
 Owatonna, MN 55060
www.truth.com
 Form No. 90289 R1

Hand Held RF Remote & Wall Mount

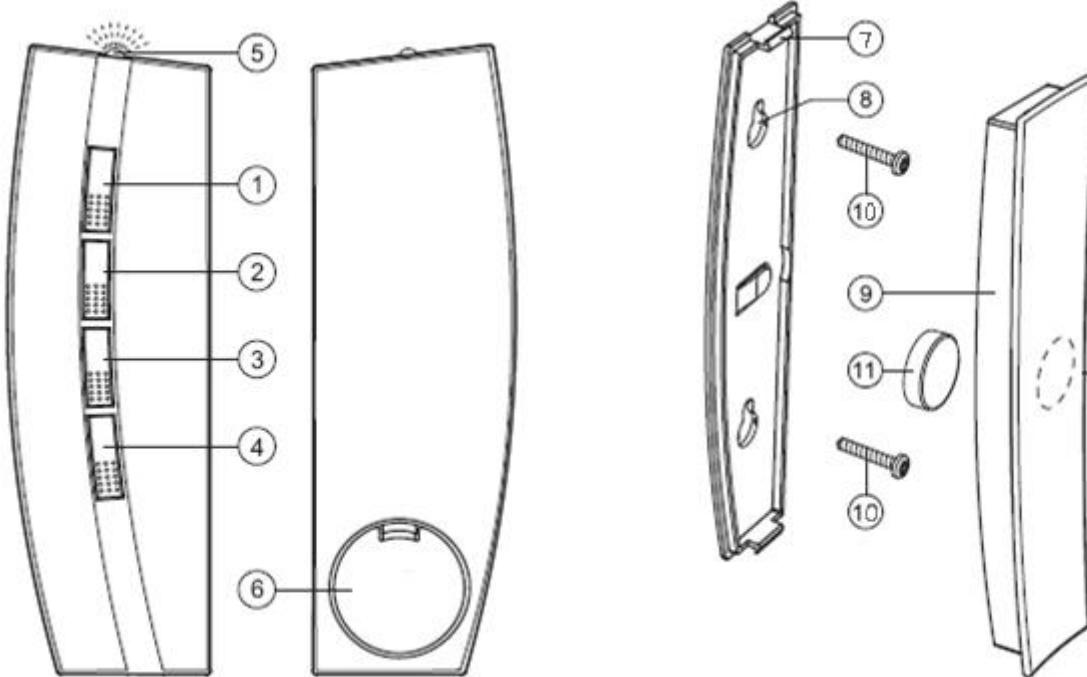

- 1) Push Button #1 (Up & Down)
- 2) Push Button #2 (Up & Down)
- 3) Push Button #3 (Up & Down)
- 4) Push Button #4 (Up & Down)
- 5) IR transmitter (not active)
- 6) Battery Door
- 7) Wall Mount (back)
- 8) Screw Hole (2)
- 9) Wall Mount (front)
- 10) Screws (2 supplied)
- 11) Magnet
- 12) Battery Holder
- 13) Batteries, 2 - CR2032 (not included)

