 


PT5200-01 Adjustment Procedure

1. Frequency Adjust

a. setup the equipment as follow.

Setup:




b. let the PT5200-02 working in high frequency channel (159.510MHz).

c. adjust the VR1. let the frequency deviation is lower than 100Hz.

2. High power Adjust

a. setup the equipment as follow.

Setup:

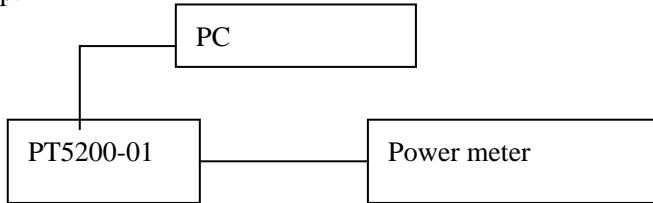

b. running Software:KSP5200V3.04, set the power to 3.5W

c. adjust the software, let the power deviation is lower than 0.1W.