

MINI THUNDER SPIN 4x4

 
 
Instruction Manual

Feature/Function: Full function radio control pick up truck, 4-wheel drive, Light up wheels with built-in generator in each wheel to power the LED lights when the car is in motion.
Batteries Required: 4 x AA for car, 1 x 9v for transmitter (batteries not included, Alkaline batteries recommended)

BATTERY INSTALLATION:

TRANSMITTER


1. Put the ON/OFF switch on the transmitter to OFF.
2. Press and slide to open the battery compartment cover by following the direction of arrow shown.
3. Place a 9v battery in the compartment according to the polarity symbols (+ and -) marked inside.
4. Replace the cover and snap it shut.

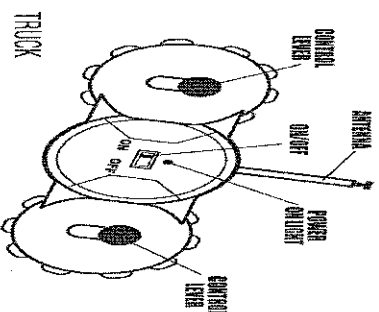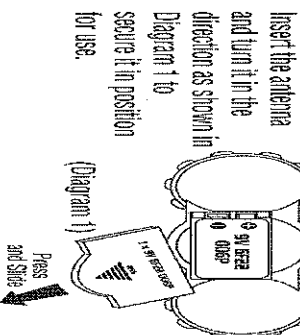

TRUCK


Note: Remove the "Try Me" batteries in battery compartment before installation of new batteries for use.

 1. Slide ON/OFF switch on the bottom of truck to OFF.
2. Press and slide the cover to open, then place the AA batteries into the compartment according to the polarity symbols (+ and -) marked inside. (See diagram 3)
3. Replace the cover.
4. Do not mix old and new batteries.
5. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

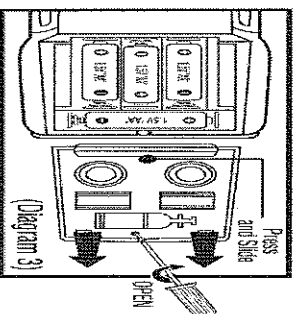


OPERATING THE TRUCK:

 1. Slide the ON/OFF switch of transmitter to ON.
2. Slide the ON/OFF switch on the bottom of truck to ON.
3. Use the transmitter's control levers as follows. (See diagram 4)

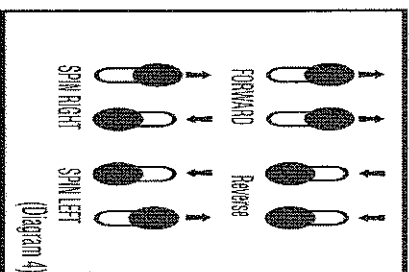

 - Push both levers forward to move forward (F)
- Pull both levers back to move backwards (B)
- Release both levers to stop
- Push the left lever forward and pull the right lever back to move spin right (SR)
- Push the right lever forward and pull the left lever back to move spin left (SL)

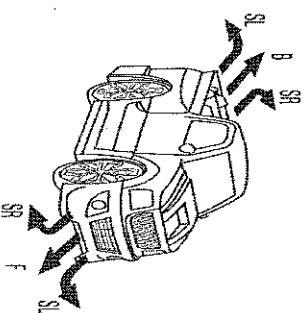

Caution: If the truck gets stuck under an object, immediately release the control levers on the transmitter, then retrieve the truck.

The wheels will light up when the truck is in motion. The LED lights are powered by built-in generators in each wheel.

4. When you finish playing, slide the ON/OFF switches of transmitter and truck to OFF.

HELPFUL HINTS AND CARE:

- When the transmitter's range decreases, replace the 9v battery.
 - When the truck moves slowly, or does not move at all, replace the AA batteries.
 - If you do not plan to use the toy for a long time, remove the batteries from the transmitter and truck.
 - Never drive the truck on a wet floor, on sand, or in mud, rain, or snow. These can damage it.
 - If someone uses a CB nearby, it might interfere with control of the truck. If this happens, move the truck and transmitter away from the CB.
 - You cannot operate your truck near devices with transmitters that use the same frequency (27MHz or 49MHz).
- Check the package to see which frequency your truck uses.

Modifying or tampering with the truck or the transmitter's internal components can cause a malfunction and void your FCC authorization to operate them.

THE FCC WANTS YOU TO KNOW:

Your truck or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your truck or transmitter is causing the interference, turn off your truck and release the transmitter's control levers. If the interference goes away, your truck or transmitter is the cause.

Try to eliminate the interference by:

- Moving your truck and transmitter away from the TV or radio.

If you cannot eliminate the interference, the FCC requires that you stop using your truck.

