



RADIO CONTROL ROBOTIC INSECTS

Instruction Manual

Feature/Function: 3 function radio control mechanical insects with light and sound effects. Goes forward, stop and backward.

Batteries Required: 3 x AA for insect, 2 x AA for transmitter
(Batteries not included. Alkaline batteries recommended)

BATTERY INSTALLATION:

TRANSMITTER

1. Unscrew and open the battery compartment cover by following the direction of arrow shown. (See diagram 1)
2. Place 2 x AA batteries in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and fix it with the screw.

ROBOTIC INSECTS

Note: Remove the "Try Me" batteries in battery compartment before installation of new batteries for use.

1. Slide ON/OFF switch on the bottom of insect to OFF.
2. Unscrew and open the cover, then place 3 x AA batteries into the compartment according to the polarity symbols (+ and -) marked inside. (See diagram 2)
3. Replace the cover and fix it with the screw.

OPERATING THE ROBOTIC INSECTS

1. Slide the ON/OFF switch on the bottom of insect to ON.
2. Use the transmitter's control buttons as shown in diagram 3:
 - Press forward button to move forward
 - Press backward button to move backwards
 - Release both buttons to stop

NOTE: the robotic insects will move with sound and light.

3. When you finish playing, slide the ON/OFF switch of insect to OFF.

HELPFUL HINTS AND CARE:

- Batteries are for demonstration purposes only. They should be replaced upon purchase for optimal performance.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- When the transmitter's range decreases, replace the AA batteries.
- When the insect moves slowly, or does not move at all, replace the AA batteries.
- If you do not plan to use the toy for a long time, remove the batteries from the transmitter and insect.
- Never play with the toy on a wet floor, on sand, or in mud, rain, or snow. These can damage it.
- If someone uses a CB nearby, it might interfere with control of the toy. If this happens, move the toy and transmitter away from the CB.
- You cannot operate your toy near devices with transmitters that use the same frequency, (27MHz or 49MHz). Check the package to see which frequency your toy uses. Modifying or tampering with the toy or the transmitter's internal components can cause a malfunction and void your FCC authorization to operate them.

THE FCC WANTS YOU TO KNOW:

Your insect or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your insect or transmitter is causing the interference, turn off your insect and release the transmitter's control levers. If the interference goes away, your insect or transmitter is the cause.

 
 
 
Try to eliminate the interference by :

- Moving your insect and transmitter away from the TV or radio.

If you cannot eliminate the interference, the FCC requires that you stop using your insect.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

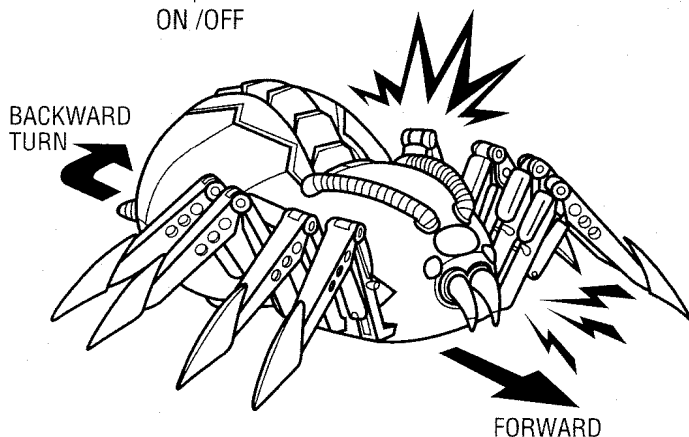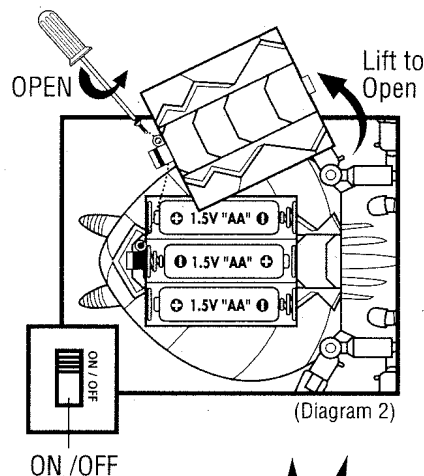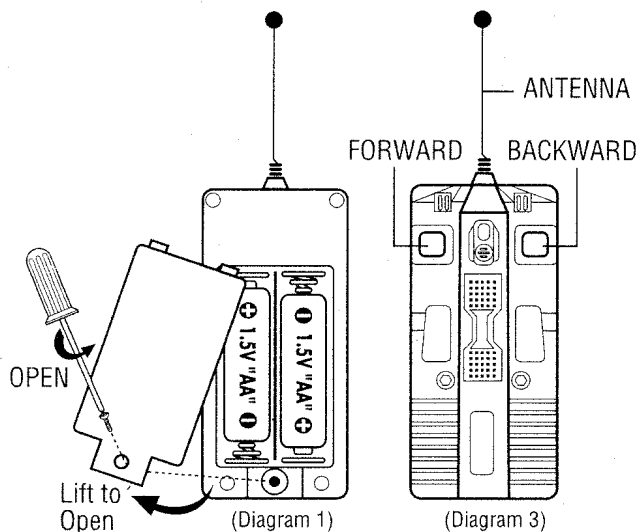

Warning; Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KR-1273
ROBONATION is a mark of Geoffrey, Inc.
© Geoffrey, Inc.
Distributed by:
Toys "R" Us, Inc., Wayne, NJ 07470
Imported by:
Toys "R" Us (Australia) PTY Ltd.
Regents Park NSW 2143 Australia
Made in China

NOT INCLUDED

