

Crime Doesn't Pay with ESP

In San Diego, CA, a lone robber enters a bank, taking off with almost \$2,000. The teller included the ESP tracking device in with the other cash. As the robber flees, the ESP system automatically notifies local law enforcement and officers are on their way. Within minutes, the suspect is apprehended and police make a full recovery of the money.

ESP – it works!

About 3SI

- 3SI Security Systems has helped protect cash at financial institutions for more than 38 years.
- 3SI security products provide confidence to tellers and branch staff in the event of a robbery.
- Currently there are more than 170,000 cash security devices installed worldwide!
- 3SI's cash security products have helped recover more than \$95 million dollars worldwide!
- 3SI's industry leading customer service group is available toll free at 800-523-1430 to assist you.



486 Thomas Jones Way, Exton, PA 19341
800-523-1430 • 610-280-2000
fax: 610-280-2077 • www.3sicompany.com

Revised 2/10

60-0800-020

Q&A - What's happening?

Q: How can I tell if the ESP device is active?


A: Whenever the device is removed from the base plate, it automatically turns on and begins silently tracking.

Q: How are the police notified about an active device?

A: As soon as the ESP device is lifted from the base plate, it begins to transmit information to dispatch and police indicating the device's location.

Q: Is there anything I need to do to maintain the ESP device?

A: You only need to remember to keep the device on its base plate at all times, unless handing it out with the other cash during a robbery.

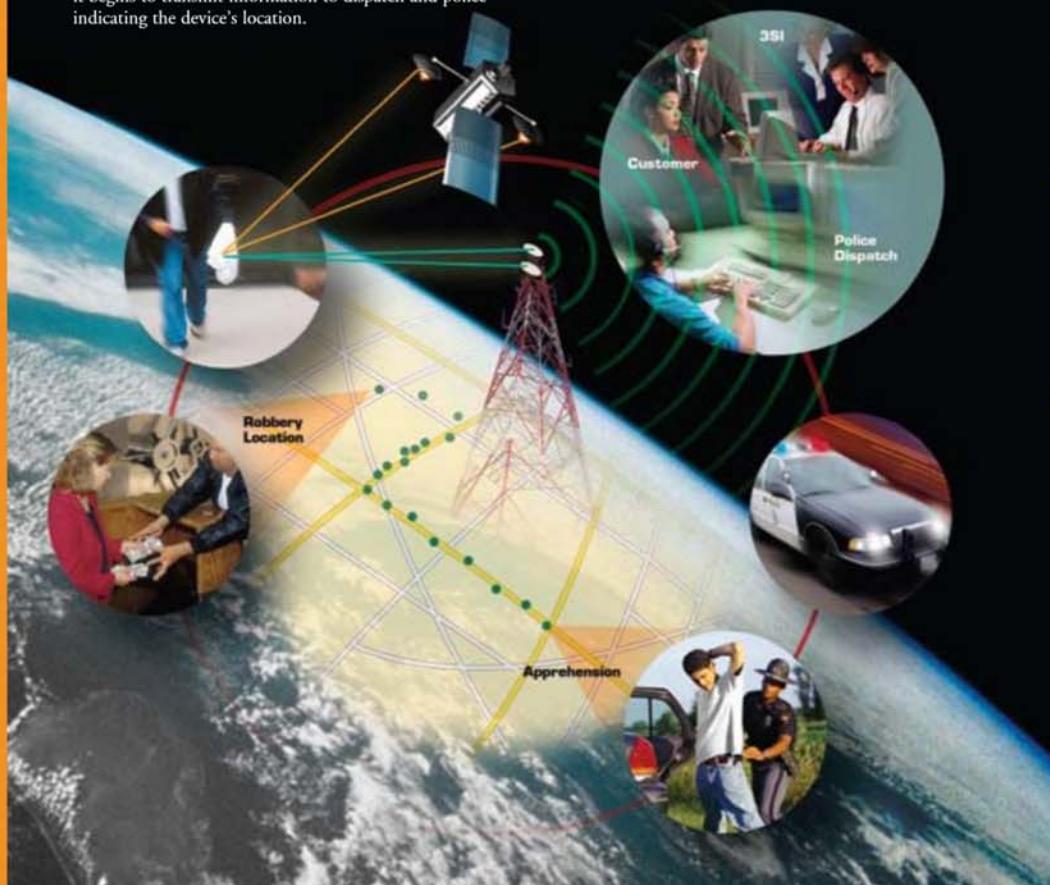

ESP®
User
Instructions

Your location has the latest innovation in security – **ESP®**, Electronic Satellite Pursuit. Financial institutions use **ESP** as an apprehension and recovery tool to help combat bank robberies.



User Instructions

Keep your ESP device on its base plate at all times!



- The ESP device rests in the teller's cash drawer or the vault on a base plate.
- This base plate keeps the device turned off and preserves battery life.
- If the device accidentally moves off the plate, it will turn on and begin to notify police.
- To turn the device off, simply place it back on the base plate.
- Never handle or remove the ESP device from the base plate unless giving it to a robber or directed to do so by your Supervisor or Security Officer.
- Always transport the ESP device on a base plate in the cash drawer or on a spare base plate.

Never hand strapped cash to a customer. It could be an ESP device.

If You Are Robbed

Simply remove the device from its base plate and hand it out with the other cash.

The device will automatically turn on, notify police and begin silently tracking the robber.

It's that easy!



Maintenance Information

Changing the Cash Strap

A new cash strap must be attached while keeping the device in the cash drawer and on the base plate. It is important to keep the ESP device on the base plate at all times because the plate prevents the device from turning on and notifying police.



STEP 1:

Gently slide the new cash strap (printed side down) between the device and the base. The device can be lifted slightly to do this.



STEP 2:

With the device remaining on the plate in the cash drawer, remove the old strap by tearing it and sliding it out.



STEP 3:

Slide the new cash strap until it is visible on each side of the device. Grasp each end of the new strap.



STEP 4:

Bring the new cash strap up around the device and gently attach the two ends.



3SI recommends that you DO NOT stamp the secure strap on the device.

Transporting the ESP Device

If the cash drawer is placed in a vault at night, the device must remain on the base plate in the drawer or tray. Always transport and store the drawer in a flat, horizontal position, so the device cannot tilt or fall off its base plate.

Battery Maintenance

The battery is replaced annually by 3SI. No testing or maintenance is required by you.