

**A. CLOCK FEATURES**


- Large digital display
- Blue back light
- Alarm with repeating snooze
- PM and alarm on indicators
- 4 step ascending alarm

**B. WALKIE TALKIE FEATURES**

- Extendable antenna
- Volume control
- Signal button
- 200 ft. range

**C. BATTERY INFORMATION**

This product requires one button cell battery (AG 13) and one 9 volt battery for operation. The button cell battery operates the alarm clock and the 9 volt battery operates the walkie talkie. To install the batteries first remove the battery door cover. You will need a small Phillips head screw driver to remove the battery door screw. After releasing the screw slide the battery door in the direction of the arrow and remove. Insert a new 9 volt battery by snapping the connectors to the battery. A button cell battery is included. Replace the battery door and secure with the screw.

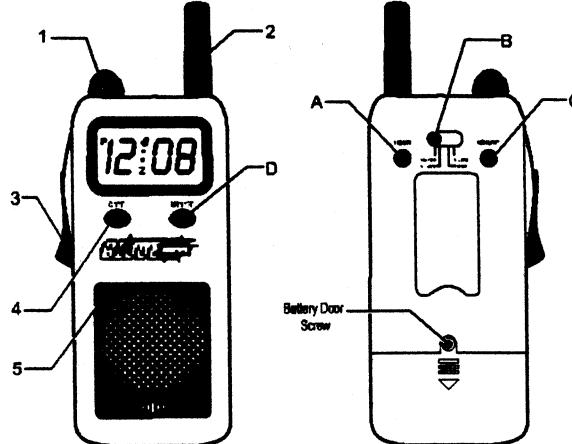

WHEN REPLACING BATTERIES PLEASE DISCARD OLD BATTERIES IN A SAFE AND PROPER MANNER.

**D. SETTING THE TIME**

1. Move the slide switch (B) to the time position.
2. Press the Hour button (A) to your desired hour. If your desired hour is PM time, a "P" indicator will appear on the top left part of the display. For AM setting the "P" will not appear.
3. Press the Minutes button (C) to your desired minutes.

**E. SETTING THE ALARM**

1. Move the slide switch (B) to the alarm position.
2. Press the Hour button (A) to your desired hour. If your desired hour is PM time, a "P" indicator will appear on the top left part of the display. For AM alarm setting the "P" will not appear.
3. Press the Minutes button (C) to your desired minutes.

**F. ACTIVATING THE ALARM AND SNOOZE**

1. After setting the alarm, move the slide switch (B) to the Alarm On position. A bell icon "RING" will appear in the middle of the display.
2. The alarm may be shut off by pressing the Snooze button (D). By pressing the Snooze button the alarm sound will stop then automatically sound again 8 minutes later. This snooze function may be repeated over and over.
3. To completely stop the alarm from sounding move the slide switch (B) to the alarm off position.

**G. DISPLAY LIGHT**

To activate the display light press the Snooze / Light button (D).

**H. WALKIE TALKIE OPERATION**

1. Turn the ON/OFF Volume Control knob (1) clockwise to activate the walkie talkie. The volume control knob may be adjusted to change the level of sound.
2. Extend the Antenna (2) to its furthest position.
3. Press down the Talk button (3) and speak into the speaker (5).
4. Release the Talk button (3) to listen.
5. To send a Morse Code or your private signal press the Signal button (4).
6. The maximum operating distance between these walkie talkies is 150 feet. Weather, building structures, and other appliances may affect the transmission and reception.
7. When not using the walkie talkie turn the ON/OFF Volume Control knob (1) to the OFF position to conserve battery power.

**LIMITED WARRANTY**

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of two years from date of sale to the customer. The manufacturer's obligation shall be limited to repairing or replacing F.O.B. Warren, MI 48091, any part of the product which is defective. Warranty will not apply to defects resulting from abuse, accidents, or misuse. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Manufactured and distributed under license by:  
Advance Clock Co., Ltd.  
25800 Sherwood Warren, MI 48091

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE (1):** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE (2):** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Licensed by:



HASBRO and its logo, G.I. Joe and all related characters are trademarks of Hasbro and are used with permission.  
© 2003 Hasbro. All Rights Reserved.

giJoe.com  
FOR NEW PRODUCTS AND OFFERS