

**ZTE N285**  
**Mobile Phone**  
**User Manual**

# **LEGAL INFORMATION**

**Copyright © 2011 by ZTE CORPORATION**

**All Rights Reserved.**

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

**Version No. : R1.0**

**Edition Time : 20110518**

**Manual No. : 079584503176**

# Table of Contents

SECURITY .....	4	SETTINGS.....	33
SAFETY PRECAUTIONS.....	4	CONNECTIVITY .....	35
LIMITATION OF LIABILITY .....	15	ORGANIZER .....	37
YOUR PHONE .....	16	FILE MANAGER .....	38
TURNING ON / OFF OR WAKING UP YOUR PHONE .....	17	FUN&GAMES.....	38
LOCKING / UNLOCKING THE KEYPAD	17	CAMERA .....	39
USING THE TOUCHSCREEN.....	18	VIDEO RECORDER.....	39
STATUS BAR ICONS .....	18	MULTIMEDIA .....	40
ADJUSTING THE VOLUME.....	19	SERVICES.....	42
BATTERY .....	19		
INSERTING THE SIM CARD.....	22		
INSERTING THE MICROSD CARD .....	24		
WRITING TEXT.....	24		
PHONEBOOK.....	26		
MAKING AND RECEIVING CALLS .....	27		
CALL CENTER .....	28		
SENDING AND RECEIVING MESSAGES .....	30		
USER PROFILES .....	32		

## Security

- To protect your mobile phone from illegal usage, take the following security measures:
  - Set the PIN codes of the SIM card.
  - Set the phone lock code.
  - Set call restrictions.

## Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

### Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as when holding a standard wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or

playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)

- Keep the phone out of reach of small children. The phone may cause injury if used as a toy.

### **Precautions While Driving**

- Please pay attention to traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use the hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if required.

### **Precautions for Medical Devices and Facilities**

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing-aid manufacturer to discuss

alternatives.

- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF (radio frequency) energy.
- In areas with special requirements, such as hospitals or health care facilities, please pay attention to the restrictions on the use of your mobile phone. Switch off your phone if required.

### **Mobile Phone**

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause injury and may violate related local regulations for telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce an electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TVs, telephones, radios and personal computers can cause interference.
- Do not expose your mobile phone to direct sunlight or store in hot places.

High temperatures can shorten the life of electronic devices.

- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can damage internal circuit boards.
- Do not connect the phone with any incompatible accessory or enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without the battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.
- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.

- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

### **Precautions for Potentially Explosive Atmospheres**

- Switch off your phone prior to entering any area with potentially explosive environments, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Sparks in potentially explosive environments can cause explosions or fire, resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices”. Obey all signs and instructions.



## **Precautions for Electronic Devices**

- Some electronic devices are susceptible to electromagnetic interference sent by the mobile phone if inadequately shielded, such as the electronic systems of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

## **Safety and General Use in Vehicles**

- Safety airbags, brakes, speed control systems and oil eject systems should not be affected by wireless transmissions. If you do meet any of the above problems, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and in the locations where the use of two-way radio is also prohibited.

## **Aircraft Safety**

- Please turn off your mobile phone before take off. In order to protect the aeroplane's communication system from interference, it is forbidden to use mobile phones in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

- If the mobile phone has the automatic timing power-on feature, please check your alarm setting to make sure that your phone will not be automatically turned on during the flight.

## **Battery Use**

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store the battery in hot areas or throw it into a fire. Otherwise, it may cause an explosion.
- Do not disassemble or refit the battery. Otherwise, it may cause liquid leakage, overheating, explosions and ignition of the battery.
- Please store the battery in a cool dry place if you do not use it for a long period.
- The battery can be recharged many times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of ageing.
- Return the worn-out battery to the provider or dispose of it in accordance with local environmental regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone

manufacturer. Using unauthorized batteries may affect your handset performance or may cause danger of explosion, etc.

**Warning:** If the battery is damaged, do not discharge it. If leakage does come into contact with eyes or skin, wash the affected areas thoroughly in clean water and consult a doctor.

## **FCC Compliance**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### **Health and safety information**

#### **Radio Frequency (RF) Energy**

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while

operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.450W/kg and when worn on the body, as described in this user guide, is 0.960W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: Q78-N285

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is

 
switched on.

## **Limitation of Liability**

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

**Note:** The pictures and icons shown in the manual are just schematic drawings for demonstration of functions. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because the handset function has been updated, please refer to the follow-up public information from ZTE.

# Your phone

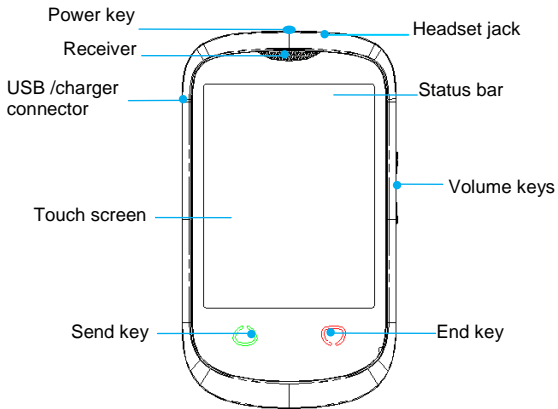



## Turning On / Off or waking up your phone

Hold the **Power key** to turn your phone on or off.

In **Settings**→**Phone settings**→**LCD Backlight**, set the LCD backlight brightness and time. If the phone is not operated within this time, the screen will turn black.

Press the **Power key**, **Volume keys** to wake up your phone.

## Locking / unlocking the keypad

In **Settings**→**Security settings**→**Auto keypad lock**, set the auto keypad lock time. If the phone is not operated within this time in the standby mode, the keypad will be locked. You can press the **Power key** to lock the keypad directly in the standby mode. You can also press **End key** in the standby mode, then select **Yes** to lock the keypad.

To unlock the keypad, drag the key icon in the bottom left corner from left to right until the key icon get to the lock icon.















**Note:** In this User Manual, “press a key” means to press the key and release it immediately, while “hold a key” means to press the key for at least two seconds and then release it. Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

## Using the touchscreen

Your phone supports touch screen functionality.

- Tap any application to open it.
- Drag up or down to scroll.

## Status bar icons

Indicator	What it means	Indicator	What it means
	Signal strength		New SMS, blinking when message box is full
	GPRS		New MMS
	Roaming		Missed call
	Bluetooth		Call forward
	General		Alarm clock set
	Outdoor		Keypad unlocked
	Meeting		Battery status

## **Adjusting the volume**

 
When you're on the phone or listening to songs, watching movies, or using other media, you can use the Volume keys on the right side of your phone to adjust the audio volume. Otherwise, the keys control the volume for the ringer, and other sound effects.

## **Battery**


The lithium ion battery of the mobile phone can be immediately used after unpacking.

### **Installing the Battery**


1. Pull the battery cover from the notch on the bottom and remove the cover.
2. Insert the battery by aligning the gold-coloured contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.

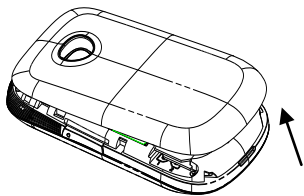

Remove the battery cover

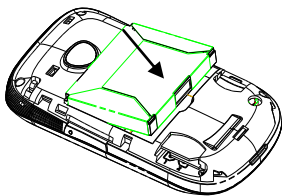 


Push down the battery

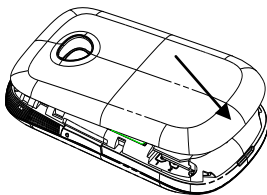 


Replace the battery cover

## Removing the Battery

 1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.

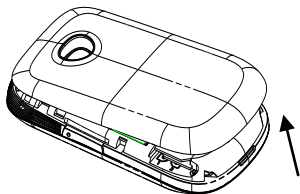

Remove the battery cover

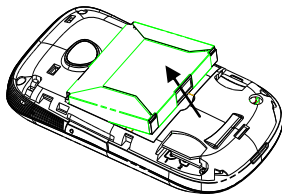 


Pull up the battery

## Charging the Battery

 Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the left side of your mobile phone as shown in the diagram.

2. Connect the other end of the travel adapter to the mains socket.
3. When you charge the battery, the battery charging indicator appears.
4. When the battery is fully charged, disconnect the charger.

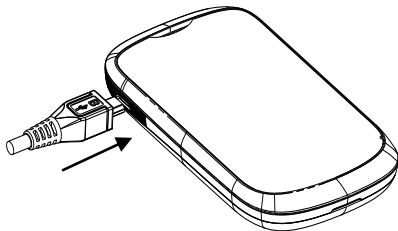


## **Inserting the SIM Card**

You want a mobile phone that is sophisticated yet easy to use and here it is in your hands! Naturally you are eager to start using it, but first you need to insert the SIM card.

Insert the SIM card as follows:

- Make sure that the phone is switched off and the charger is disconnected from the phone.
- Turn the phone over and remove the battery cover.

 - Remove the battery if it is already installed.
- Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder. You can follow the diagrams below.

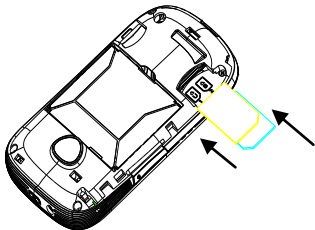

- Replace the battery first.
- Replace the battery cover.

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.


## Inserting the microSD card

 You can use a microSD card to expand the storage of the phone. You can store or copy files such as videos, photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

microSD Logo is a trademark.

You can follow the diagram below to insert the microSD card.

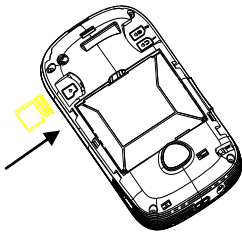

**Note:** microSD is a trademark of SD Card Association.

## Writing text



Your phone provides two sets of on-screen keyboards. Tap a text field, such as in a note or new contact, to bring up the keyboard.

- Using the Full Keyboard


 
 





Notes:

You cannot use predictive word input with the full keyboard.

- ◆ Tap to select input method.
  - ◆ Tap to change to Condensed Keyboard.
  - ◆ Tap to select symbols and digits.
  - ◆ Tap to delete text.
  - ◆ Tap to change to capital letter mode.
  - ◆ Tap to input space.
  - ◆ Tap to start a new paragraph.
- Using the Condensed Keyboard
- You can enter letters, words, numbers, symbols and emoticons with the condensed keyboard.

- ◆ Tap to select input method.

- ◆ Tap  to change to Full Keyboard.
- ◆ Tap  to select symbols.
- ◆ Tap  to delete text.
- ◆ Tap  to change to capital letter mode and  to select digits.
- ◆ Tap  to input space.

## Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Phonebook**. You can then access these numbers quickly and easily.

- Add new contact

Go to **Phonebook**→**Add new contact**.

Edit the information and save it.

- Save number to Phonebook

You can also save a number right after you've made or received a phone call or a message from someone who is not yet in your **Phonebook** list.

- Quick search

To quickly search for the contacts, tap the input box, and then enter the first letter of your desired contact on the screen.

- Delete one record

To delete someone from your **Phonebook** list, first select the name, then select **Options**→**Delete**.

- Copy or move records

You can copy or move the records to SIM or to phone. Select **Options**→**Copy** or **Move**.

- Set preferred storage

Select **Options**→ **Phonebook settings**→**Preferred storage** and then select **SIM, Phone** or **All**.

- View memory status

Select **Options**→**Phonebook settings**→**Memory status** to check the memory status of both phone and SIM.

## **Making and receiving calls**

- Basic way to make a call

In the standby mode select Dialer icon. Tap the numeric buttons to input the number and press the **Send key** to dial.

- Dial from the Phonebook

Go to **Menu**→**Phonebook**. Find the name of the person you want to call, and press the **Send key**.

- Make an emergency call

You can make emergency calls without the SIM card inserted so long as you are in an area with network coverage.

- Answer a call

Press the **Send key**.

- End a call

Press the **End key**.

- Use call options

During a call, you can unlock the screen then select **Options** to enter the call options.

You can use the speakerphone by tapping the **H-free** button.

You can put a call on hold, make a conference call, and use applications such as Messaging & Phonebook while you're on a call.

## Call center

Go to **Call center**.

- Call history

Missed calls, Dialed calls and Received calls are saved in **Call history**. If the records are full, the earliest saved records will be deleted automatically.

Also, you can view call timers, text msg. counter and GPRS counter in **Call history**.

- Call settings
  - ◆ Caller ID: You can select to Set by network, Hide ID or Send ID.
  - ◆ Call waiting: After this function is activated, the system will inform you if there is another incoming call when you are in call. Please contact your network provider for details.
  - ◆ Call divert: The call divert service enables you to divert an incoming call from a service to a specified telephone number in preset conditions. You can contact the network provider to activate this service. You can set the call divert service so that voice calls and data calls are diverted to a preset number under different conditions.
  - ◆ Call barring: You can bar outgoing and incoming calls.
  - ◆ Line switching: Switch the call line.
  - ◆ Advance settings: You can set auto redial, call time display and call time reminder.

## Sending and receiving messages

- Write a new message

You can use your mobile phone to send and receive messages.

1. Go to **Messaging**→**Write message**.
  2. Write your message. For more information on input method, see section “Writing text”. The default message type is SMS.
  3. If you want to change to MMS, you can press **Options** and choose **Switch to MMS**; or you can press **Options** and choose **Add picture**, **Add sound**, **Add video** or **Add subject** to directly insert multimedia contents to the message and it will be switched to MMS automatically.
  4. You can select **Options**→**Slide options** to select to add a new slide. And you can select **Options**→**Advanced** to insert an attachment, contact number, contact name or bookmark.
  5. When you finish writing, press **Options**→**Send to** to enter recipient or add from **Phonebook**. If you are writing an MMS, after adding recipients, then you can select **Options**→**Change to Cc** or **Change to Bcc** to change the current contact to Cc or Bcc.
  6. Select **Options**→**Send** to send the message out. If you want to save the message as a draft, select **Options**→**Save to Drafts**.
- View messages

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

1. Press **View** to view the message.
2. While the message is open, use **Options** to reply, delete, or forward the message. You can also call back the sender.

You can view the message boxes in the Messaging interface.

- ◆ Select **Inbox** to view received messages.
  - ◆ Select **Drafts** to view unsent messages.
  - ◆ Select **Outbox** to view messages that failed to send.
  - ◆ Select **Sent messages** to view messages been successfully sent and saved.
  - ◆ Select **Archive** to view archive messages.
  - ◆ Select **Broadcast message** to view broadcast messages.
  - ◆ In **Voicemail server** you can edit your voicemail server and call voicemail.
- Message settings

Go to **Messaging**→**Message settings**→**Text message**.

- ◆ Profile settings: This is automatically set by the service provider, but please contact us if this is not available.
- ◆ Common settings: You can set Delivery report and Reply path on or off.

You can select to save sent messages or not.

- ◆ Memory status: View the SIM and phone memory status.
- ◆ Preferred storage: Set the preferred storage to SIM or Phone.

Go to **Messaging**→**Message settings**→**Multimedia message**.

- ◆ Profiles: You can activate a profile or add new ones.
- ◆ Common settings: In **Compose**, you can set Slide time, Creation mode, Picture resizing, Auto signature and Signature. In **Sending**, you can set Validity period, Delivery report, Read report, Priority, Delivery time, and Send and save. In **Retrieval**, you can set Home network, Roaming, Filters, Read report and Delivery report. In **Preferred storage**, you can set the preferred storage to Phone or microSD card. In **Memory status**, you can view memory status.

## User profiles

Go to **User profiles**. You can select your preferred profile in this menu. The profile options are: General, Meeting, Outdoor, Indoor, Silent, Headset and Bluetooth. The default settings for each individual profile are preset at the factory. You can change them in the **Options**→**Customize** menu.

- Tone settings: Set the tone for various conditions.
- Volume: Set the Ringtone and Key tone.
- Alert type: Choose among four modes based on ring and vibration.



- Ring type: Choose among Single, Repeat and Ascending.
- Extra tone: Let the phone alert when Warning, Error, Camp on or Connect.

**Note:** The Headset mode can only be activated with the headset connected. And the Bluetooth mode can only be activated when the Bluetooth headset is connected.

## Settings

You can adjust various settings of your phone. Go to **Settings**.

- Dual SIM settings

In this menu, you can select Dual SIM open, Only SIM1 open, Only SIM2 open, Flight mode. If you select Dual SIM open, the phone will remind you of choosing SIM1 or SIM2 card in some interfaces.

**Note:** In Flight mode ,you can only use local program in your phone and all the wireless functions will be turned off.

- Pen calibration

If you feel that the contact point of your touch screen is not accurately positioned, you can fix it by this function.

Complete the calibration operation according to the system prompts. Tap the centre of the cross until the calibration is completed.

- Phone settings
  - ◆ Time and date: You can set home city, time/date and format.
  - ◆ Schedule power on/off: Set auto power on and off time.
  - ◆ Language: You can set the language.
  - ◆ Display: You can set Wallpaper in this menu.
  - ◆ LCD Backlight: You can set the LCD backlight brightness and time.

- Network settings

In this menu, you can set **Network selection** to be **Automatic/Manual** to select the network service provider according to requests. If you have selected a service provider manually, you have to manually select again or return to the **Automatic** option to select the service provider when you switch to the SIM card of another network.

- Security settings

- ◆ SIM lock: If SIM Lock is currently set **Off**, select **On**, then input a PIN code to turn it on. You need to input the correct PIN code to unlock your SIM card when you turn on your mobile phone next time.

**Note:** The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact the network provider.

- ◆ Phone lock: Phone lock can prevent your mobile phone from unauthorized

use. Select **On/Off** to enable or disable the handset lock protection.

- ◆ Auto keypad lock: Select a time for auto keypad lock, and the phone will automatically lock the keypad in the standby mode to prevent unintended touch.
- ◆ Change password: You can change the phone password here.

**Note:** You may be required to input the phone lock code in some of the security setting interfaces. The default lock code is 1234.

- Restore factory settings

You need to input the correct phone lock password to restore to the factory settings.

## Connectivity

Go to **Connectivity**.

- Bluetooth: The Bluetooth devices must be paired before the communication is performed.
  - ◆ Turn on or off the Bluetooth on your phone  
Go to **Power**, you can turn on or off Bluetooth.
  - ◆ Make your phone visible  
Go to **Bluetooth**→**Visibility**, you can choose to be visible or not.  
When your phone is visible, and the Bluetooth is turned on, all other Bluetooth-enabled devices within range can detect your phone.

- ◆ Create a Bluetooth partnership
  1. Go to **Bluetooth**→**My Device**→**Search new device** to search other Bluetooth-enabled devices and list them.
  2. Select the desired device name in the list and press **Pair**.
  3. Enter a passcode (1 up to 16 characters), and then press **OK**. When the opposite party enters the same passcode, the connection will be established. Sometimes the devices can be paired automatically without entering password.

- ◆ Beam information using Bluetooth

After the Bluetooth partnership is established, you can beam information, such as calendar items, as well as files from your phone to another Bluetooth-enabled device.

For example, if you want to send a calendar item to the opposite party, find that item, press **Options**→**Send vCalendar**→**Via Bluetooth**, and then select the device name. If you want to send a multimedia file, find the file from the media folder and then press **Options**→**Send**→**Via Bluetooth**, and then select the device name.

- ◆ Connect a Bluetooth hands-free or stereo headset

For hands-free phone conversations or to listen to music, you can use a Bluetooth hands-free or stereo headset.

Go to **Bluetooth**→**Search audio device** to search for the Bluetooth

hands-free or stereo headset.

- Data account: You can add and view your GSM and GPRS data account.

## Organizer

Go to **Organizer**.

- Calendar

Enter **Calendar**, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.

You can click the dates, browse the dates, and click the direction arrows on the screen to switch the year and month; the information on the screen will also change consequently.

- Tasks

You can add tasks.

- Alarm

You can view, and edit the alarm clock settings. You can also enable or disable the alarms. By tapping **Edit**, you can set the corresponding features of the alarm according to instructions.

- World clock

You can view the time in different cities.

- Calculator

You can perform simple calculations. Tap digit key to enter the number. Tap operational character key to select operational character. Tap “=” to get the result.

**Note:** This calculator has limited accuracy and rounding errors may occur especially in long division.

## **File manager**

Go to **File manager**. You can check all the folders in the phone or microSD card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

**Note:** When you select **Format**, the data will be lost, so please be careful with this function.

## **Fun&Games**

Go to **Fun&Games**.

Java MIDlets are Java™-based applications that can run on your phones. Java allows you to download Java-based applications, such as games and tools that are specifically designed for mobile phones. Java gives you the flexibility of installing and managing additional Java applications from the Internet.

# Camera

Go to **Camera**→**Camera**.

- Take a Photo

Aim the camera at the object and then tap the icon in the middle of the bottom on the screen to take the shot.

Before capturing a photo, adjust brightness and zoom to the right size.

- Configure your camera

Press the icon on the bottom left corner to configure your camera:

- ◆ Photos: Enter **Image viewer** to view the photos you've just taken.
- ◆ Camera settings: Set Shutter sound, EV, Night mode, Contrast, Anti-flicker, Delay timer and Cont. shot.
- ◆ Image settings: Set Image size and Image quality.
- ◆ White balance: Select Auto, Daylight, Tungsten, etc.
- ◆ Scene mode: Select Auto or Night.
- ◆ Effect settings: Select Normal, Grayscale, Sepia, etc.
- ◆ Storage: Select Phone or microSD card.
- ◆ Restore default: Restore to factory default settings.

# Video recorder

Before using the video recorder function, you must insert the microSD card, otherwise video recorder function can't be used.

#### 1. Take a video

Tap the icon in the middle of the bottom on the screen to start shooting. You can tap this icon to pause or restart shooting. Tap the icon on the bottom right corner to finish recording.

Before recording a video, adjust brightness and zoom to the right size.

#### 2. Configure your video recorder

Press the icon on the bottom left corner to configure your video recorder:

- ◆ Camcorder settings: Set EV, Night mode and Anti-flicker.
- ◆ Video settings: Set Video quality.
- ◆ White balance: Select Auto, Daylight, Tungsten, etc.
- ◆ Effect settings: Select Normal, Grayscale, Sepia, etc.
- ◆ Restore default: Restore to default factory settings.

## Multimedia

Go to **Multimedia**.

- Image viewer

The images you want to view in Image viewer must be put in the **..Fotos** folder in the phone or microSD card, and in **Options**→**Storage**, the storage must be set to phone or microSD card correspondingly.



You can select an image and view it.

Image viewer supports: jpeg, jpg, bmp, gif, png.

- Media player

You can play the audio and videos in your phone or the microSD card. To create a playlist, in **My playlists**, select **Options**→**New**, and then set the list name. select **Options**→**Open**→**Options**→**Add**, and select the file, then the file will be added into the playlist.

Media player supports: AMR, WAV, MP3, MIDI, Mpeg4, 3GP.

- FM radio

With the radio, you can search for radio channels and listen to them. When you receive an incoming call while listening to the radio, the radio will pause. After you finish the call, the radio will start working again. In the FM radio interface, press the icon on the bottom left corner to enter the submenu.

- ◆ Channel list: Edit and save radio channels.
- ◆ Manual input: Manually input a channel.
- ◆ Auto search: Automatically searches for channels.
- ◆ Settings: You can turn on Loudspeaker and set Channel effect.

**Note:** The quality of the radio broadcast depends on the coverage of the radio station in that particular area. The wired headset works as an antenna, so always connect the headset when using the radio.

# Services

Go to **Services**.

Services allows you to view internet content. In **Services**, you can use the STK and Internet service, and you can select **Licence manager** to manage the licences.

- STK

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

- Internet service

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. **Internet service** lets you get information about news, weather forecasts and more.

Go to **Services**→**Internet service**. You can perform the following operations:

- ◆ Homepage: Homepage is a WAP site you set in **Settings**→**Profiles**.
- ◆ Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options**→**Go to** to load the website.
- ◆ Input address: Input a URL and press **Options**→**Done** to visit the site.
- ◆ Recent pages: Display the pages you've visited recently. Select an

item and choose **Options**→**Go to** to visit the page again.

- ◆ Settings: You can set Profiles, Browser options, Preferences or Security settings.
- Licence manager
  - ◆ Licence list: Display the list of Licences.
  - ◆ Status: Check the version and time.
  - ◆ Advance: Select **Sweep** to remove useless licences and reboot your phone.