
Table of Contents

Table of Contents	1
1 Outlook Description.....	2
2 Power Button Usage	3
3 Touch-Screen Navigation	3
4 Using microSD Card.....	3
5 Getting Started	4
6 Launcher	5
7 Screen Lock	6
8 Pre-loaded Applications.....	6
9 Application Management.....	9
10 Message	10
11 People	11
12 CLOCK.....	12
13 Play Store.....	13
14 BROWSER.....	15
15 CALENDAR.....	16
16 CAMERA	20
17 CALCULATOR	21
18 EMAIL.....	21
19 EXPLORER.....	24
20 MUSIC.....	25
21 Video	27
22 GALLERY.....	29
23 Gmail	30
24 Maps, Places, and Latitude	33
25 News and Weather	37
26 Books	39
27 Wi-Fi.....	39
28 ACCOUNTS.....	41
29 Settings	43

1 Outlook Description



2 Power Button Usage

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → **tap** Power off → tap **OK**

Sleep Mode On/Off: Press & release the power button quickly to turn sleep mode on and off.

3 Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications.

Throughout the User Guide, you are instructed to use the following tap or touch navigation methods:

Tap: quick tap & release on an item on the screen.

Finger slide: touch & slide your finger across the screen and then release.

Touch & hold: touch and hold in place approx 2 seconds, and then release to display an options window.

Note:

To avoid scratching or crushing, do not place objects on the touch screen surface.

4 Using microSD Card

- Insert your card into the microSD slot until it clicks into place. When ready for use, it's OK.
- Remove microSD Card
- Close all applications or documents which have been opened on the card. Press Settings → Storage → SD Card → Unmount Storage → OK.

Note:

Don't insert and remove the SD card repeatedly in a short time, as this may cause damage to the card.

5 Getting Started

Charge the device

Note:

You cannot charge the battery using the USB cable.

You can use the device while the battery is charging, although the charging time is longer when operating and charging at the same time.

- Plug the power adapter into an electrical wall outlet named DC, and then connect to the device to fully charge the battery before use (approx. 4hour).
- While charging, the battery indicator light is red. When fully charged, the battery indicator light is off

Turn the device on

Press the power button and hold for 2 seconds.

Start Wi-Fi Network

- **Turn on Wi-Fi**

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

Press Settings, → Wi-Fi

Check Wi-Fi to turn on.

- **Connect to Wi-Fi**

The device automatically scans and lists all local Wi-Fi Network found. A  indicates that the secure networks require login name/password to connect.

 
1、 Tap the desired network to which you want to connect, → enter the Network Password if applicable, → tap Connect.

2、 Tap back key to return to the Home screen.

Note:

If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap Add Wi-Fi network and follow the prompts to add your network


6 Launcher

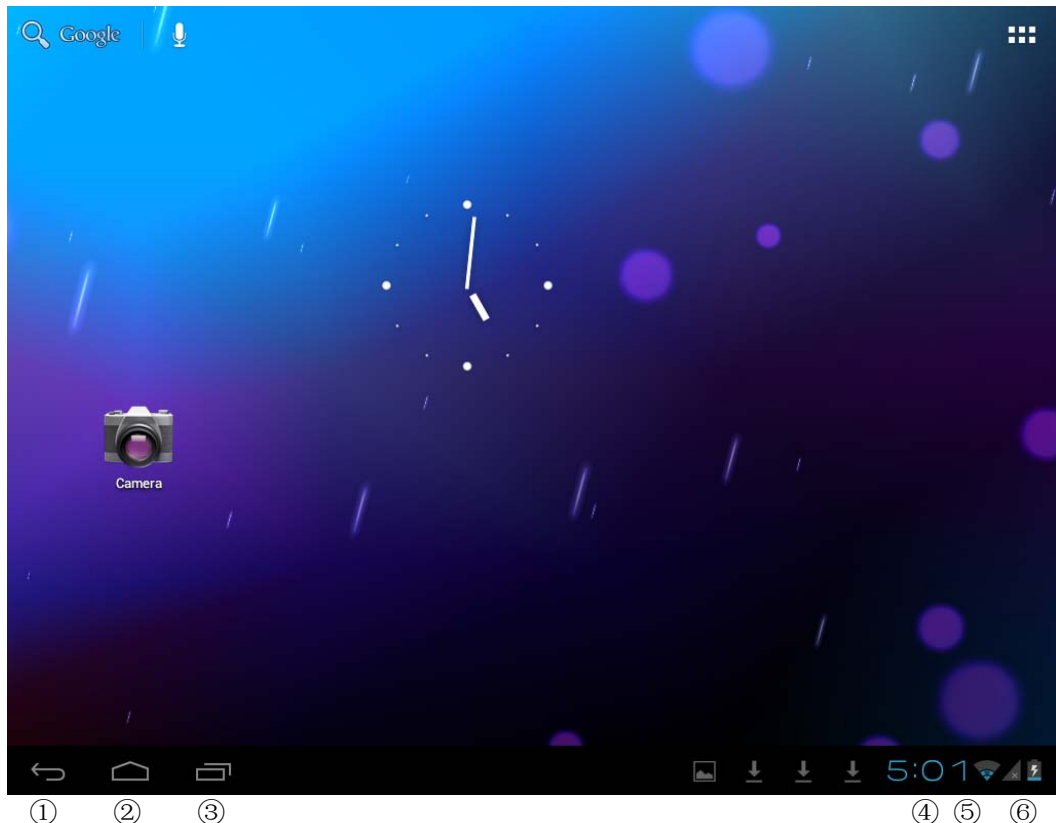

- ① Backspace
 - ② Home
 - ③ Display the program is running
 - ④ Time
 - ⑤ Wi-Fi signal icon
 - ⑥ Battery
-

7 Screen Lock

 Can be set to automatically lock screen or quickly press the power button to manually lock screen. Lock screen displays the following:

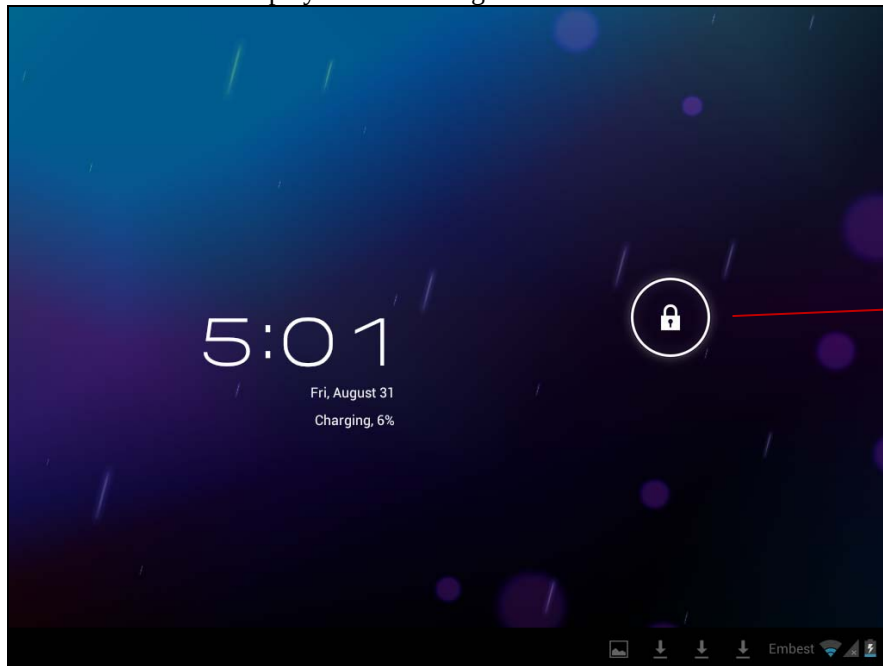

Press the lock and drag to the right


1. Pressing , drag to , then releasing it. As the picture displays.

8 Pre-loaded Applications

 Messaging	Message	Send SMS or MMS to people you desired
 People	People	Save a person's information
 Clock	Clock	Use as alarm clock with scheduled alarms.

 Play Store	Play Store	Downloaded applications quickly & easily.
 Browser	Browser	Access the Internet and “surf the web” whenever desired.
 Calendar	Calendar	Calendar with ability to set events.
 Sound Recorder	Sound recorder	For recording your voices
 Camera	Camera	Capture image of the screen.
 Calculator	Calculator	Do calculation.
 Email	Email	Send/Receive email using your existing email addresses.
 Explorer	Explorer	Explorer application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
 Music	Music	Play and manage audio files.
 Video	Video Player	Play and manage video files.
 Gallery	Gallery	View and manage photo files.
 Gmail	Gmail	For sending and receiving mails by Gmail server

 Maps	Maps	For discovering the world with street and satellite data from the Google Earth
 Twitter	Twitter	Sign in to Share and discover what's happening with your friends
 Places	Places	A shortcut for finding places using Navigation service
 Latitude	Latitude	lets you and your friends view each others' locations on maps and share status messages with each other
 Settings	Settings	Multiple settings for personalizing and enhancing your Device.
 ApkInstaller	ApkInstaller	Used for installation the android application in SD card or NANDFLASH the android application
 News & Weather	News& Weather	For scanning the news and checking the weather
 Books	Books	To read books by signing in your Google account
 YouTube	You Tube	The largest video sharing website of the word
 Downloads	Downloads	To download the application from the website
 Movie Studio	Movie-Studio	Play and manage video files.
 Search	Search	To find out the application you want to run

 

- ☆ To move an icon to the **Desktop** screen, touch & hold on the icon, and then release it when it appears on the **Desktop** screen.
- ☆ Touch, hold and slide icons onto “X” to remove them from the **Desktop** screen.

9 Application Management

Install Android Applications

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the  **Apk Installer** application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device, → insert or connect to your Device.
2. Tap the  **ApkInstaller** application icon.
3. Tap **Install** and locate the folder (**Internal Memory** or **TF Card**) in which the .apk application files were saved.
4. Tap on a **.apk** file → **Install**.
The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch the application now, or tap **Done** to return to the **ApkInstaller** screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

1. Tap the  **Browser** application icon to launch the internet browser.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is complete, touch & hold on the download file (in the

Download history screen), → tap **Open** → **Install**.

Download Android Applications direct from APP Market

Please refer to the Chapter of “**APP Market**”

 
Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Press **Settings** → **Applications**
2. Tap the application you want to uninstall, → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.

You can also use **ApkInstaller** to uninstall the Android applications

1. Tap the  **ApkInstaller** application icon.
2. Tap **Manage**
3. Tap one **.apk** from the application list and tap **Uninstall**
4. Tap **OK** to confirm to uninstall the **.apk**

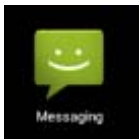

10 Message

- **Open message**

1. Press the message icon on the screen.
2. Create new message or open the chat which is ongoing.

- **Send message**

1. Pressing “New message” to compose new message.

2. Input the phone numbers in the column.

Input the phone number directly using the virtual keyboard

You can also enter already entities of the mobile phone number the contact's name.

3.Touch **Type message** to start writing text messages



11 People

- **Open people**

1. Touch the people icon on the desk to open people
2. At the top of the screen ,you will see GROUPS, ALL, FAVOURITES
3. Four buttons on the right top screen can help you manage the people.

- **check of People**

1. Open the "people".
2. You want to see the details , touch of the contact on the left side.
3. All kinds of contact will show the appropriate details right side.

- **add contacts**

1. To add a group ,touch GROUPS and .Type Group's name and person's name according to the tips
2. To add a person's message, touch ALL and .Type the contact's name ,phone ,email ,according to what you need.

You can add contacts on mobile phones, and with Google account, Microsoft Exchange ActiveSync account or support the accounts in other contact synchronization correspondent synchronization.

If which you give is not in the "contact" listed in some email addresses to send reply E-mail or forwarding mail.

the system will add this email address to the contact. The "contact" will attempt to put a new address and existing contact merged into one entry. You can also manually manage the process.



12 CLOCK

Alarm


You can use your device as an alarm clock by setting multiple alarms.

- **Add Alarm**

1. Tap the  **Clock** application icon.
2. Press  to add alarm
3. Set up your alarm as desired.
4. Tap **Turn on alarm** to activate the alarm.
5. Tap **Done** or tap **Revert** to reset your alarm again.


Note:

- This clock icon  displayed at the bottom of screens indicates that one or more alarms have been set and are active.

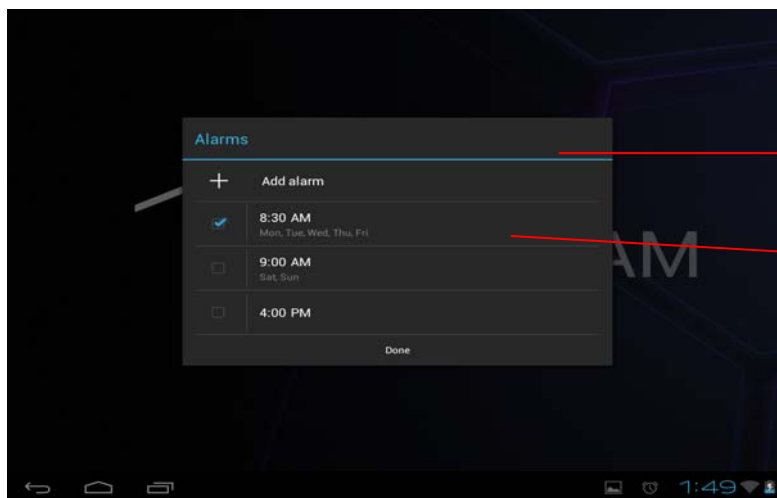 


Tab to add a alarm

 Tab to set a alarm

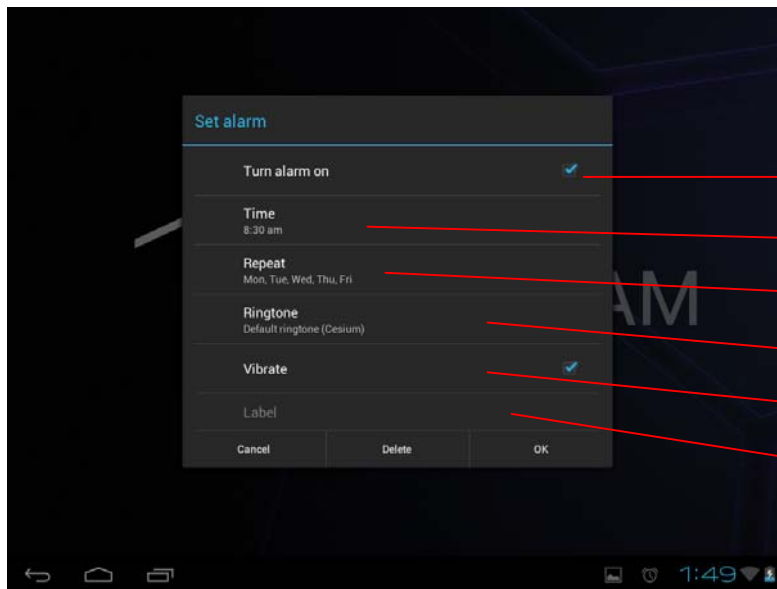

 - Select to turn on/off the alarm
- Set the time
- Choose the day for alarm repeated
- Choose the ringtone
- Choose to vibrate
- Lable to reminder what the alarm for

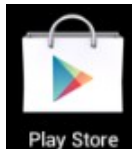

13 Play Store

The App Play Store has many applications that you can quickly and easily download to your MID. Before using **APP Play Store**, you have to make sure you device have a internet connection (Please refer to the **Chapter of Wi-Fi**)

Download Applications

1. Tap the  **App Play Store** application icon and tap **Accept** on the bottom of the screen.

Note:

- *The first time, you are prompted for your App Market login information. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*

2. You can select applications from the default **Featured** group, or tab

Apps/Games on bottom of the screen on the left to choose from the application list by categories, or you can also search applications by name by tapping the icon .

3. Tap any application you want to download, → **Download** → **Accept & download**.

When download process started, the icon  will be displayed on the status bar. When the icon  is displayed on the status bar, the app is downloaded successfully.

4. Slide down the status bar and tap the “**Successfully installed**” → tap **Open** to launch it now or tap **Uninstall**.
5. Press Back key to return to the market screen to download other applications

App Market Function Menu

Press Menu key to display the App Market **Function Menu**.

- **Search**

Tap to enter the keys of the application you want to search.

- **My Apps**

This page displays the apps installed on your device that can be also found in the APP Market

Uninstall apps (With **Installed** displayed on right of the item)

1. Tap the app you want to uninstall.
2. Tap **Uninstall**.
3. Tap “OK” when display a dialog.

Update apps (For **FREE** displayed on right of the item)

1. Tap the app you want to update
2. Tap **Download** → **Accept & Download**

- **Settings**

 
You can see some settings, such as: **Filtering level** and **Notifications settings**.

Filtering level Set the filtering rules as desired

Notifications Set whether a notification prompt when application is downloaded.

- **Help**

If you have some doubts, please refer to this part.

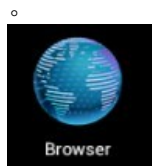


14 BROWSER

Using Browser to surf the web .

Opening Browser

 Tap the browser icon on the Home screen , and then you can open the Web browser.

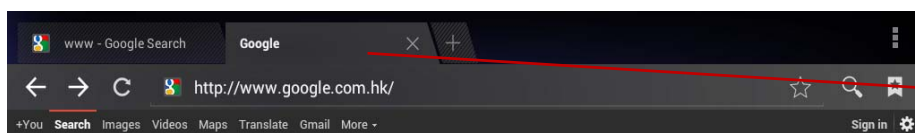

Website of current page



Menu

Network Status




You can browse the web by Wi-Fi or Ethernet.

Browser options

Press Menu key to see browser options:

Options	
Refresh	Refresh the current page.
New Tab	Enter the latest added tab.
New incognito tab	Enter the incognito tab
Share page	Share your favorite pages with your friends
Find on page	Looking for something in the current page.
Request desktop site	You can select or unselect the options
Save for offline reading	save the current content for offline reading
Page info	Display the current web page information
Settings	For some other Settings

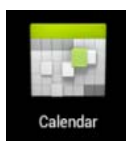 

15 CALENDAR

Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an **Exchange account** or a **Gmail account**. Enter the account address and password information, click **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**.

Open Calendar

 
Events from each account you've added to your device and configured to synchronize calendars is displayed in Calendar. There are different views you can choose in Calendar by pressing Menu key and touch **Agenda View**, **Day View**, **Month View**, **Week View**.

Agenda View



→ Touch an event to view its details


Day View

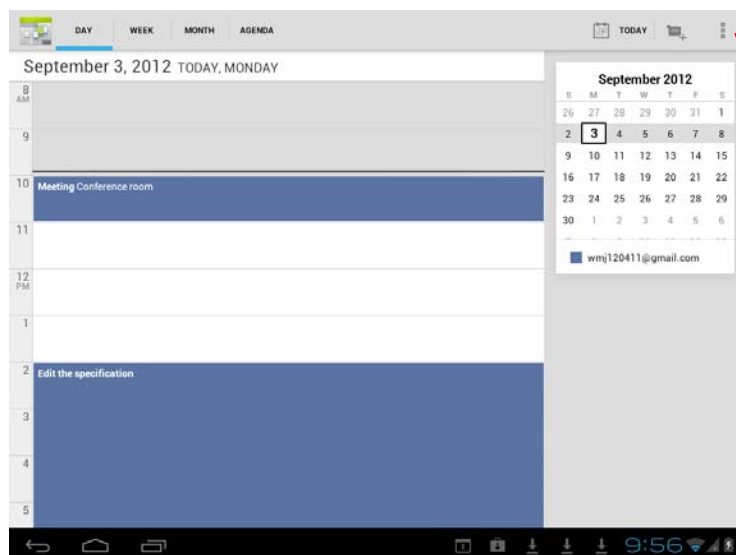


→ Touch here to add new agenda

→ Show much more settings

 Week View

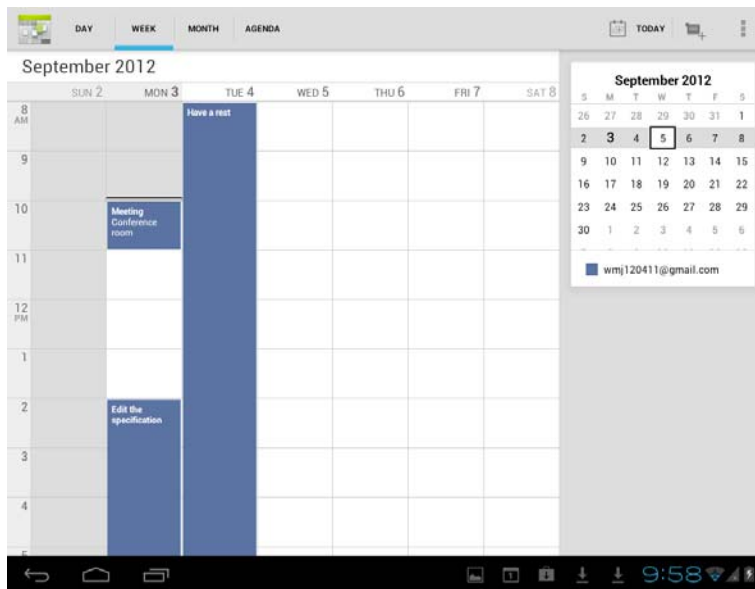

Month View

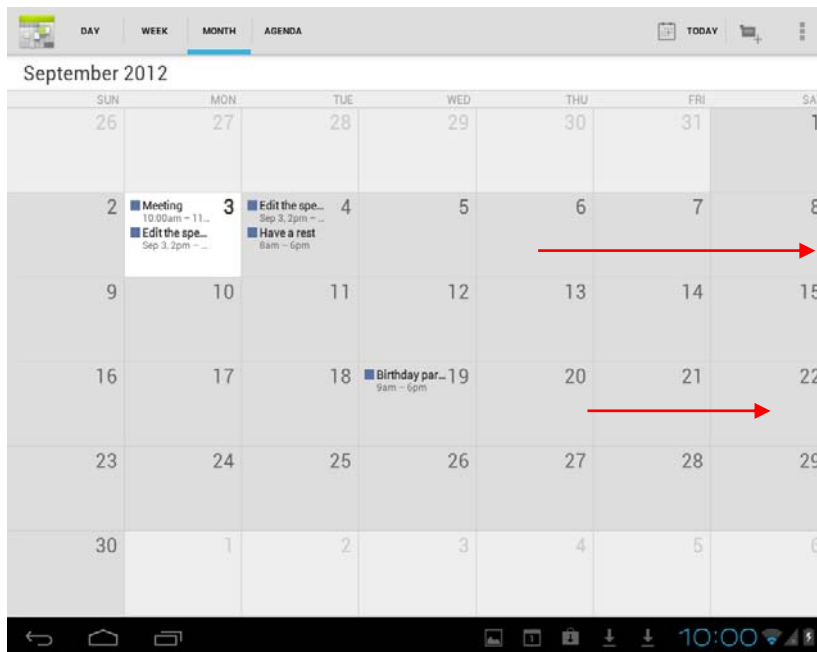 

Drag up or down to view earlier or later months

Touch an event to view its details

Creating an Event

1. In any view of **Calendar** , press Menu key -> **More** -> **New event** .
2. Add details about the event
3. Press Menu and touch **Show extra options** to add details about the event
4. Scroll to the bottom of the event details screen and tap **Done**.

Edit /Delete/View an Event

To edit an event, touch and hold the event, then touch **Edit event**. Edit event details, then when you're done, touch **Done**.

To delete an event, touch and hold the event, then touch **Delete event**.

To view an event, touch and hold the event, then touch **View event**.



16 CAMERA

Tap the  Camera application icon.

Take Pictures

1. In **Camera** tap  into photos mode, tap  to change from front and rear camera; tap  to take the picture.
2. The picture will be saved automatically.
3. Tap the picture thumbnail on the up right corner  to enter **Gallery** to scan the picture.
4. Press **Back** to the **Camera**.
5. Press **Back** to exit the **Camera** and back to the **Home screen**.

Take Videos

1. Tap  switch to video, and you can take videos.
2. Tap  to begin and tap  to stop.
3. The video will be saved.
4. Tap the video thumbnail  to play the video.
5. Press **Back** to the **Camera**.
6. Tap  switch back to camera.
7. Press **Back** to exit the **Camera** and back to the **Home screen**.

Panorama Photography

1. Tap  switch to panorama photography.
2. Tap  to begin and tap  to stop.
3. The picture will be saved.
4. Move your machine slowly to receive panorama.  shows filming schedule ,if you move too fast ,there will be a red block.
5. Tap  switch back to camera.
6. Press **Back** to exit the **Camera** and back to the **Home screen**.


Photo options

On the preview of the camera tap  you can see some icons on the right of the preview, such as , , , touch it you can open the settings.



17 CALCULATOR

 1. Tap the  Calculator application icon on home screen to launch it.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.

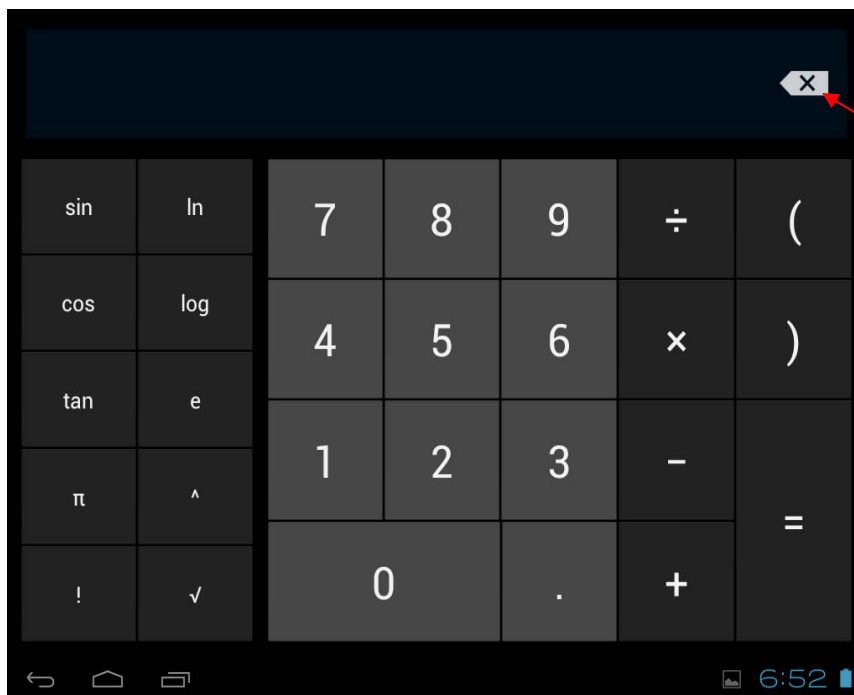

tap and hold to clear
all that is entered.



18 EMAIL

POP3 and SMTP accounts are supported.

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.

1. Tap the  **Email** application icon.
2. On the **Your Accounts** screen, tap **Next**.
3. Tap in the **Email** address entry field, → enter your email address.
4. Tap in the **Password** entry field, → enter your email password.
5. Tap **Done**.
6. **Manual Setup** (optional): The server settings are automatically populated based on your email account provider (i.e., *gmail.com*, etc). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
7. Tap **Next**.
8. Optional: Enter a name for the account.
9. Enter name for outgoing message, → tap **Done**.

Note:

- After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).

Email Inbox

1. Tap the  **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account, → tap **Inbox**.

● Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap **Reply** or **Reply all**.
 - a. Tap in the Compose Mail entry field to enter your reply message.
 - b. Tap **SEND** to send immediately, **SAVE DRAFT** to save without send or **Delete** to discard without saving or sending.

4. To delete the email immediately, tap **Delete**.

- **Compose New Email Message**

1. On the Inbox screen, touch .
2. Tap in the **To** entry field and then enter the recipient's email address.
3. Optionally, if you want to add Cc or Bcc recipients, touch settings → **Add Cc/Bcc**, and then enter the recipient's email address.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal message.
6. If desired, touch  to attach a file.
7. When ready to send the email, touch **SEND**

Edit Email Account

1. Tap the  Email application icon.
2. On the Inbox screen, touch settings
3. Set your desired preferences to customize your email account.
4. Touch back to return to the Inbox screen.

Delete Email Accounts

If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, touch settings
3. Touch the account you want to delete.
4. In the right **Account options** window, tap **Remove account**.
5. Tap **OK** to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

 
1. Tap the  **Email** application icon.
2. On the Inbox screen, touch settings.
3. Tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



19 EXPLORER

Tap the  **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB*), and to quickly & easily install Android application on your Tablet.

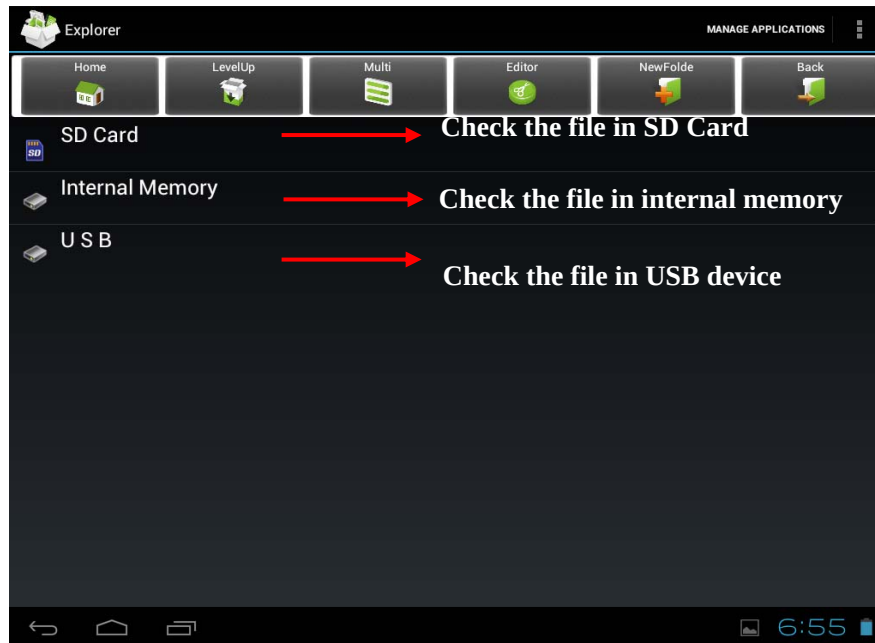

Functions of icons introduction



Display the root directory of Explorer

Go the parent directory of the current folder



Tap it once, you can multi select the items displayed

Tap it to do some operation for the selected item, such as copy, delete, move, paste, rename.

Tap it to build a new folder

Tap it to go to the previous page

Tap it to go to the next page

 
Delete files

Tap and hold on the folder/file you want to delete, → tap **Delete**

Install android application

Using Explorer to install android application. Before doing this please copy the **.apk** files into SD card or your internal memory.

1. Tap the  **File Browser** application icon to view the files
2. Tap one **.apk** that you want to install on your devices

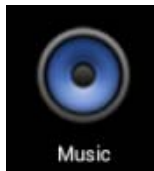

20 MUSIC

Get music

- **Transfer music using USB**

 
Transfer music files from a computer to your memory card.

1. With a memory card inserted, and your tablet showing the home screen, connect a USB data cable from you tablet micro USB port to a USB port on you computer. Your tablet should show  in the status bar.
2. Tap  then your tablet shows a **USB connected** message above the status bar, touch the message to open the storage dialog. You can't use the files on you memory card while it is connected.
3. Touch **Turn on USB storage**.
4. Tap "OK" to confirm the dialog.
5. Drag and drop you music to a folder on the memory card.
6. When you're done, select the "**Turn off USB storage**".



Play Music

1. Tap the  **Music** application icon.
2. Tap any audio file from Albums/Artists/Songs/Playlists/ to play it.
3. To stop the music, tap the **Pause**  icon.
4. To leave the music playing and return to previous screens, press Back key to return to the **Home** screen.

At this interface, you can do: **view the lyrics, play / pause, switch to the previous / next song, loop play, random play** etc.

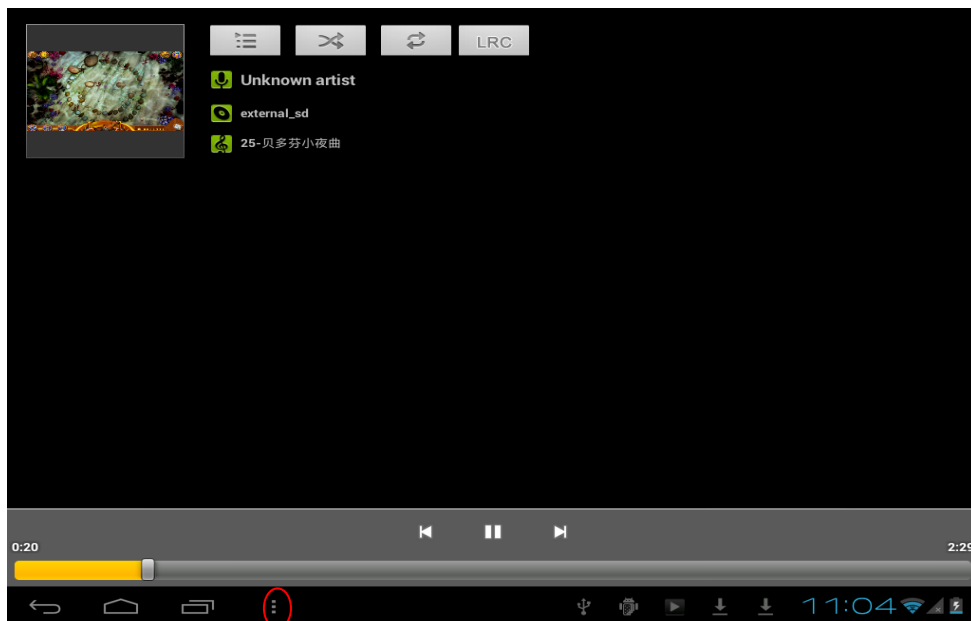

  
Touch here you can make more settings,as follows:

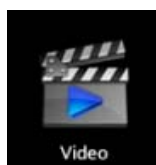


21 Video

Play Video

  1. Tap the  **My Video** application icon.
2. Touch any video from the video list.
3. Tap on the playing video screen, the options displayed on the screen below.

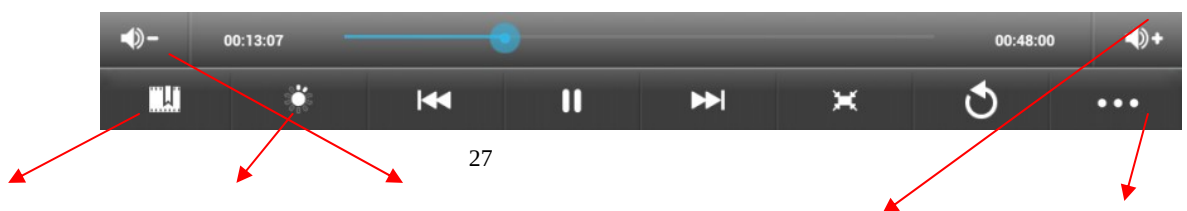

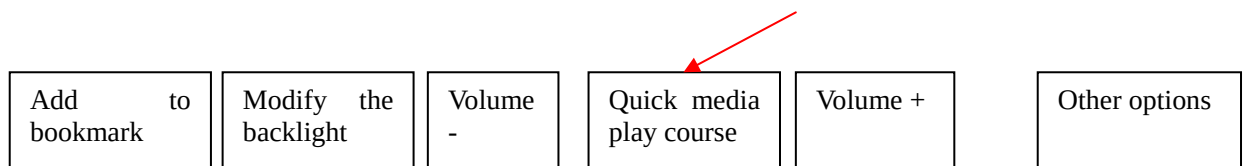

Add to bookmark

Touch to record the current play course during a video is playing. Next time you open this video, you can choose to play from the bookmark or from the very beginning.

Other options

- **Delete Book Mark And Play from beginning**

During playing a video which has been added a bookmark touch it and the video will play from the beginning.

- **Delete bookmark**

During playing a video which has been added a bookmark touch it and the bookmark added to it will be deleted.

- **Play mode**

During playing a video, touch **play mode** you can choose:

 
Single After the current video is over, the playing is stopped.

Repeat one The current video will be played in repetition.

Repeat all All the videos will be played in repetition.

- **Help** Show some help information about the video player

- **Return** Back to the playing video view

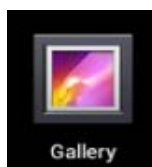

22 GALLERY

Opening Gallery and viewing your albums

1. Touch the Gallery icon  in the Launcher or on the Home screen
- OR
2. Open Gallery from Camera by touching the thumbnail image at the top right

Note:

- *If you have a great many pictures or videos on your SD card or USB storage, it may take Gallery a few minutes when you open it to discover and organize them.*

Working with albums

- **Open Gallery and touch the album whose contents you want to view**

Albums open displaying the pictures and videos they contain in a chronologically ordered grid. The name of the album is shown at the top of the screen. You can touch a picture or video to view it

- **Get the details of an album**

1. Open the main Gallery window
2. Touch the albums you want details about

- **Delete an album**

1. Open the main Gallery window
2. Touch and hold the albums you want delete for a second
3. Touch the  at the top of the screen

Working with pictures

- **View and browse pictures**

Open Gallery album and touch a picture

- **Watch a slideshow of your pictures**

1. Open Gallery album and touch a picture
2. Touch the settings at the top of the screen to see the controls of the picture. You

can see “Slideshow” on the list. Touch it to see pictures in a slideshow

- **Edit/crop a picture**

1. Open Gallery album and touch a picture
2. Touch the settings at the top of the screen to see the controls of the picture. You can see “edit/crop” on the list..

Touch **edit**->**edit** the picture

Touch **crop**-> **crop** the picture

- **Get details about a picture**

1. Open Gallery album and touch a picture
2. Touch the settings at the top of the screen to see the controls of the picture. You can see “Details” on the list. Touch **Details** to get more information about the picture

- **Set the picture as wallpaper**

1. Open Gallery album and touch a picture
2. Touch the settings at the top of the screen to see the controls of the picture. You can see “Set picture as” on the list.
3. Touch **Set picture as** and touch **Wallpaper** then **crop** on the top of the screen



23 Gmail

Opening Gmail and your Inbox

- **Open Gmail**

Touch Gmail icon  on the Home screen or in the Launcher.

When you open Gmail, the current Google Account is displayed at the top of the Inbox. If you have more than one account, you touch the current account to switch accounts

- **Open your Inbox when Gmail is running**

 
The Gmail interface is divided into two parts ,the left one lists all the mail types, such as Inbox ,Priority Inbox ,Starred ,Chats ,Outbox etc. The right side present the details. So when reading a message ,you can easily back to inbox by touching the Inbox on the left side . You can also touch back until you return to your Inbox.

- **Switching accounts**

Gmail displays conversations, messages, and settings from one Google Account at a time. If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and to switch accounts.

1. From your Inbox, touch the current account at the top right of the screen.

Each account is listed, along with the number of unread messages in your Inbox

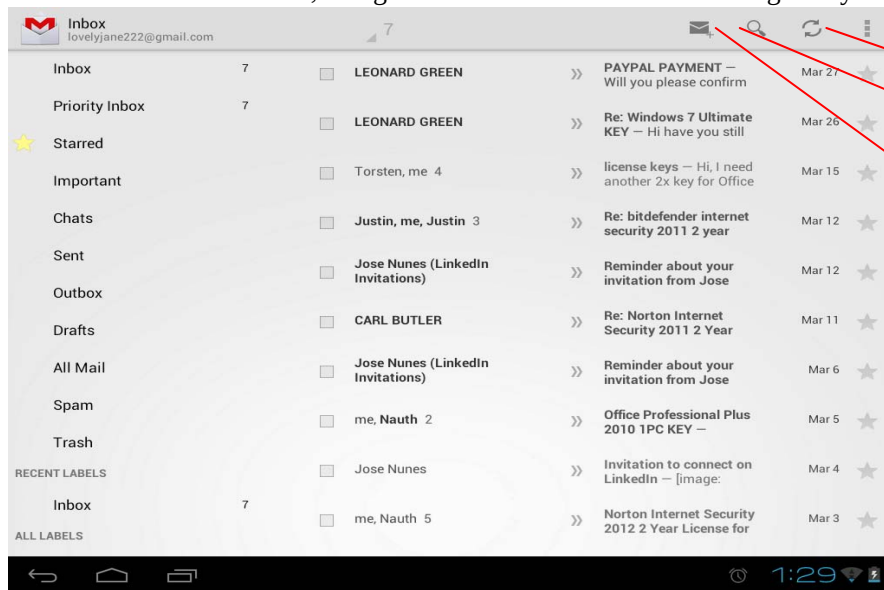

2. Touch the account that contains the email you want to read.

Note: Here we only have one accounts.

- **Read a message**

Touch a conversation that contains the messages you want to read.

The message header shows who sent the message, when, who it was sent to, and other information. Icons indicate whether the message has an attachment and the sender's Google

When reading messages in a conversation, you can use the buttons at the top of the

screen to archive the entire conversation

Touch the topic on the left side to open the next or previous conversation in the Inbox.

- **Work with an attachment**

 
Gmail can display some kinds of attached images (.png, jpeg, depending on your device) in a message. Others have a Preview or Download button you can use. Depending on the applications installed on your device, you may also be able to download and read a variety of kinds of files, including spreadsheets (.xls), word-processing documents (.doc), or PDF files (.pdf). Other applications may add support for opening other kinds of file.

Attachments you download are stored on your device's USB storage or SD card. Image files are added to albums in Gallery.

Composing and sending a message

- **Compose and send a message**

1. When viewing the Inbox, touch settings and touch **Compose**

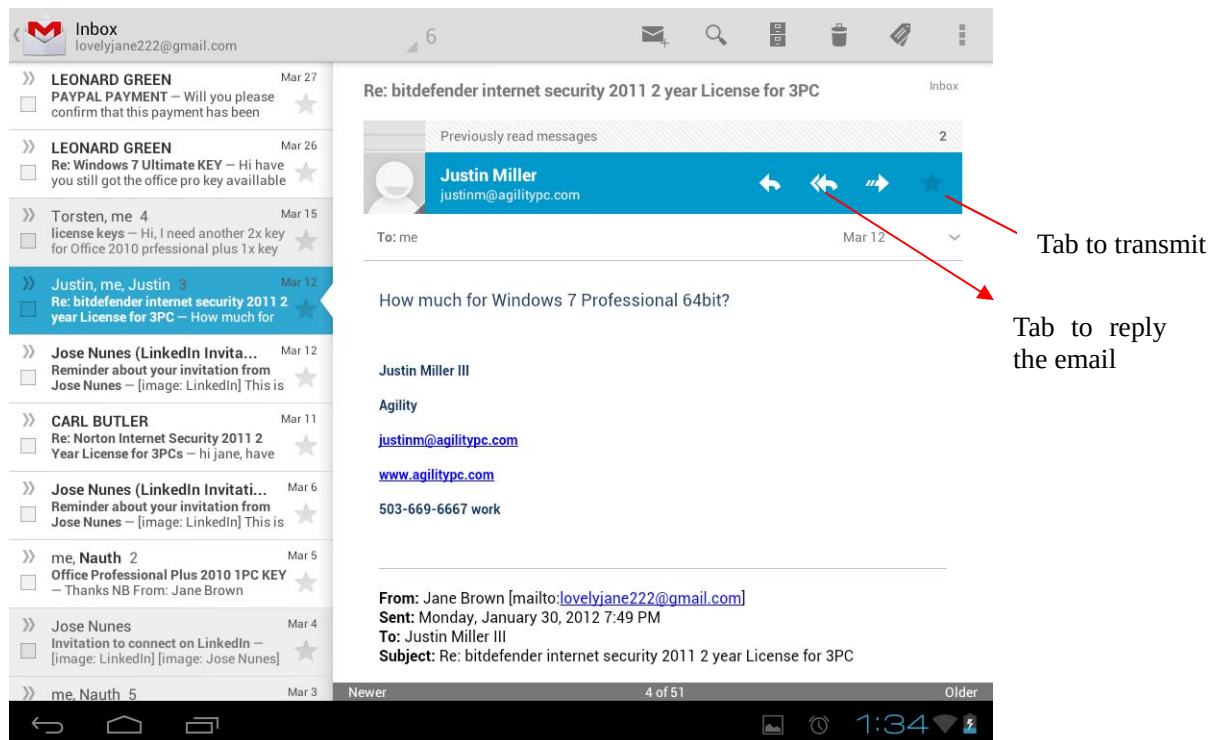


2. Enter all the information that is needed for a message and touch **SEND** to send the message.

- **Attach a photo to a message**

1. Touch settings on the view of composing message and touch 
2. Touch to choose a picture to attach as an attachment for the message

Replying to or forwarding a message

 1. Touch the reply icon  on the view of the conversation that you want to reply.
Or touch the arrow  to display the **Forward** icon for forwarding a message.



24 Maps, Places, and Latitude

Maps

Google Maps for Android includes the Maps application as well as the Latitude, Navigation, and Places components, each available within Maps and as a separate shortcut in the Launcher.

- **Open maps**

Touch Maps icon in the Launcher or on the Home screen.

Note:

- *And for the first time you open Maps you should use Wi-Fi to download the maps data.*

- **Move the map**

Drag the map with your finger

- **Zoom on the map**

 
1. Touch the plus or minus side of the Zoom control

OR

2. Double-tap a location on the map with one finger zoom in that location tap once with two fingers to zoom out

OR

3. Touch an area with two fingers at once and spread them apart to zoom in; pinch them together to zoom out.

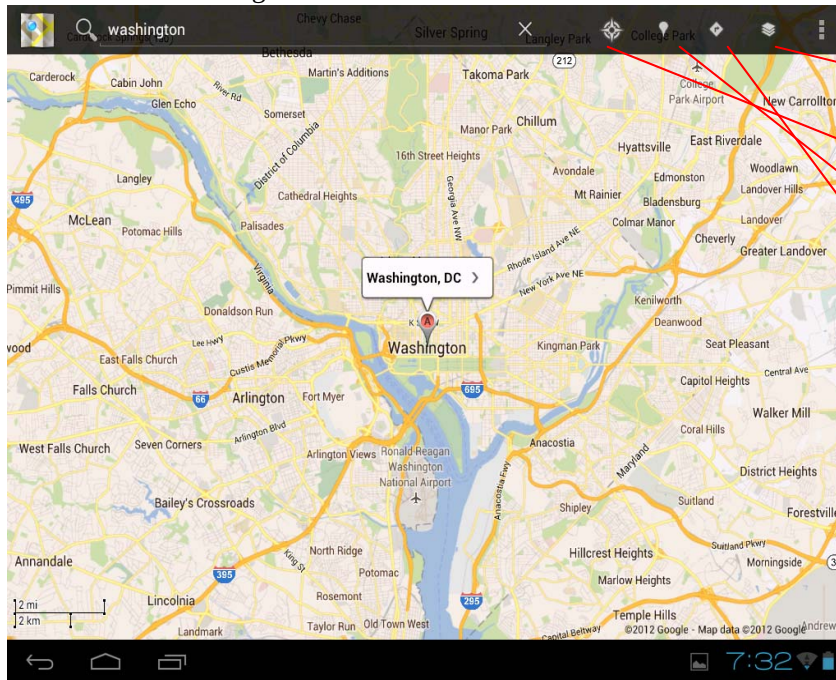

layers

location

Search nearby places

Getting walking/transit/driving direction

Finding your friends with Google Latitude

Google Latitude lets you and your friends view each others' locations on maps and share status messages with each other.

- **Join Latitude**

- While viewing a map touch settings and touch **Join Latitude**.

The first time you join Latitude you're prompted to accept or reject the Google privacy policy.

- **Open Latitude**

After you join Latitude, you can open it to find your friends and view their updates. While viewing a map, touch settings and touch **Latitude**

- **Invite friends to share their locations**

After you join Latitude, you can start to share your location with your friends. Only friends whom you have explicitly invited or accepted can see your location.

1. Open Latitude touch settings and touch **Add friends**

2. Touch Select from Contacts or Add via email address in the menu that opens.

If you touched **Select from Contacts**, a scrolling list of all your contacts opens. Check all of the contacts you want to invite.

If you touched **Add via email address**, you can enter one or more email addresses, separated by commas, of the friends you want to invite.

3. Touch Add friends at the bottom of the screen.

If your friends already use Latitude, they receive an email request and a notification on Latitude. If they have not yet joined Latitude, they receive an email inviting them to sign into Latitude with their Google Account.

- **Respond to an invitation**

When a friend invites you to share your location in Latitude, you can respond in the following ways.

Accept and share back You and your friend can see each other's locations.

Accept, but hide my location You can see your friend's location, but they can't see yours.

Don't accept No location information is shared between you and your friend.

- **View your friends locations**

You can view your friends' locations on a map or in a list.

Your friends' locations are shown when you open Maps. Each friend is represented by their picture from Contacts with an arrow that points to their approximate location. If a friend has chosen to share city-level locations, their picture doesn't have an arrow and appears in the middle of the city.

- **Manage connections with your friends**

Touch a friend's contact details balloon in Map view or touch a friend in List view to open the friend's profile. In the Profile screen, you can communicate with your friend and set privacy options.

Show on map Shows the friend's location on the map.

Chat using Google Talk Opens a Google Talk chat window with that friend. Send email Opens Gmail with a message addressed to the friend. Directions Gets directions to the friend's location.

Hide from this friend Stop sharing your location with this friend in Latitude, in a list or on a map. To share your location with this friend again, touch **Unhide from this friend**.

Share only city level location Share only the city you are in, not your street-level location. Your friend sees your picture in the middle of the city you are in. To share more precise locations again, touch **Best available location**.

Remove Remove the friend from your list and stop sharing locations altogether.

- **Control what you share**

You have control over how and when your friends can find you in Latitude. Only the last location sent to Latitude is stored with your Google Account. If you turn off Latitude or are hiding, no location is stored.

Open Latitude, touch your own name, and touch **Edit privacy settings**. You can set the following privacy options.

Detect your location Let Latitude detect and update your location as you move. The update frequency is determined by several factors, such as your device's battery charge level and how recently your location has changed.

Set your location Set the location shared with others as an address you enter; or, from Contacts, pick a spot on a map, or resume having Latitude share your actual location.

Hide your location Hide your location from all your friends.

 
Sign out of Latitude Disable Latitude and stop sharing your location or status. You can always join Latitude again



25 News and Weather

Touch the widgets “News and Weather” on the home screen. or tap the  **News and Weather** application icon.

The first time you open News and Weather, the below page is displayed

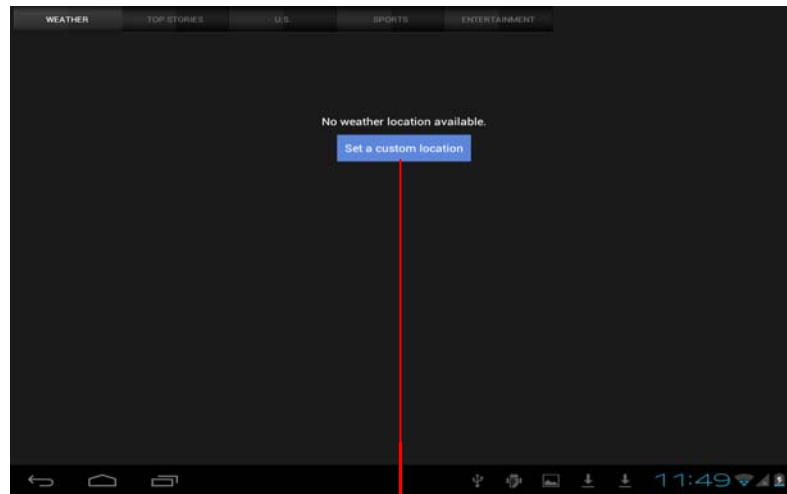

Tap to open **weather settings** screen

Weather setting

- **Use my location** Select this option to display weather information which is used to determine your device's location. If location can't be determined automatically, unselect this to set the location manually.
- **Set location** Unselect **Use my location**, you can manually set your location by tapping **set location**.
- **Use Metric** Select this option to toggle metric or imperial units

News browsing

Drag left and right by your fingers to view different kinds of information: top stories, U.S., sports, entertainments. To view the details, you can touch the title of each news.

WEATHER

TOP STORIES

U.S.

SPORTS

ENTERTAINMENT

Andy Roddick enjoying US Open swan song as retirement looms

New York Daily News - 22 minutes ago



Washington Nationals - TeamReport

Chicago Tribune - 38 minutes ago

Roundup: Adrian Gonzalez powers Dodgers past Diamondbacks

USA TODAY - 1 hour ago

 




26 Books

Connect the books

Tap the  application icon to open the books, touch  on the top of the screen to search books

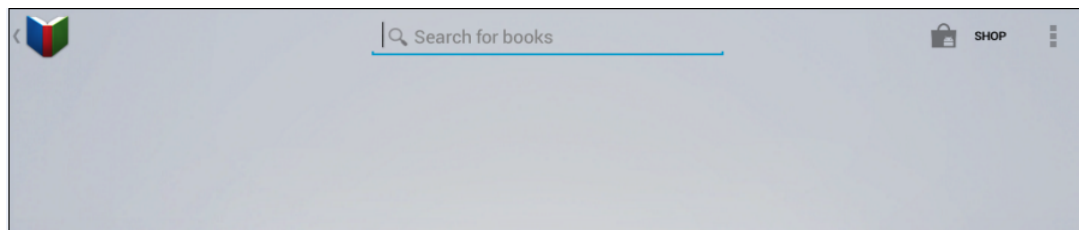

27 Wi-Fi

Connecting to Wi-Fi networks

1. Press **Settings** -> **Wi-Fi**
2. Check **Wi-Fi** item on the top of the screen to turn it on
3. Touch a network to connect to it

Note:

- If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.
- If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)

Receive notifications when open networks are in range

By default, when Wi-Fi is on, you receive notifications in the Status bar when your device detects an open Wi-Fi network.

1. Turn on Wi-Fi, if it's not already on
2. In the Wi-Fi settings screen, check Network notification.
You can uncheck this option to stop receiving notification.

Add a Wi-Fi network

1. Turn on Wi-Fi, if it's not already on.
If you're adding a Wi-Fi network when first setting up your device, Wi-Fi is turned on automatically.
2. In the Wi-Fi settings screen, touch **Add network** (at the top of your screen).
3. Enter the SSID (name) of the network. If the network is secured, touch the Security menu and then touch the type of security deployed on the network.
4. Enter any required security credentials.
5. Touch **Save**.
The device connects to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

Forget a Wi-Fi network

You can make the device forget about the details of a Wi-Fi network that you added—for example, if you don't want the device to connect to it automatically or if it is a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch & hold the name of the network.
3. Touch **Forget** in the dialog that opens.

Wi-Fi Settings screen

In addition to the settings described in this section, you can press **Menu** and Advanced Wi-Fi settings as described in “**Advanced Wi-Fi**”

● Wi-Fi

Check to turn on Wi-Fi so you can connect to Wi-Fi networks. When connected to a

network, displays the network's name.

- **Wi-Fi networks**

Displays a list of Wi-Fi networks you've previously configured and those detected when the device last scanned for Wi-Fi networks.

- **Add Wi-Fi network**

Opens a dialog where you can add a Wi-Fi network by entering its SSID (the name it broadcasts) and security type.

Advanced Wi-Fi settings screen

- **Network notification**

Check to receive a notification when an open Wi-Fi network becomes available.

- **Keep Wi-Fi on during sleep**

Opens a dialog where you can set whether and when the Wi-Fi radio disconnects. Disabling sleep uses more battery power.

- **MAC address**

The Media Access Control (MAC) address of your device when connecting to Wi-Fi networks.

- **IP address**

The Internet Protocol (IP) address assigned to the device by the Wi-Fi network you are connected to (unless you used the IP settings to assign it a static IP address).

28 ACCOUNTS

Adding and removing accounts

- **Add an account**

1. Open the Accounts & Sync Settings screen:

Press **Settings** -> **Accounts & Sync**

2. Touch **Add account** on the top of the screen.
3. Touch the kind of account you want to add
4. Follow the steps displayed on the screen to enter the required and optional information about the account.

- **Remove an account**

1. Open the Accounts & Sync Settings screen:
Press **Settings** -> **Accounts & Sync**
2. Touch the account to delete
3. Touch **Settings** on the top of the screen and then touch **Remove account** on the dropdown menu.
4. Confirm that you want to remove the account

Configuring account sync and display options

- **Configure general sync settings**

1. Open the Accounts & Sync Settings screen:
Press **Settings** -> **Accounts & Sync**
2. Check or uncheck **Auto-sync** to control whether changes you make to information on the device or on the web are automatically synced with each other.

 
- **Sync information manually**


1. Open the Accounts & Sync Settings screen:
Press **Settings** -> **Accounts & Sync**
2. Touch the account whose data you want to sync.
3. touch **Menu** on the top of the screen and touch **Sync now** on the dropdown menu.

- **Change an account's sync settings**

1. Open the Accounts & Sync Settings screen:
Press **Settings** -> **Accounts & Sync**
2. Touch the account whose sync settings you want to change
3. Check or uncheck the kinds of information you want to sync to the device.

29 Settings

Wireless & networks	Wi-Fi	Turn on Wi-Fi.
	Bluetooth	Turn on/off Bluetooth and manage it.
	Data usage	Turn on Mobile data to check the data usage
	More	Touch to set VPN ,portable hotspot ,Wi-Fi direct and Mobile network
Hdmi	Turn on HDMI	Turn on HDMI before using HDMI
	HDMI Resolution	Set the resolution before using HDMI
	Screen Zoom	Zoom in/out the display of tablet on TV
Sound	Silent mode	Silence all sounds except media & alarms.
	volume	To adjust the Media volume, Alarm volume and Notification volume. Tap  and then tap OK .
	Ringtone& Notification system	Select desired ringtone sound.
		Select to enable a sound when making a selection.
Dlaisy	Brightness	Tap & slide  to adjust the screen brightness as desired, and then tap OK .
	Wallpaper	Touch to set the wall paper
	Auto-rotate screen	When selected, the orientation of the screen switches between Portrait and Landscape automatically when you rotate the device.
	Sleep	Choose how long before going asleep when no operation happened
	Font size	Choose the appropriate font size
Location Service	Google's location service	Choose to get your current location by Google while network is available
	GPS satellites	Choose to let apps use GPS to pinpoint your location
	Location &Google search	Choose to let Google use your location to improve search results and other services
Apps	Downloaded	Program downloaded from your tablet.
	On SD card	Manage and remove installed applications from your SD card
	Running	View and control currently running services.

 	All	Manage all the programs in your tablet
Backup &reset	Backup &restore	You can choose to backup your data or not
	Factory data reset	Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap Reset Tablet to proceed with reset, or press Back key to cancel and return to previous screen. WARNING! The following will be erased during the factory reset: ~ Google account ~ System and application data and settings ~ Downloaded applications The factory reset will NOT erase: ~ Current system software and bundled applications ~ SD card files, such as music or photos
Security	Screen security	You can choose a appropriate mode to unlock your screen and you can choose to show your owner info on lock screen or not
	Encryption	Require a numeric PIN or password to decrypt your tablet each time your power it on
	Passwords	You can choose to make passwords visible
	Device administration	Choose to allow installation of non-Market apps
	Credential storage	Include trusted credentials and Install from SD card
Language & input	language	Select the language and region according to your location.
	Personal dictionary	You can add words to a personal dictionary, words that may not be included in the default dictionary.
	Keyboard &input methods	Choose a appropriate input from the list
	speech	Include voice speech and text-to speech output
	Mouse/trackpad	Tap & slide  and then tap OK
Date & time	Automatic date &time	Use network-provided values
	Set date	Set the date manually when Automatic is not checked
	Select time zone	Select the time zone when Automatic is not checked
	Set time	Set the time when Automatic is not checked
	Use 24-hour format	You can choose to use 24-hour format or 12-hour format.
	Select date format	You can select the date format.
About tablet		View updates Status (Battery, Wi-Fi, etc), Legal information, Model number, Android version, Kernel

	version and Build number.
--	---------------------------

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC15.105: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.