

# Endpoint Installation Instructions

Model: Endpoint

FCC ID: Q8Q-SRE



## Description

The Endpoint is a water register integrated with a 1-Watt 915MHz ISM band radio and forms a part of the Smart Route AMR network. The Endpoint is designed to automatically join the best available DataCollector in range and transmits meter reading and status information as and when requested by the DataCollector.

**Note** Please refer to the Technical Manual for further information.

## Specification

**Power Supply:** 3.6V Lithium Thionyl Chloride battery (non-replaceable)

**Operating Frequency:** 902MHz to 928MHz (FHSS)

## Required Equipment

The following items are required for Endpoint installation:

- Endpoint Unit.
- DataConfig unit
- USB-A to USB-miniB Cable.
- Laptop running Windows XP / Vista / 7.
- 'Endpoint Configurator' software.
- Bar Magnet

## Installation Instructions

The Endpoint could be mounted on compatible meter-bases either inside the water-meter pit or outside. The unit is designed to be wall-mounted or pole-mounted in normal operation.

To mount the unit:

1. Fix a suitable adapter ring for the type of meter-base being used by locking it in place. Contact BluTower directly to check compatible meter bases and available adapter rings.
2. Place the endpoint in the adapter ring. It could be rotated and installed in any of the 4 positions at a 90degrees step. Select a position which gets the antenna closest to the centre of the pit to get the best wireless range.
3. Hold a magnet over the top side-wall of the top cover to the left of the LCD screen to wake up the endpoint from the standby in to the configuration mode.
4. Connect the DataConfig unit to the laptop and using the Endpoint Configurator software on the laptop configure the settings required for the endpoint wirelessly into the endpoint. Please refer to the Endpoint Configuration Manual for details on the available settings.
5. Once done with the configuration, put the endpoint in the network scan mode from the Endpoint Configurator software.
6. If the endpoint finds a DataCollector in direct range it joins it and shows the Signal strength on the LCD.
7. If not it waits in the Level-2 Commissioning mode until it finds another endpoint through which it can connect to a DataCollector network.

Note: All the DataCollectors required for the installation site must be installed and the Level-1 Commissioning mode must be enabled on the DataCollector before installing any endpoints.

## General Warnings and Safety

**Caution** Ensure a separation distance of at least 20 cm (8 inches) is normally maintained between the transmitter's antenna and the body of the user or nearby persons. The Endpoint is not designed for or intended to be used in portable applications within 20 cm. (8 inches) of the body of the user.

**Warning** Changes or modifications to the product not expressly approved by BluTower could void the user's authority to operate the equipment. See FCC information below.

This sheet provides instructions needed to successfully connect and configure the Endpoint for use in a SmartRoute Network. These

**BluTower Inc  
US Office**

**2855 South Pine Avenue, Ocala, FL 34471 Tel 352-624-8695**

© 2010 BluTower Inc. The information contained herein is the property of Blue Tower Communications Inc and is supplied without liability for errors or omissions. No part may be reproduced or used except as authorized by contract or other written permission. All other company names, brand names, and product names are the property of their respective holder(s). P/N DataSend900 PSTN Rev1