

DX-1 Top Level Parts list

DESCRIPTION	QTY.	Remarks
Chassis	1	
Cover	1	
Front Panel	1	
Glass	1	
Partition	1	
Sub-chassis assembled	1	
Socket	1	
Tube GU74B	1	
RF Section	1	
HV Power Supply	1	
QSK	1	Optional
RF Sensor	1	
Control Board	1	
Display Board	1	
Bracket, Display	2	
Loom	1	
Power Cord	1	
IEC Socket	1	
Soft Start Assembly, DX1	1	
Temperature Sensor	1	
Transformer	1	
Transformer Loom	1	
HV Wires	3	
Microswitch	1	
RF connector	2	
Fuse Holder	2	
Fuse 15A	2	
RCA connector	2	
Potentiometer	1	
Knob	3	
Pointer	2	
Switch, rocker	2	
Blower	1	
Choke	1	
Box (packing)	1	
Manual	1	