


Outlet Switches

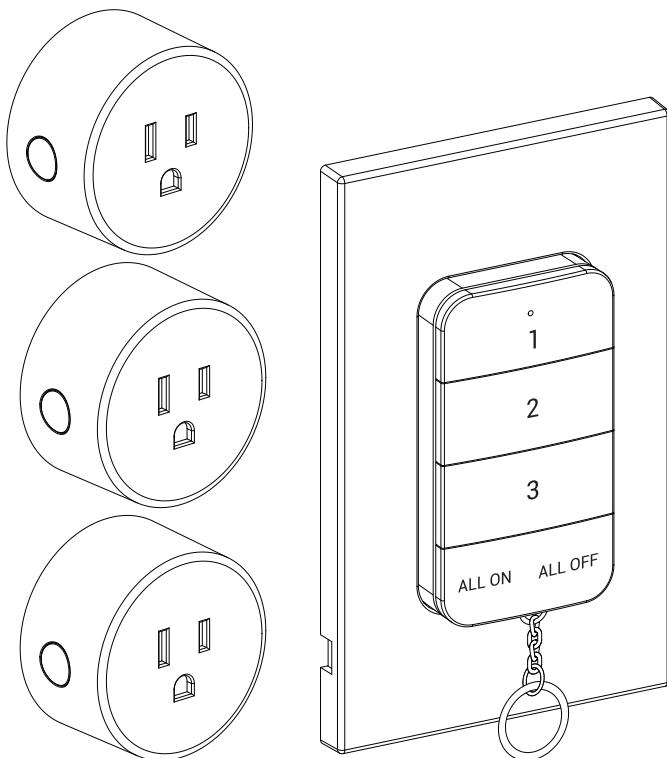


General Guidelines:

- Please pay attention to the warning signs.
- Read the instructions with caution before operating and keep it properly.


Warning:

1. For indoor use only. Avoid high humidity, high temperature, and high magnetic field.
2. Do not connect any devices that may exceed the performance limits of the outlet.
3. Do not insert needles or any other metal objects into main outlets.
4. Do not disassemble or repair the product, but only by authorized service personnel.
5. Children are not allowed to use remote outlets without adult supervision.
6. To prevent children from suffocation and chocking, keep them away from packing materials.
7. Used batteries should be disposed of safely and in accordance with environmental protection standards.

Product Illustration

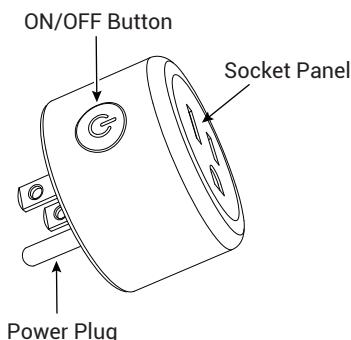

Receiver

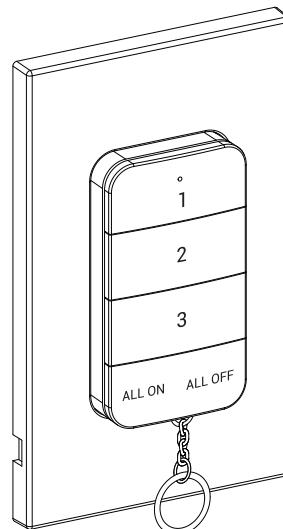

Transmitter

Operating Instructions

1. Plug the receiver into a powered outlet.
2. Remove the isolation tab in the battery compartment of the transmitter.
3. Press each ON/OFF button on the transmitter will turn on or off the corresponding receiver accordingly.

Note:

1. *Program button of each receiver can also be used as a manual switch.*
2. *The receiver will remain "OFF" after a power cut to save energy.*

Canceling Programming

To remove a receiver from all transmitter paring (no remote transmitter can control it):

1. Unplug the connected device from the receiver.
2. Unplug the receiver from the powered outlet.
3. Press and hold the program button on the receiver.
4. Plug the receiver back to the powered outlet while continuing to press program button for approximately 5 seconds until the indicator begins to flash.
5. Program reset is successful when the indicator on receiver flashes several times and stops blinking.

Programming the Receiver

The receivers and transmitter have been pre-paired for immediate use, but there are few units may not be pre-programmed or programmed incorrectly, or you want to customize the configuration to meet your needs. To program a transmitter and receiver, please follow the steps below:

1. Cancel the programming referring to the above "Canceling Programming" section firstly.
2. Press the program button on the receiver until indicator light starts to blink.
3. Release the program button, press "ON" and then "OFF" button for any desired number on the transmitter.
4. Programming/paring is successful when the indicator light stops blinking.

Battery Replacement

If you find the receiver works abnormally or the indicator on the remote transmitter becomes dim, please replace the remote battery with a new CR2032 3V battery, making sure the polarity +/- of the battery is correct.

- Low battery power may decrease readable wireless remote range.
- Remove batteries if the remote is not in use for an extended period of time.

Troubleshooting

In the case that one receiver is unresponsive to a remote control, follow the steps below to resolve the issue:

1. If the receiver is unresponsive to the remote control, please refer to the "Canceling Programming" and "Programming the Receiver" sections in the manual to reset the receiver.
2. "Canceling Programming" is always prior to "Programming the Receiver" when you want to make some changes.
3. Make sure the receiver and appliance are properly connected and powered on.
4. May be the transmitter is too far away to control the receiver.
5. The wireless range may be shorted by other electronic devices, appliances, walls, and other physical barriers.

Specifications

- Input Voltage: 120VAC, 60Hz
- Max Power Rating: 15A,1875W
- Transmission Frequency: 433.92 MHz
- Remote Control Range : 100 Feet (Free Area)
- Remote Battery: CR2032 3V

Safety Information

Federal Communications Commission Interference Statement. This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Redirect or relocate the receiving antenna.
- Increase distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC WARNING:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

⚠ WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours• KEEP new and used batteries OUT OF REACH OF CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body	

a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
b) Even used batteries may cause severe injury or death.
c) Call a local poison control center for treatment information.
d) The compatible battery type CR2032.
e) The nominal battery voltage is 3V.
f) Non-rechargeable batteries are not to be recharged.
g) Do not force discharge, recharge, disassemble, heat above 70 °/158 ° or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

a) Ensure the batteries are installed correctly according to polarity (+and-).
b) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
c) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
d) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.