 



802.11ax-HE20 - Ant 0

Channel 117 (6535MHz)

The Reference Level

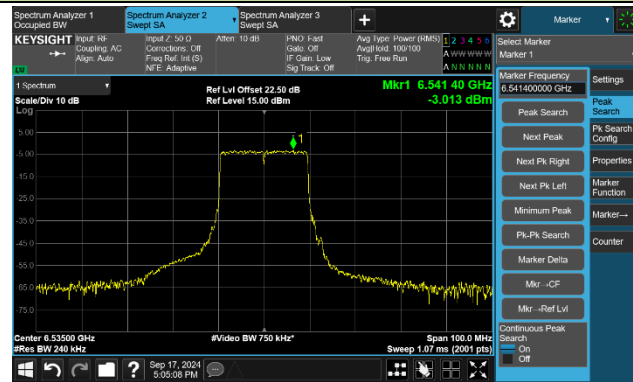


 The Mask Data

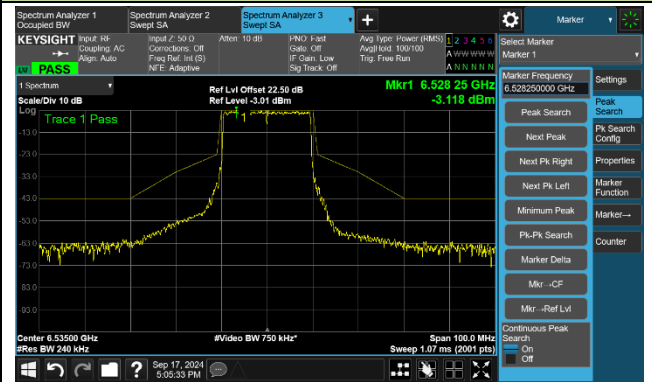


Channel 153 (6715MHz)

 The Reference Level

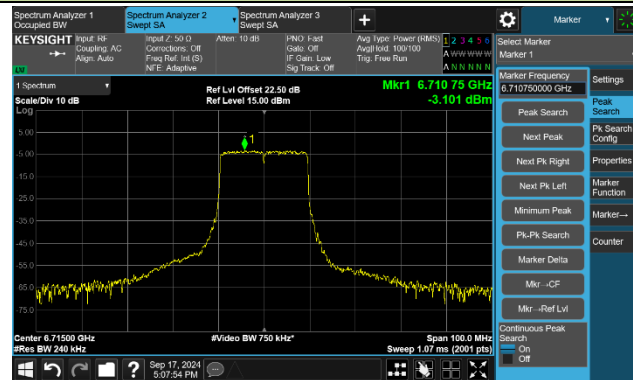


The Mask Data

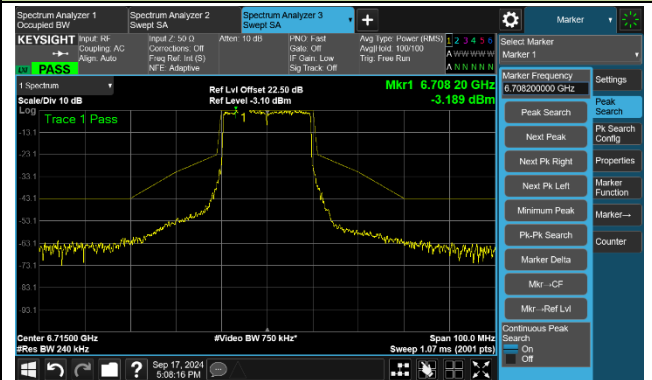 


Channel 181 (6855MHz)

 The Reference Level

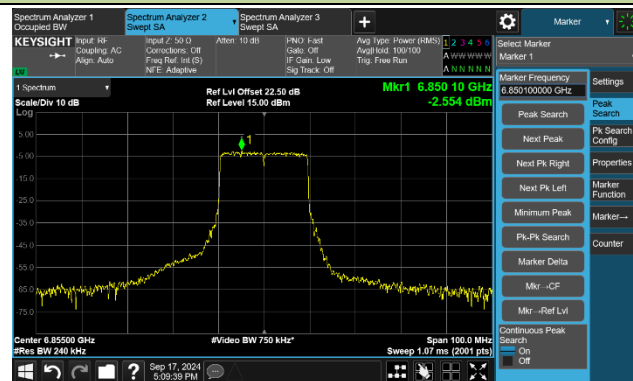


The Mask Data

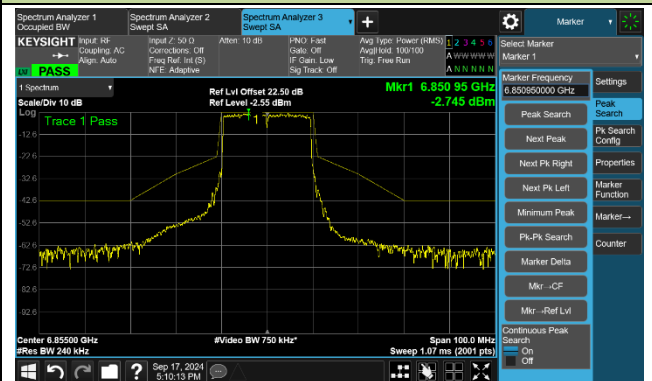 


802.11ax-HE40 - Ant 0

Channel 3 (5965MHz)

 The Reference Level

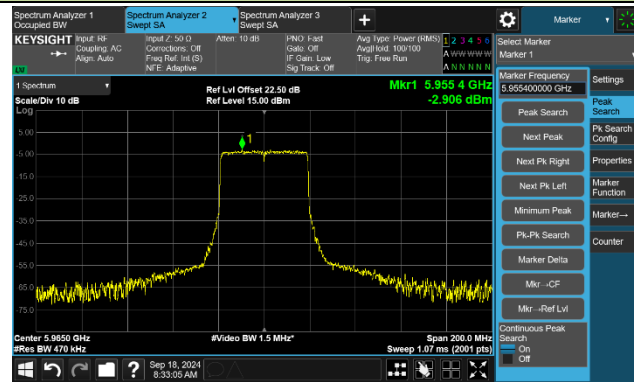


The Mask Data

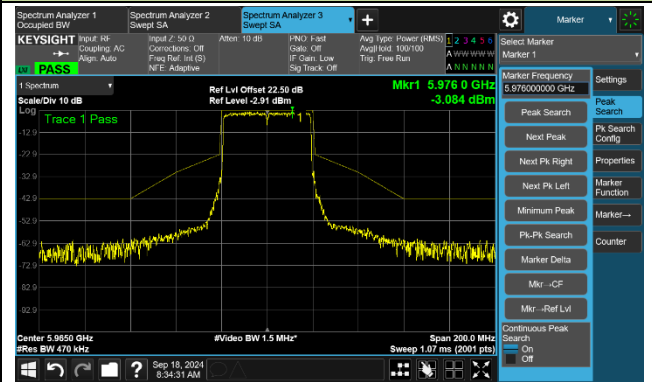 


Channel 51 (6205MHz)

 The Reference Level

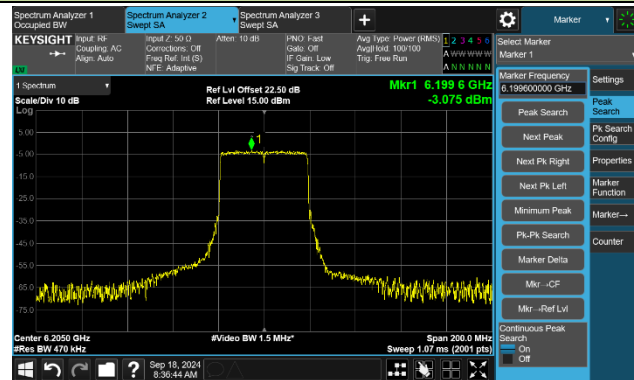


The Mask Data

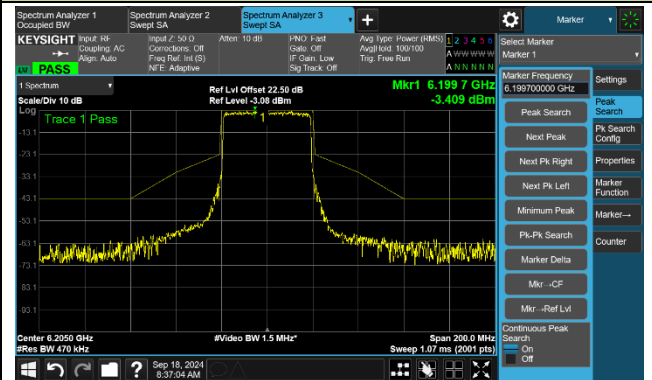 


Channel 91 (6405MHz)

 The Reference Level

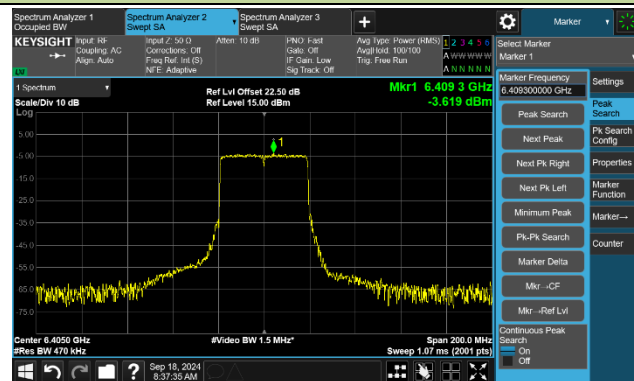


The Mask Data

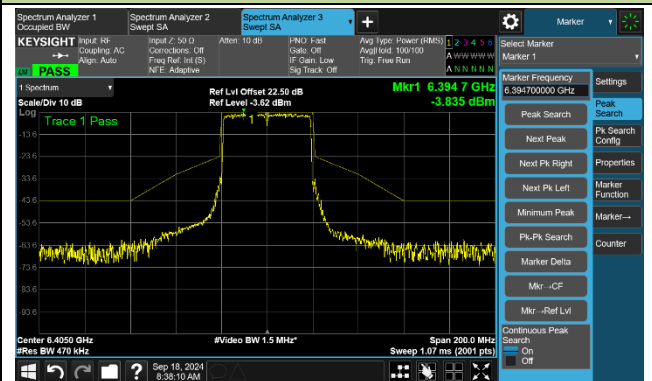 


802.11ax-HE40 - Ant 0

Channel 123 (6565MHz)

 The Reference Level

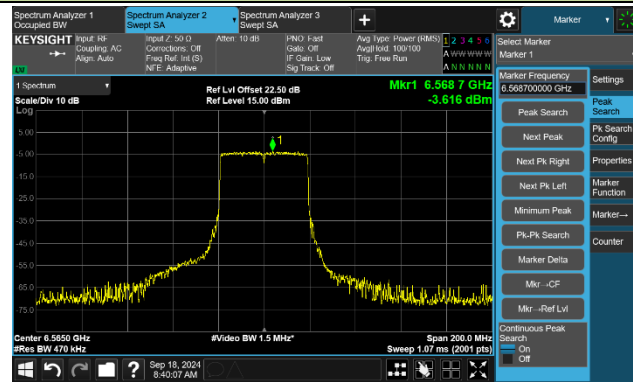


The Mask Data

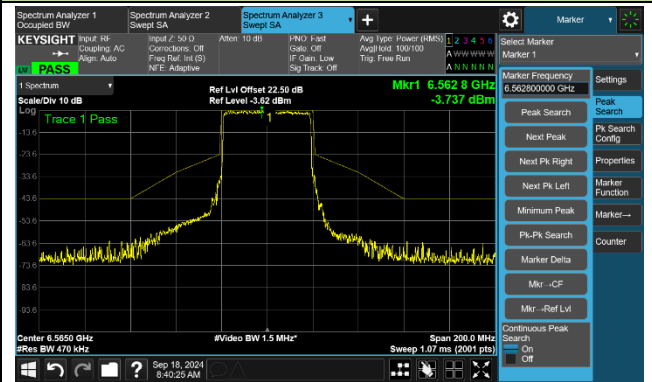 


Channel 147 (6685MHz)

 The Reference Level

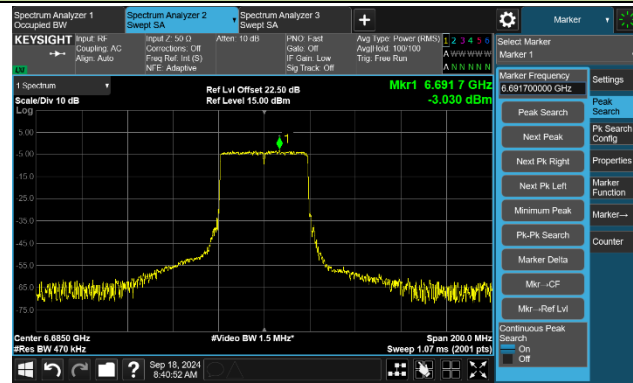


The Mask Data

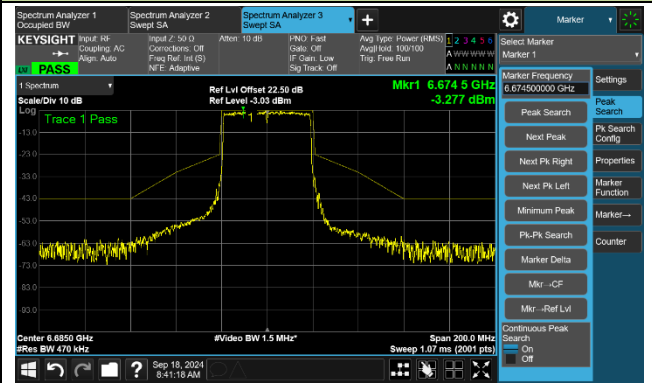 


Channel 179 (6845MHz)

 The Reference Level

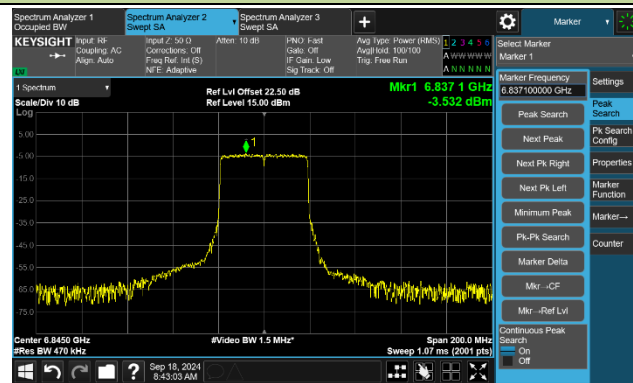


The Mask Data

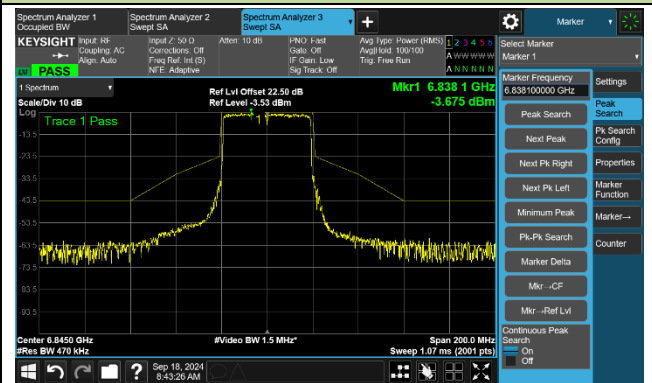 


802.11ax-HE80 - Ant 0

Channel 7 (5985MHz)

 The Reference Level

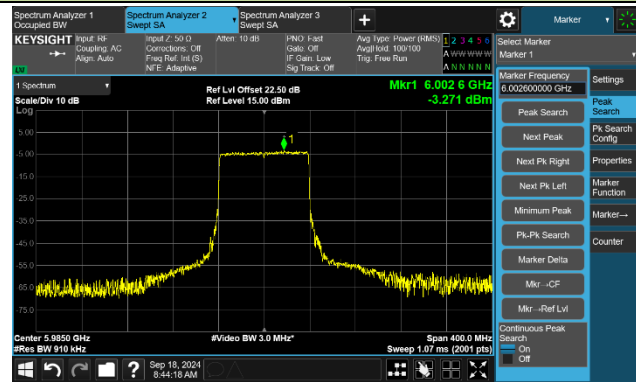


The Mask Data

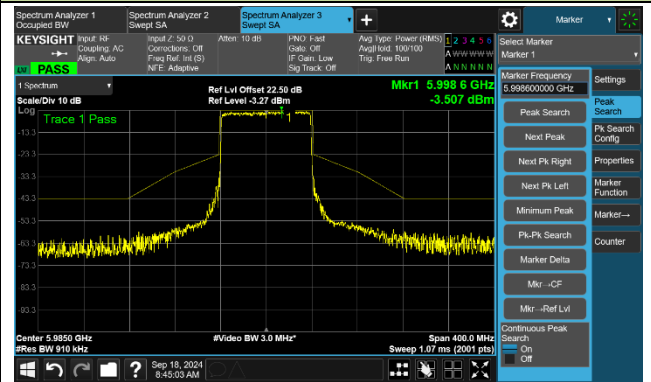 


Channel 55 (6225MHz)

 The Reference Level

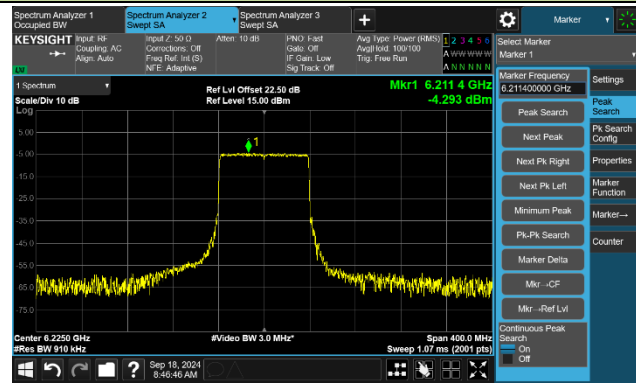


The Mask Data

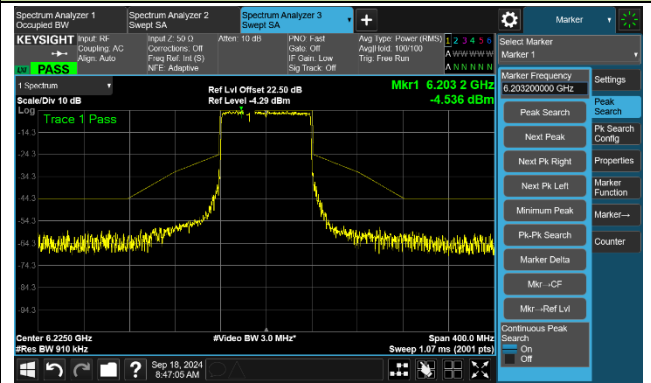 


Channel 87 (6385MHz)

 The Reference Level

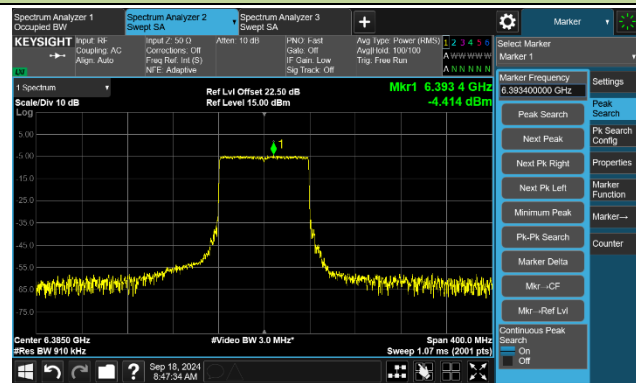


The Mask Data

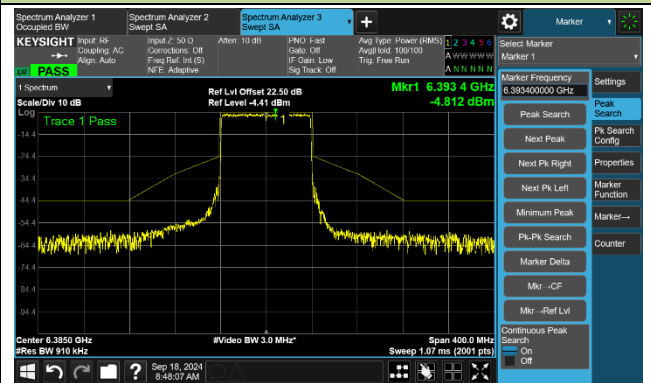 


802.11ax-HE80 - Ant 0

Channel 135 (6625MHz)

 The Reference Level

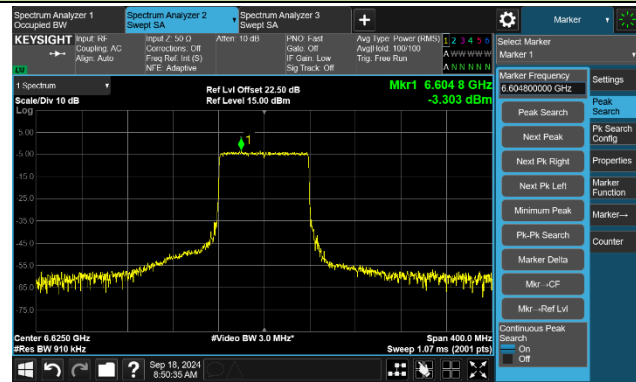


The Mask Data

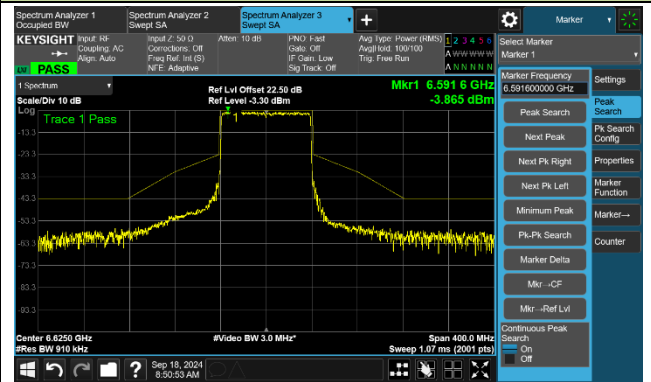 


Channel 151 (6705MHz)

 The Reference Level

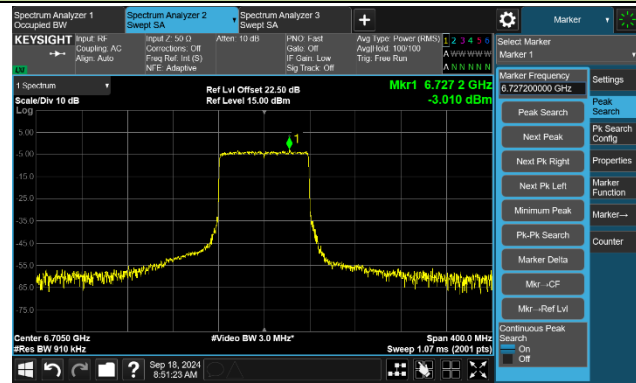


The Mask Data

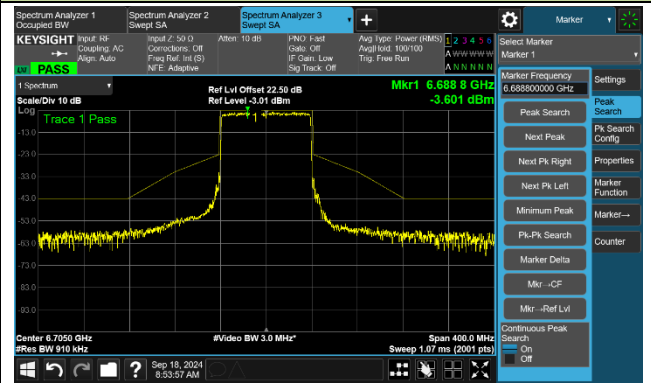 


Channel 167 (6785MHz)

 The Reference Level

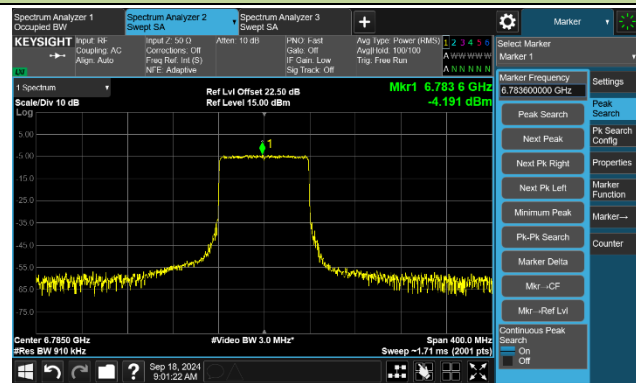


The Mask Data

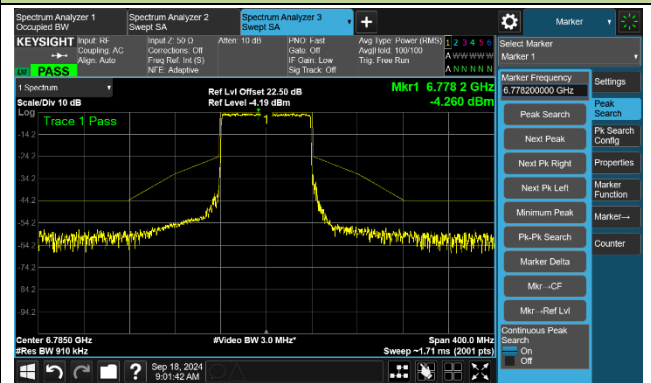 


802.11ax-HE160 - Ant 0

Channel 15 (6025MHz)

 The Reference Level

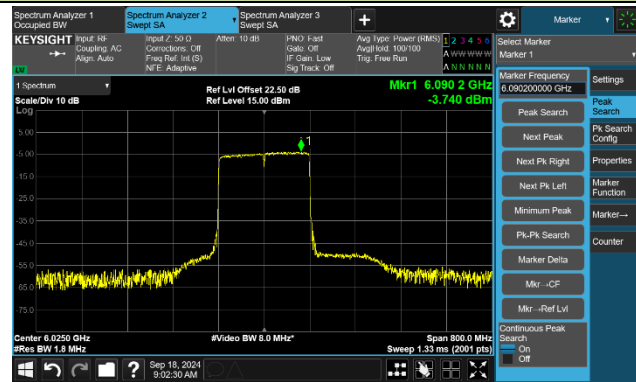


The Mask Data

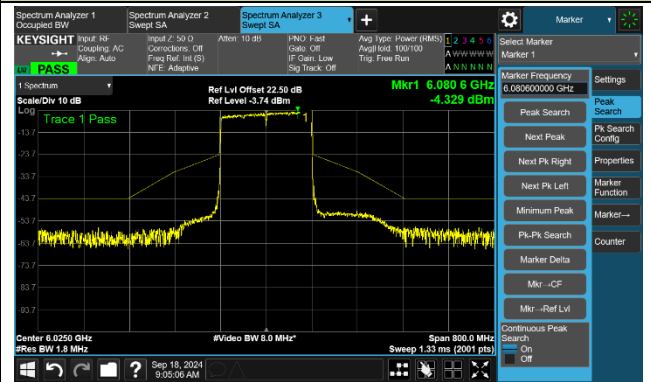 


Channel 47 (6185MHz)

 The Reference Level

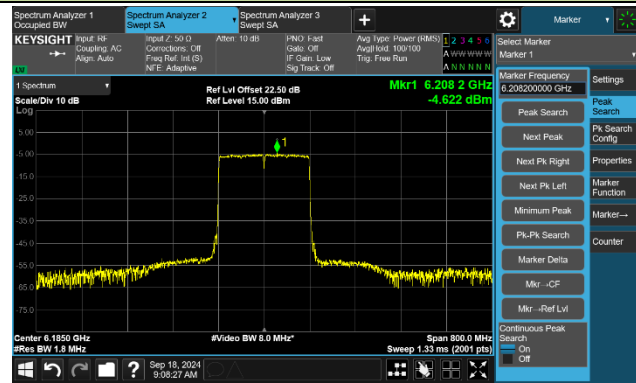


The Mask Data

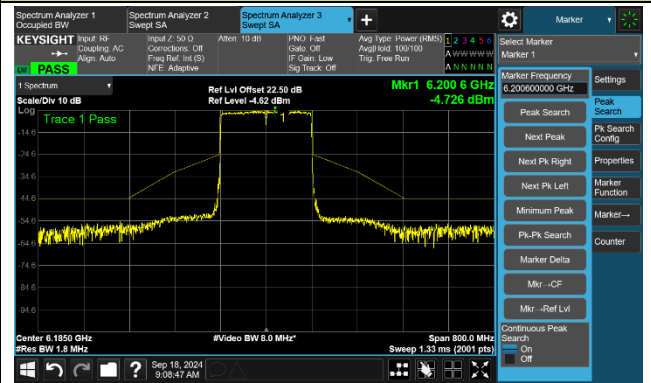 


Channel 79 (6345MHz)

 The Reference Level

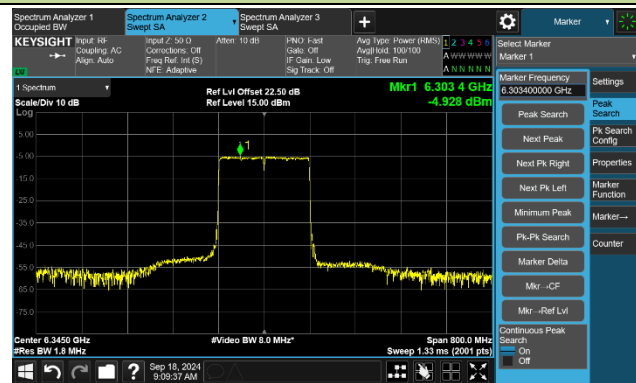


The Mask Data

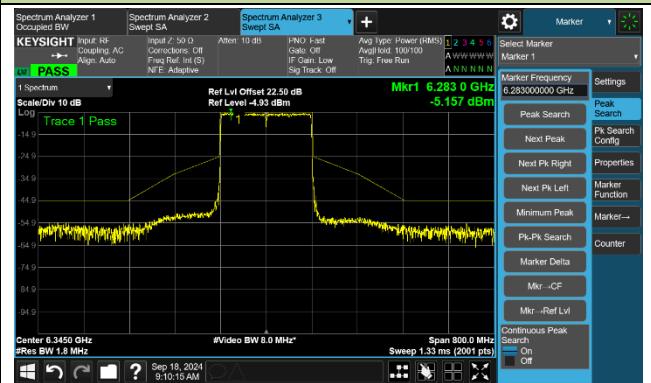 


802.11ax-HE160 - Ant 0

Channel 143 (6665MHz)

 The Reference Level

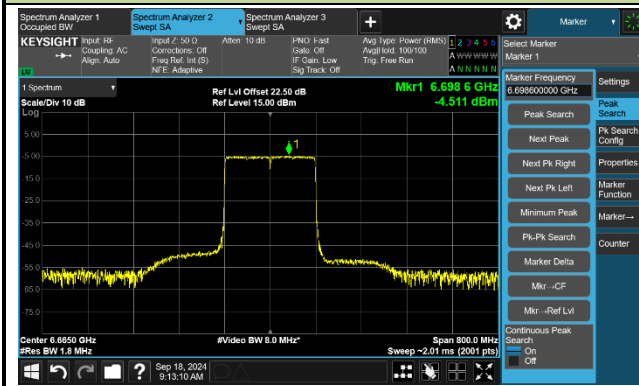


The Mask Data

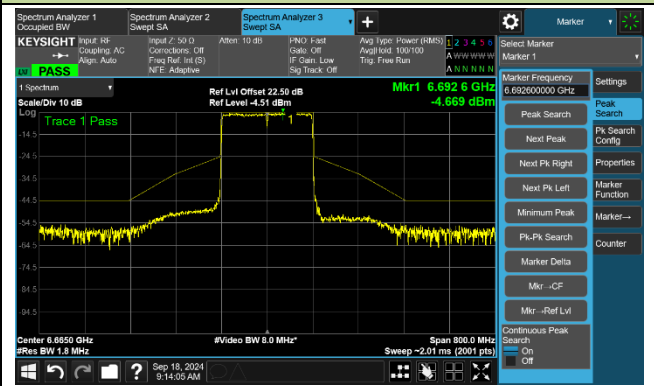 


802.11ax-HE20 - Ant 1

Channel 1 (5955MHz)

 The Reference Level

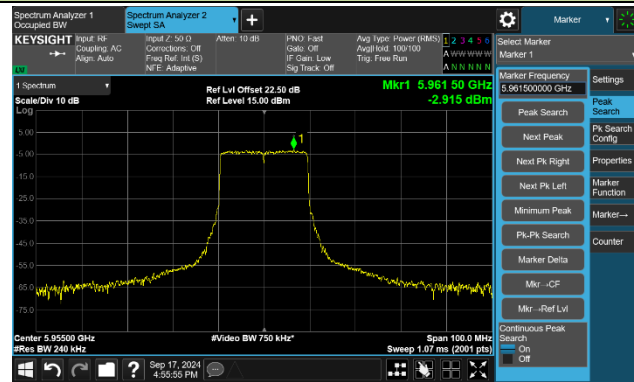


The Mask Data

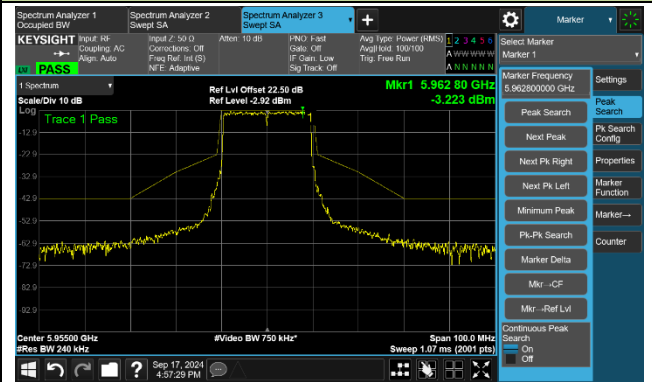 


Channel 49 (6195MHz)

 The Reference Level

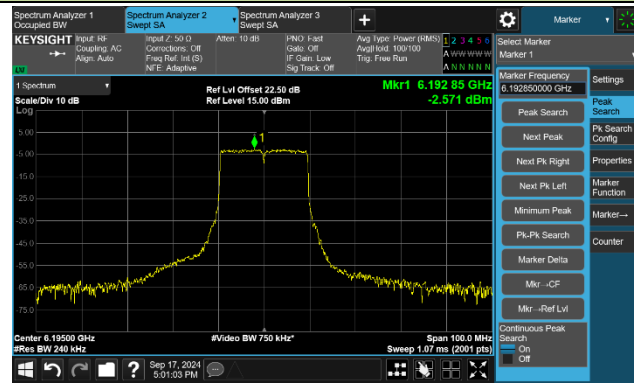


The Mask Data

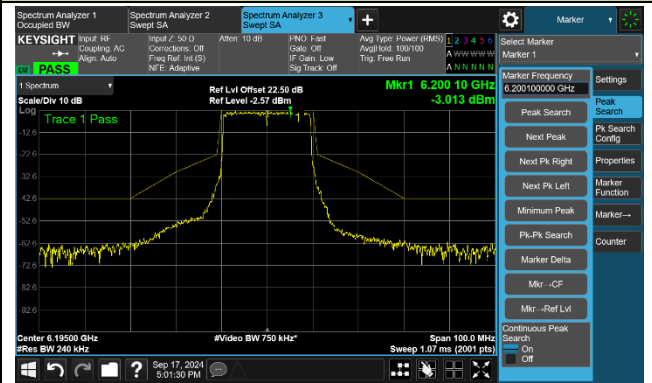 


Channel 93 (6415MHz)

 The Reference Level

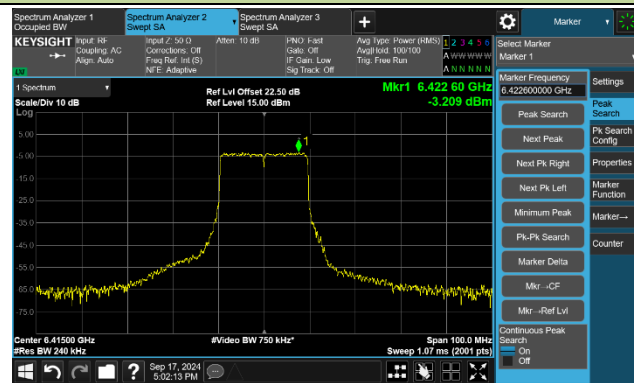


The Mask Data

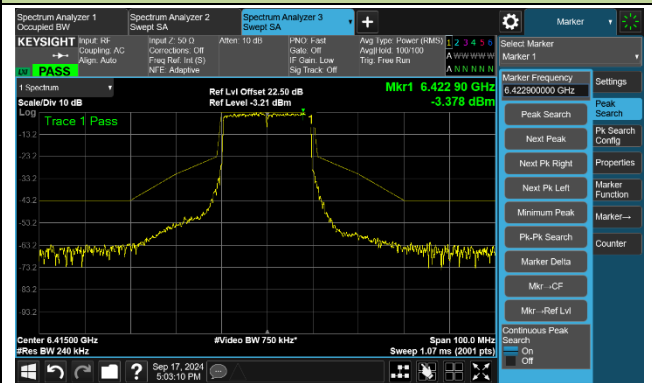 


802.11ax-HE20 - Ant 1

Channel 117 (6535MHz)

 The Reference Level

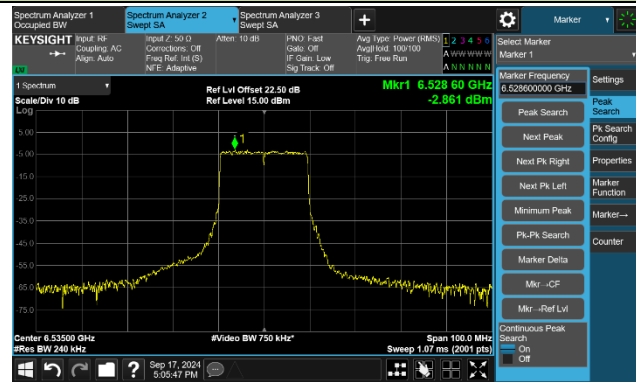


The Mask Data

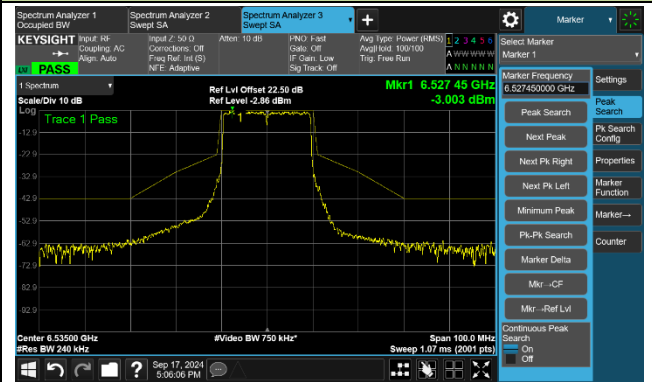 


Channel 153 (6715MHz)

 The Reference Level

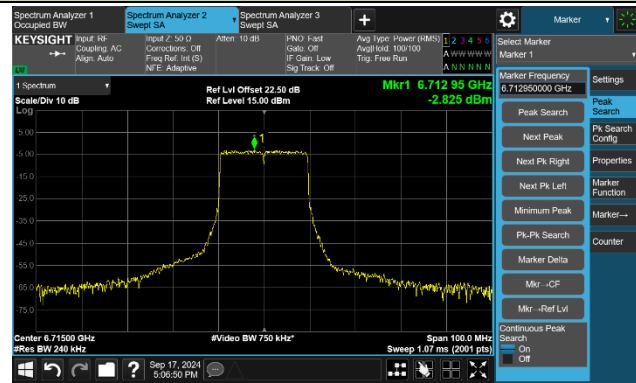


The Mask Data

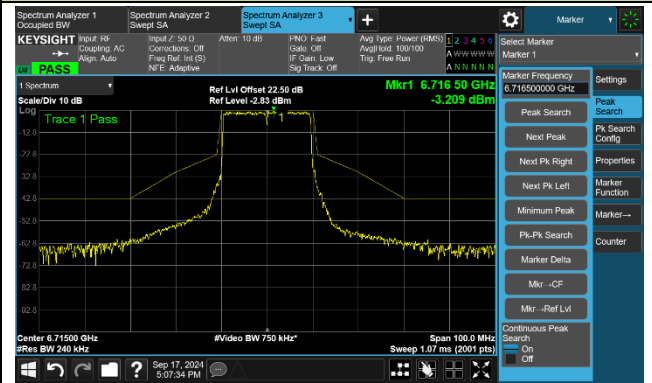 


Channel 181 (6855MHz)

 The Reference Level

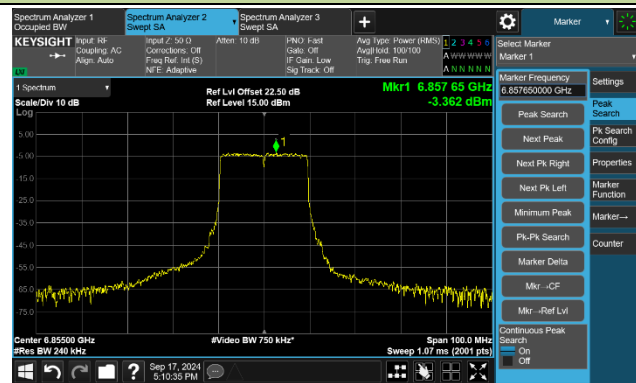


The Mask Data

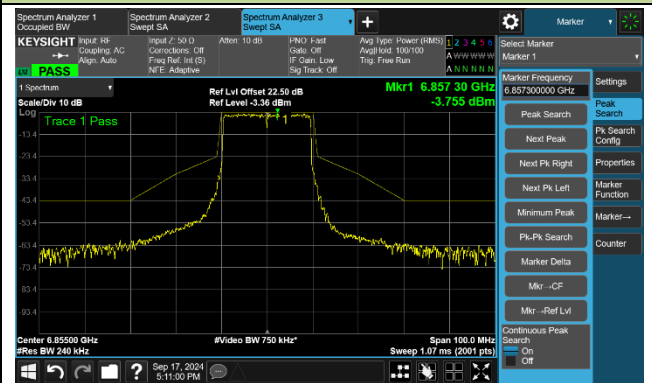 


802.11ax-HE40 - Ant 1

Channel 3 (5965MHz)

 The Reference Level

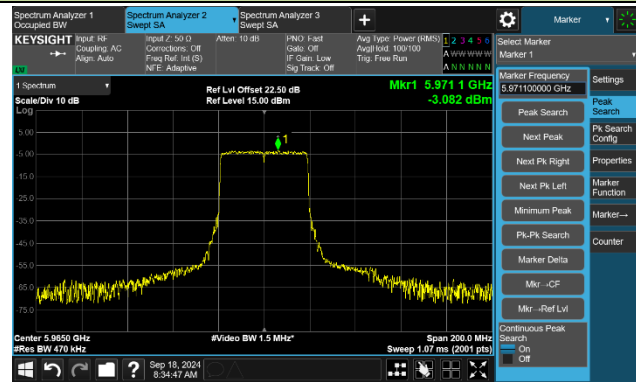


The Mask Data

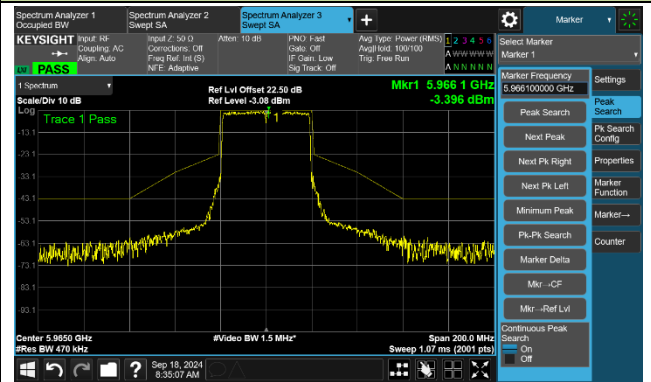 


Channel 51 (6205MHz)

 The Reference Level

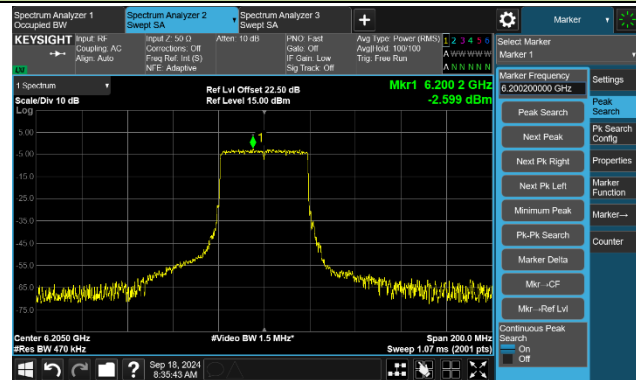


The Mask Data

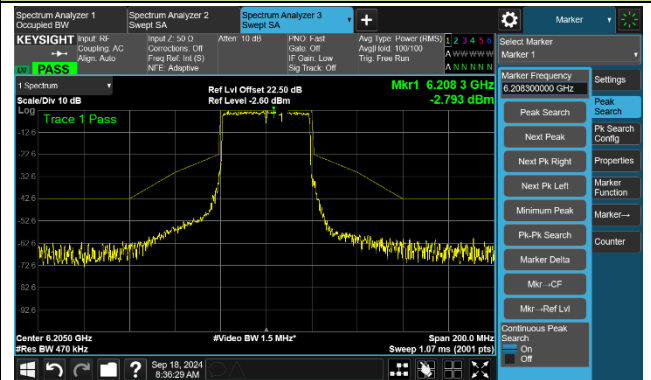 


Channel 91 (6405MHz)

 The Reference Level

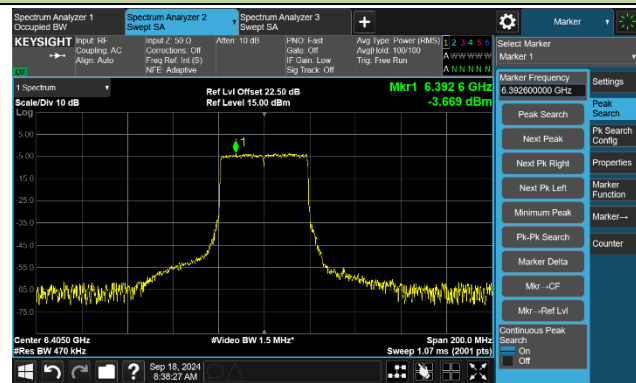


The Mask Data

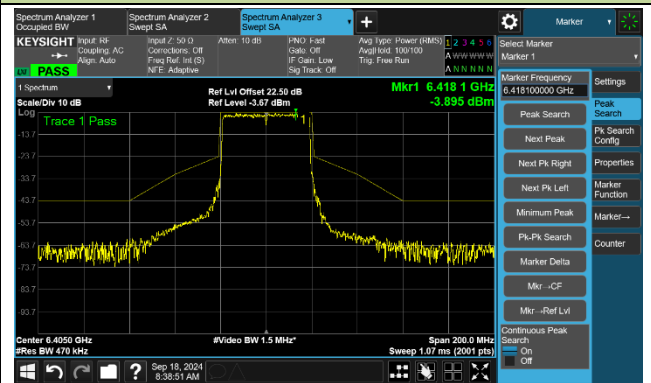 


802.11ax-HE40 - Ant 1

Channel 123 (6565MHz)

 The Reference Level

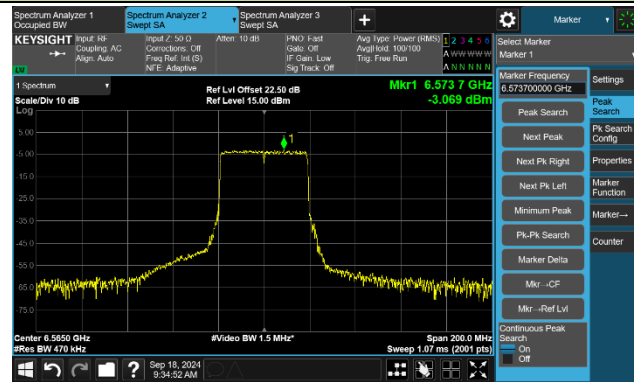


The Mask Data

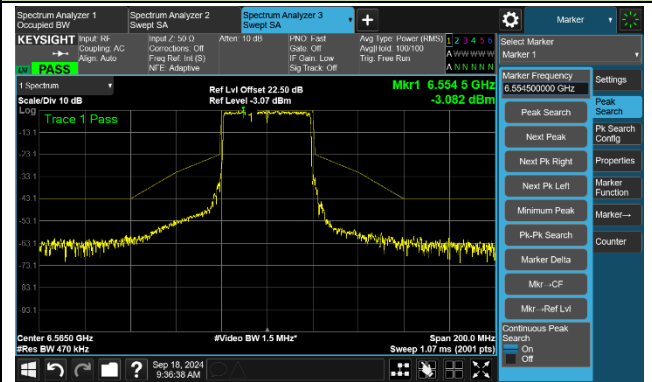 


Channel 147 (6685MHz)

 The Reference Level

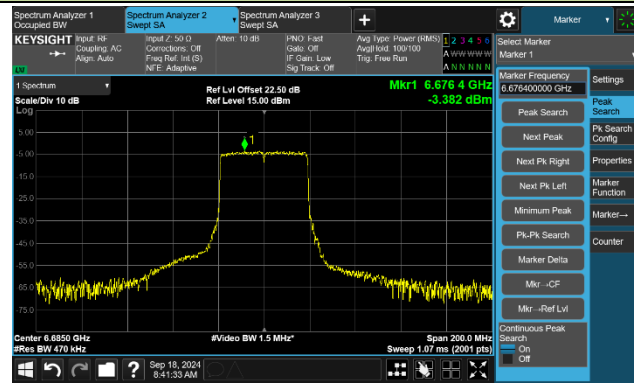


The Mask Data

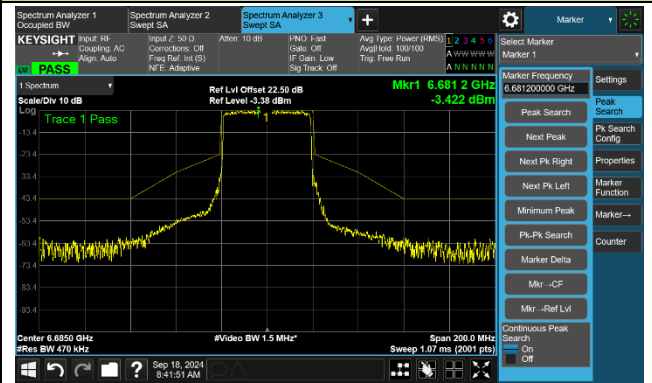 


Channel 179 (6845MHz)

 The Reference Level

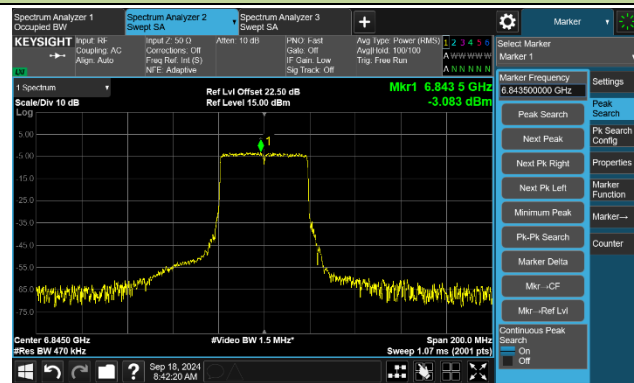


The Mask Data

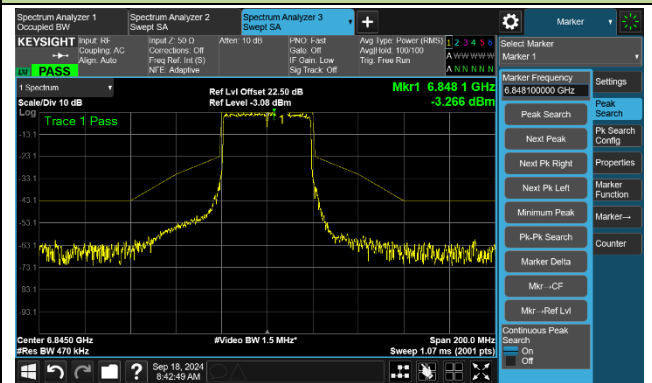 


802.11ax-HE80 - Ant 1

Channel 7 (5985MHz)

 The Reference Level

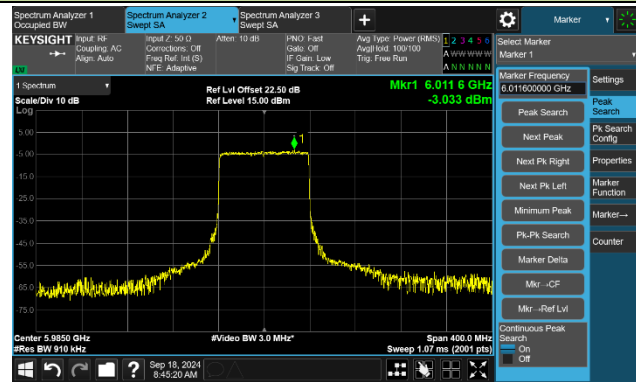


The Mask Data

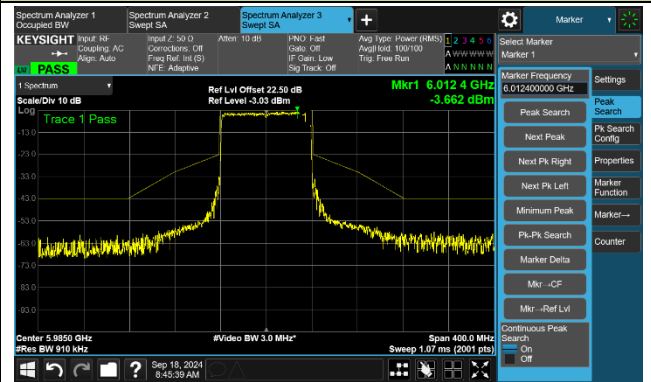 


Channel 55 (6225MHz)

 The Reference Level

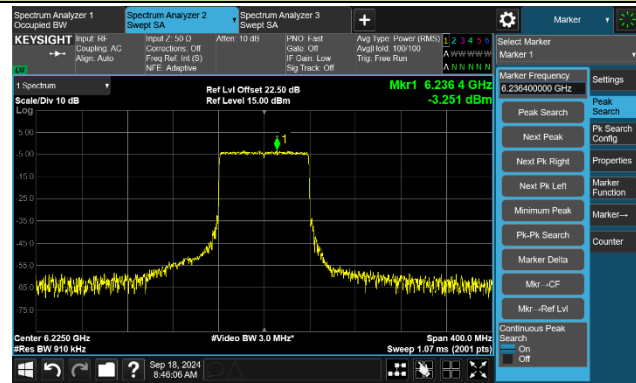


The Mask Data

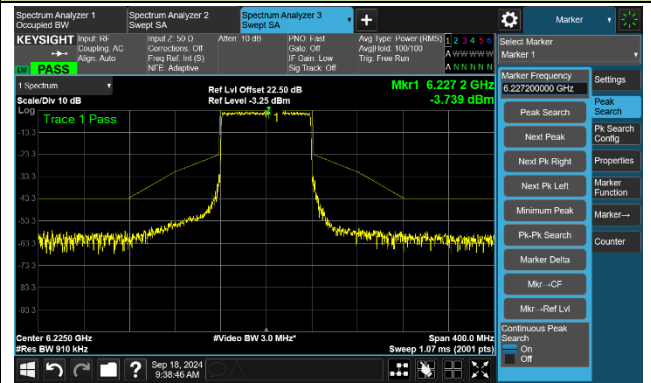 


Channel 87 (6385MHz)

 The Reference Level

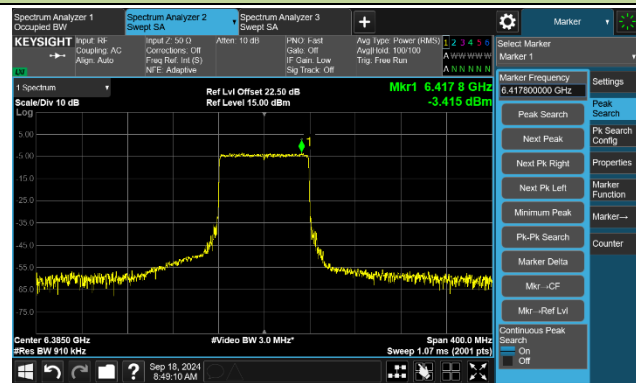


The Mask Data

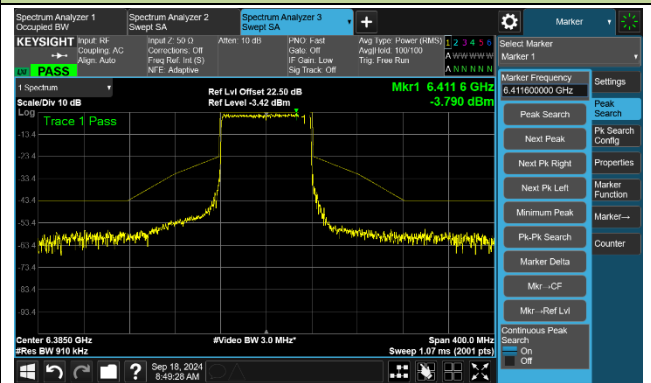 


802.11ax-HE80 - Ant 1

Channel 135 (6625MHz)

 The Reference Level

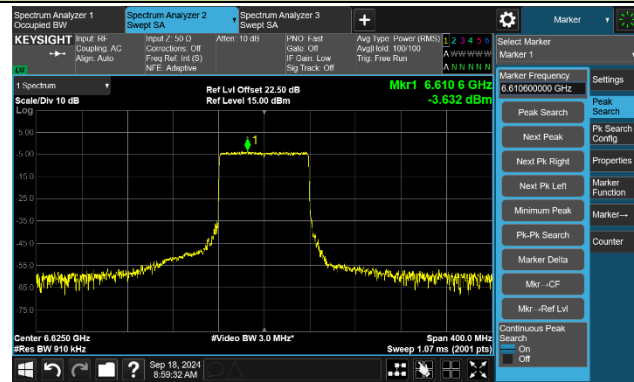


The Mask Data

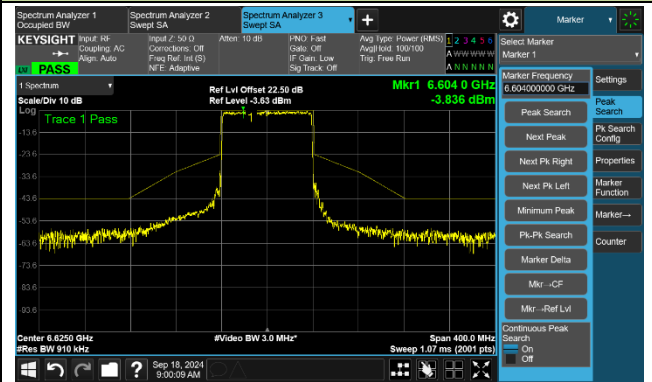 


Channel 151 (6705MHz)

 The Reference Level

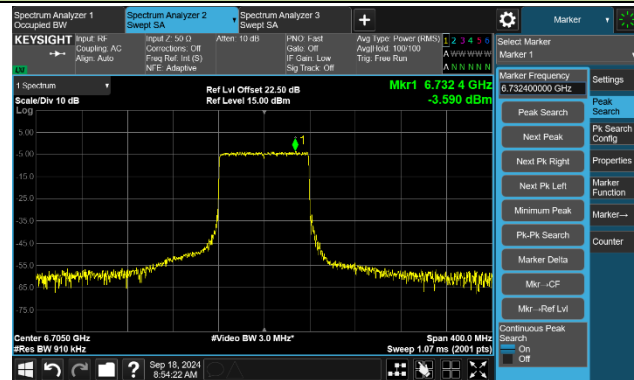


The Mask Data

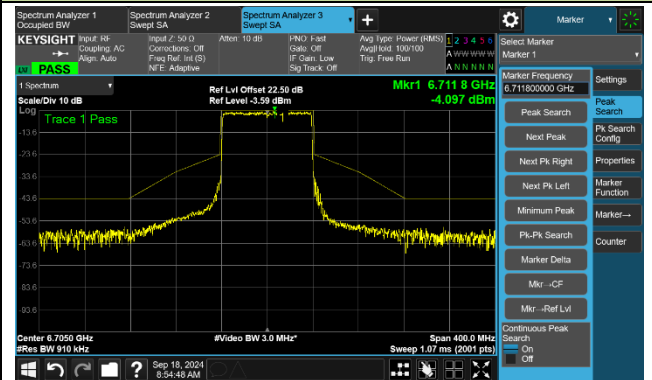 

Channel 167 (6785MHz)

 The Reference Level

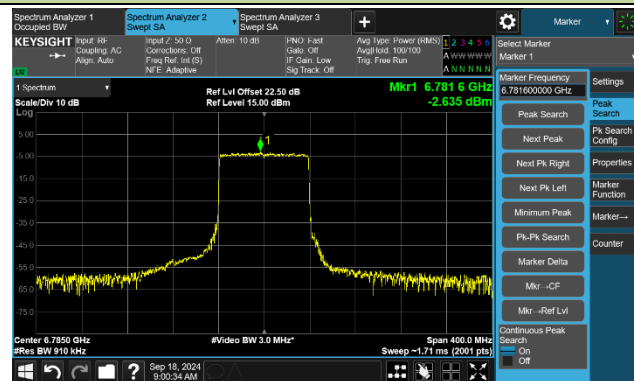

The Mask Data

