 



802.11ax-HE160 – Ant 1

Channel 15 (6025MHz)

The Reference Level

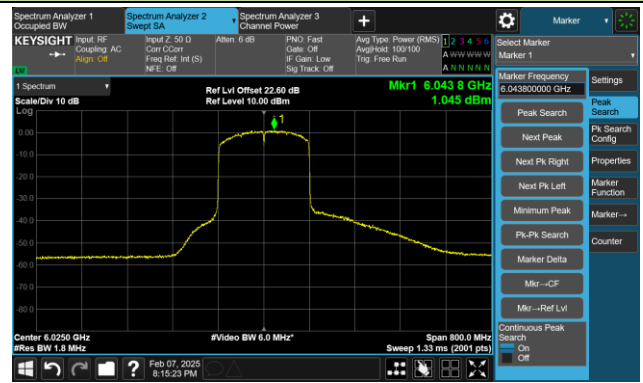


 The Mask Data

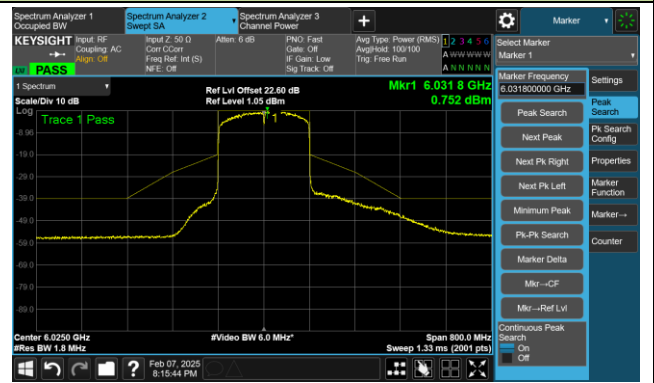


Channel 111 (6505MHz)

 The Reference Level

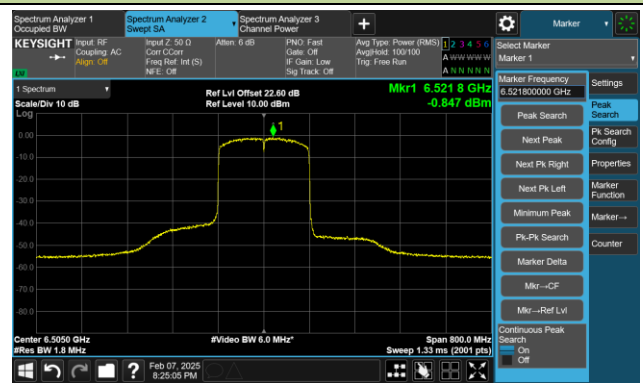


The Mask Data

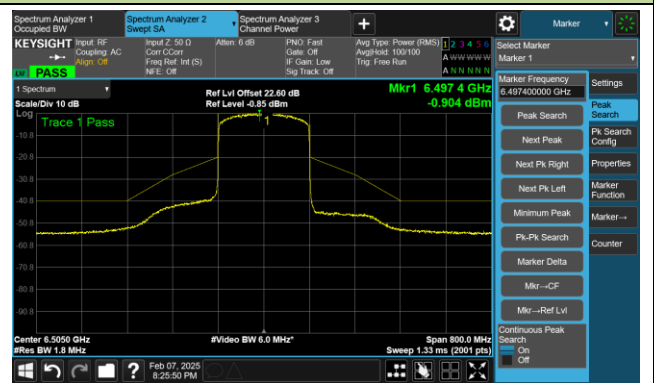 


Channel 143 (6665MHz)

 The Reference Level

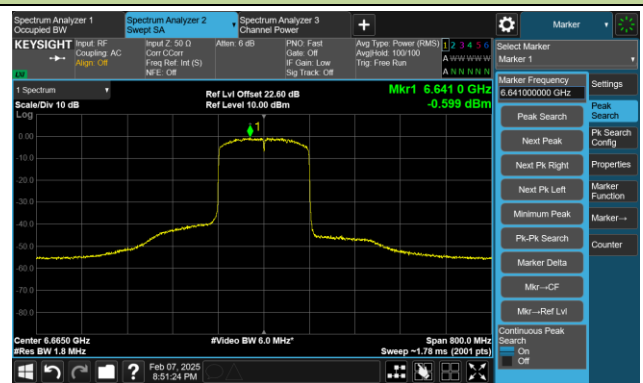


The Mask Data

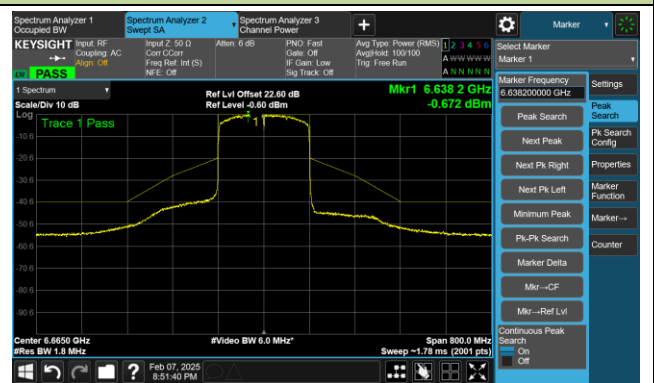 


802.11ax-HE160 – Ant 1

Channel 207 (6985MHz)

 The Reference Level

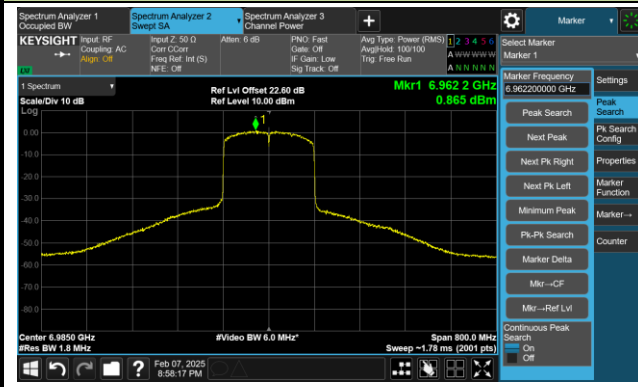


The Mask Data

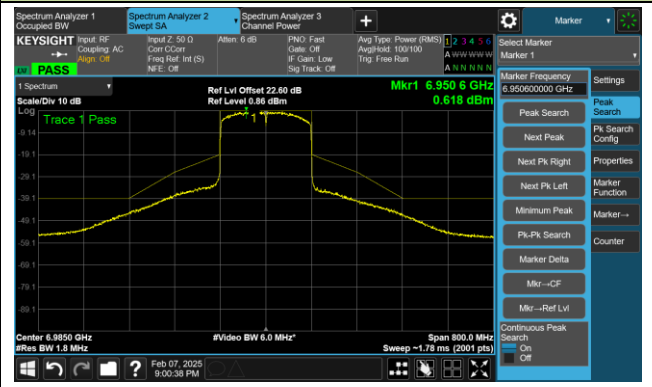 


802.11ax-HE20 – Ant 2

Channel 01 (5955MHz)

 The Reference Level

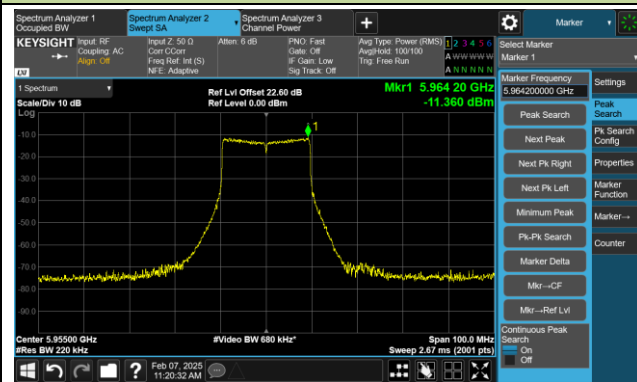


The Mask Data

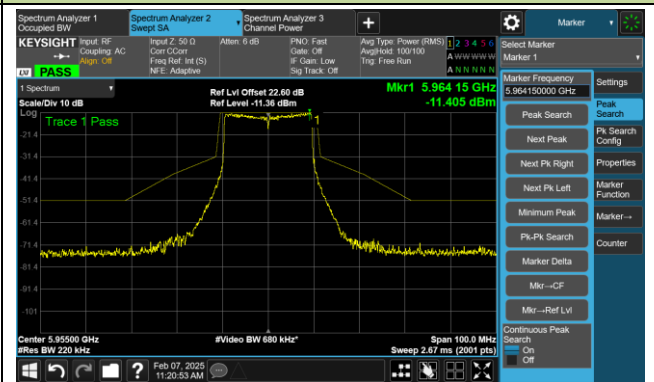 


Channel 97 (6435MHz)

 The Reference Level

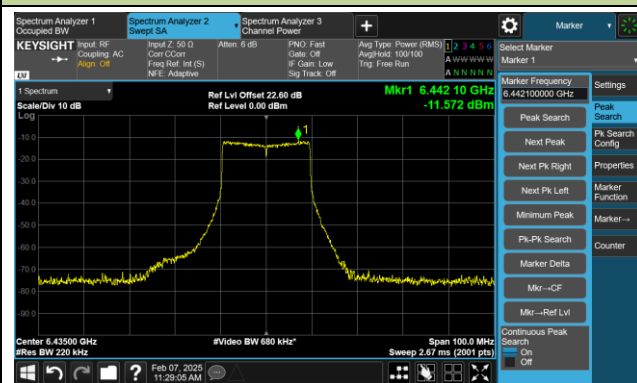


The Mask Data

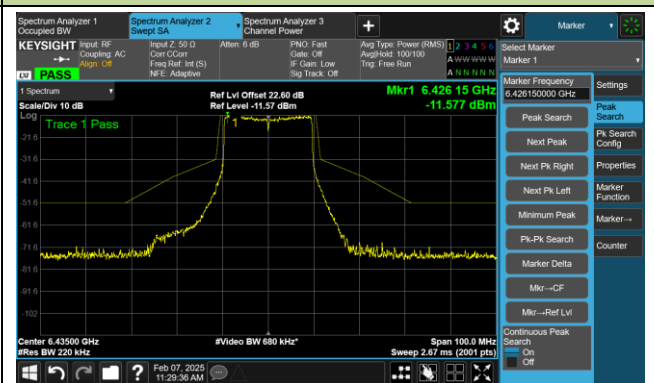 


Channel 117 (6535MHz)

 The Reference Level

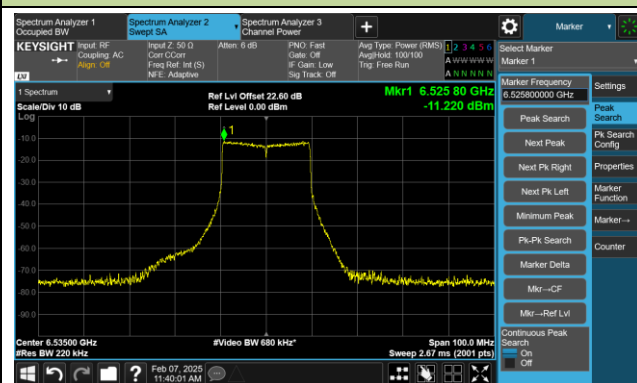


The Mask Data

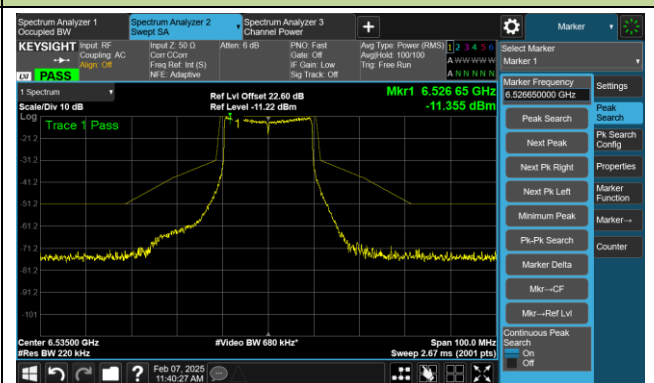 


802.11ax-HE20 – Ant 2

Channel 189 (6895MHz)

 The Reference Level

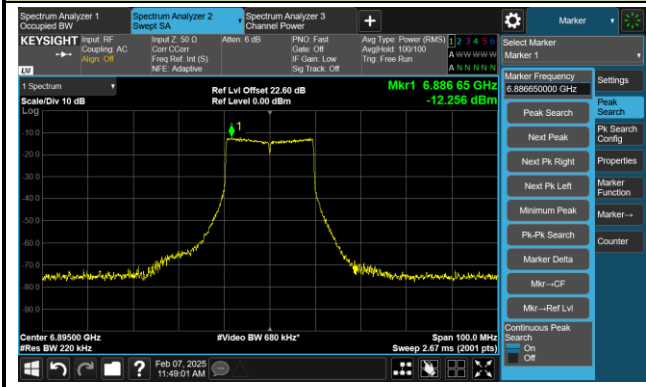


The Mask Data

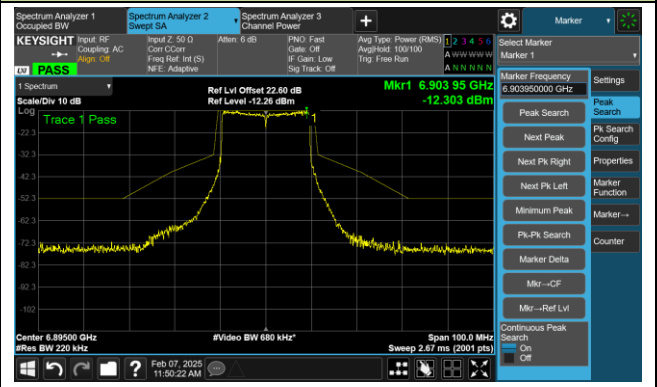 


802.11ax-HE40 – Ant 2

Channel 03 (5965MHz)

 The Reference Level

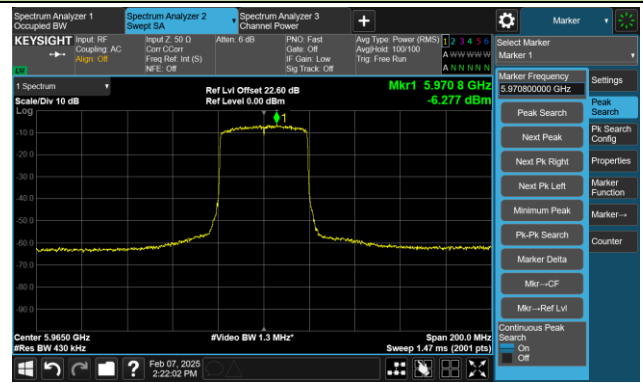


The Mask Data

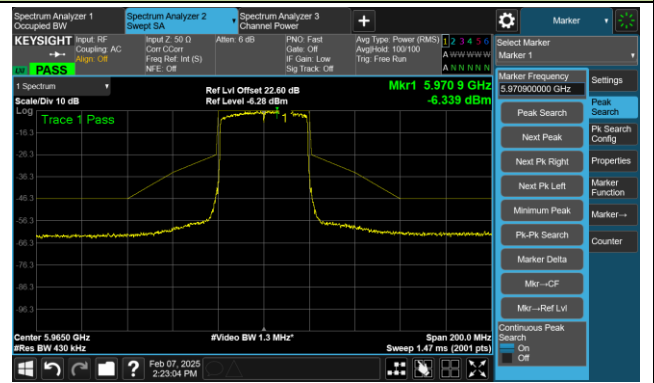 


Channel 99 (6445MHz)

 The Reference Level

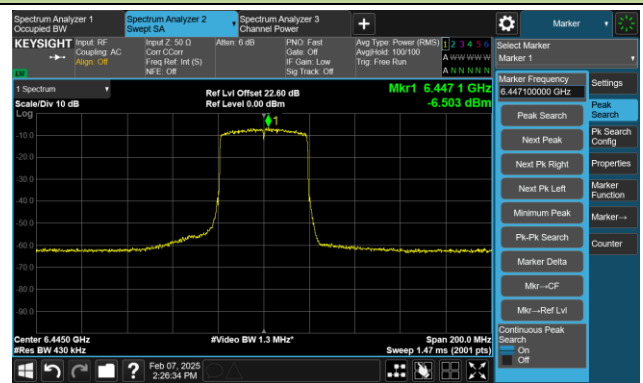


The Mask Data

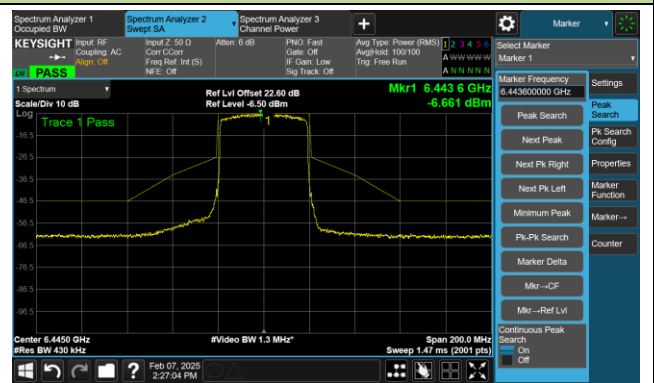 


Channel 123 (6565MHz)

 The Reference Level

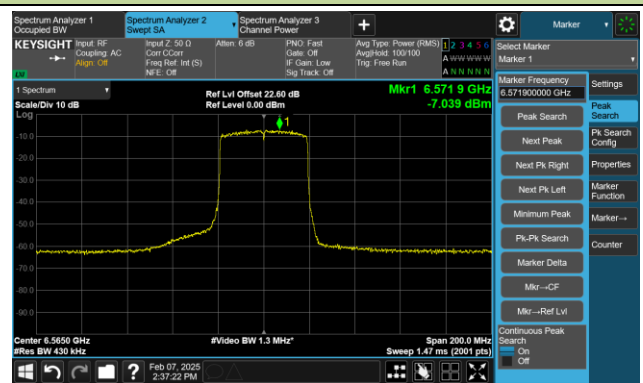


The Mask Data

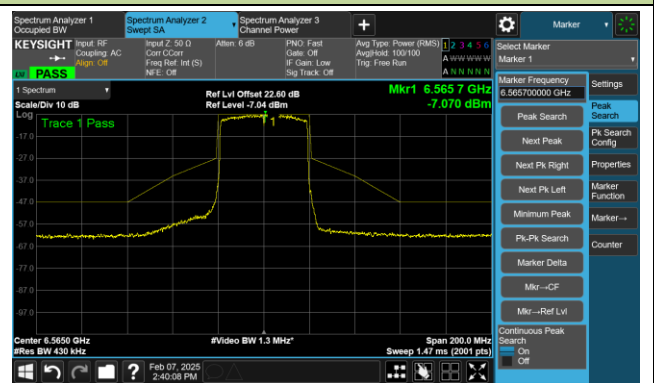 


802.11ax-HE40 – Ant 2

Channel 195 (6925MHz)

 The Reference Level

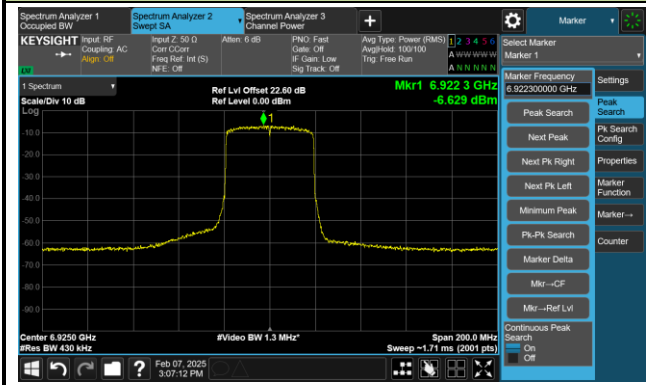


The Mask Data

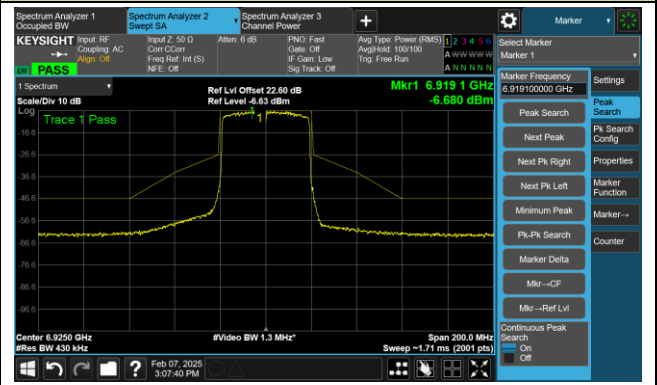 


802.11ax-HE80 – Ant 2

Channel 07 (5985MHz)

 The Reference Level

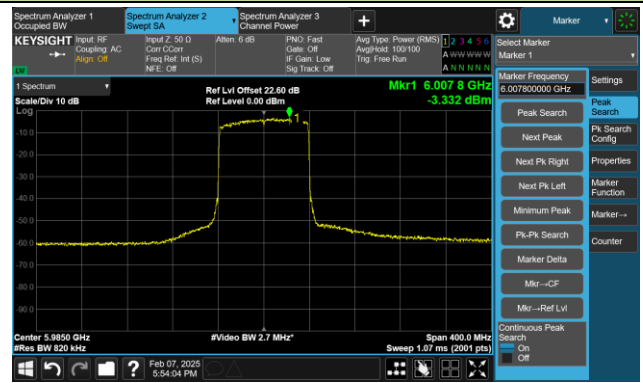


The Mask Data

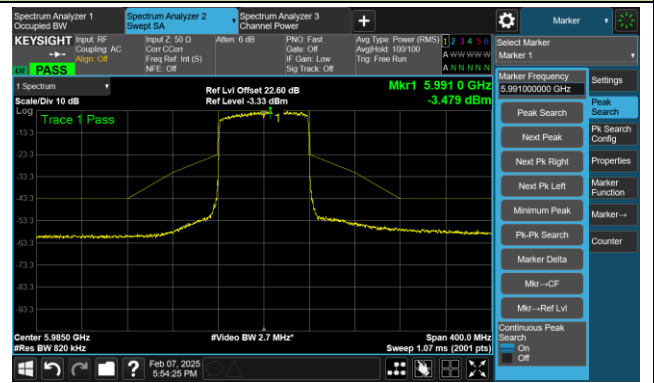 


Channel 103 (6465MHz)

 The Reference Level

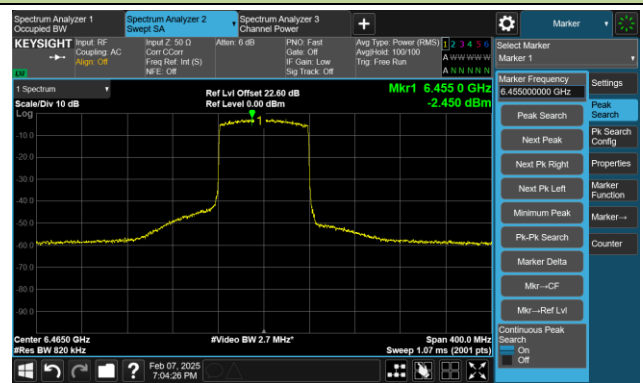


The Mask Data

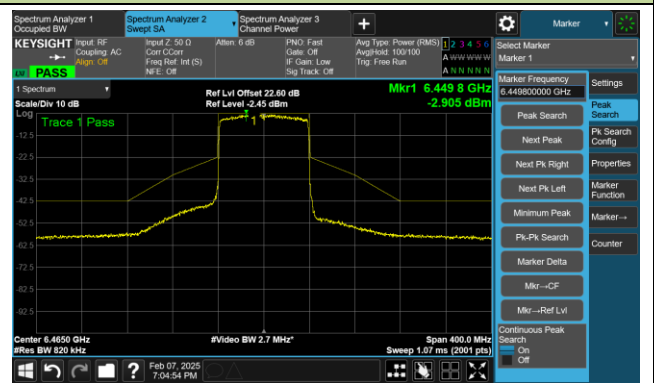 


Channel 135 (6625MHz)

 The Reference Level

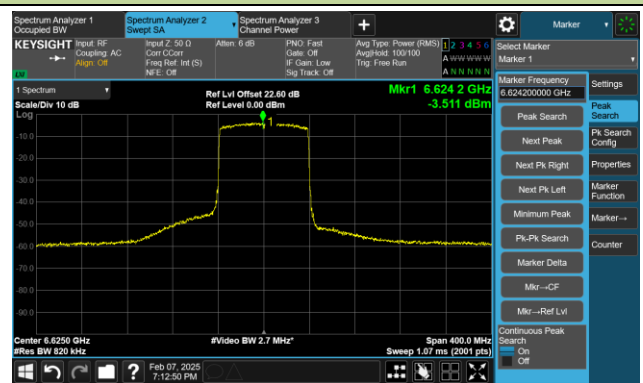


The Mask Data

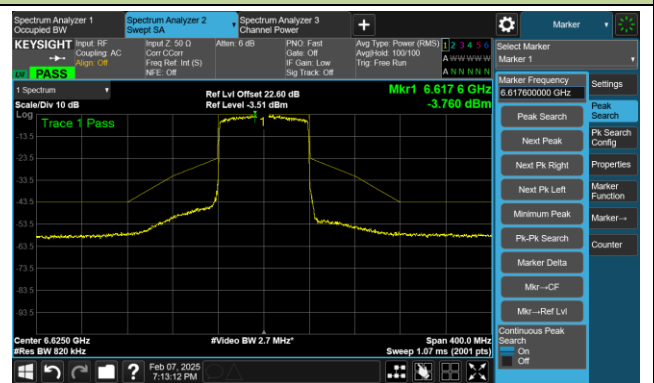 


802.11ax-HE80 – Ant 2

Channel 199 (6945MHz)

 The Reference Level

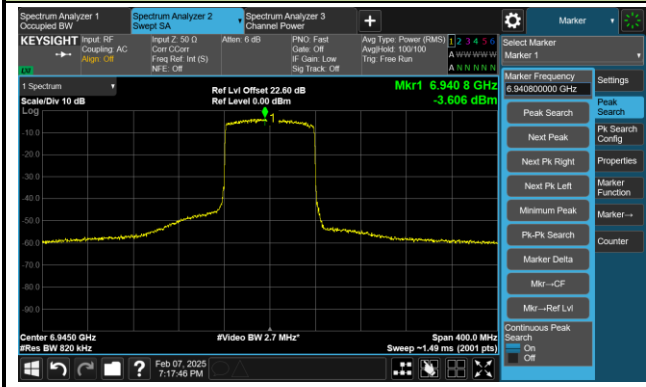


The Mask Data

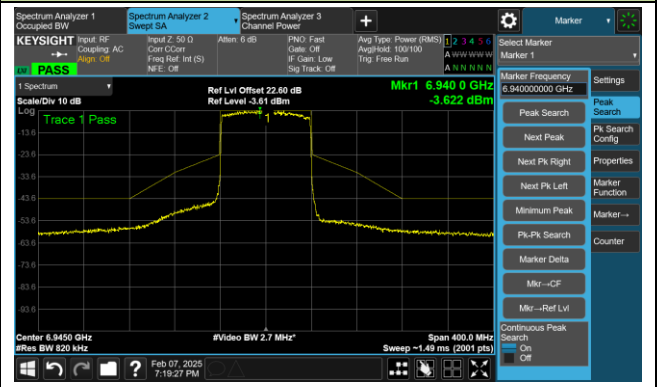 


802.11ax-HE160 – Ant 2

Channel 15 (6025MHz)

 The Reference Level

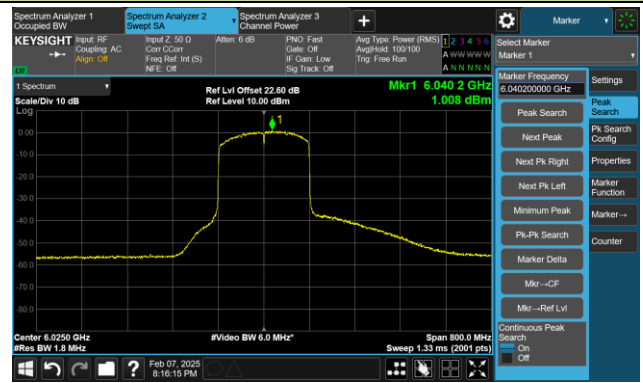


The Mask Data

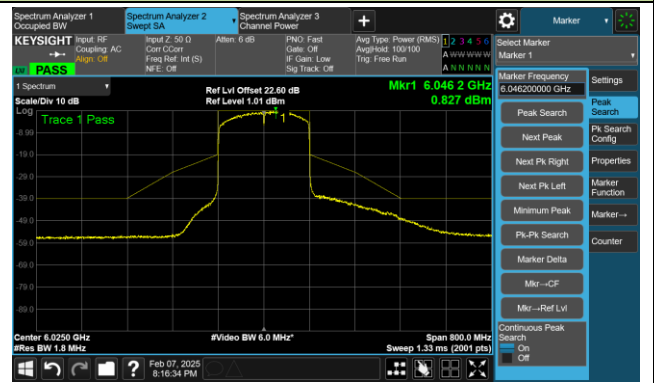 


Channel 111 (6505MHz)

 The Reference Level

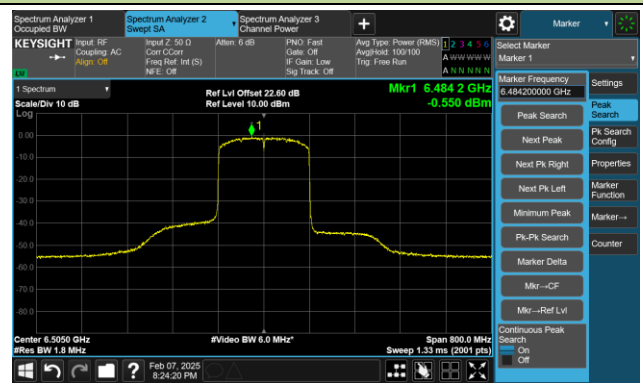


The Mask Data

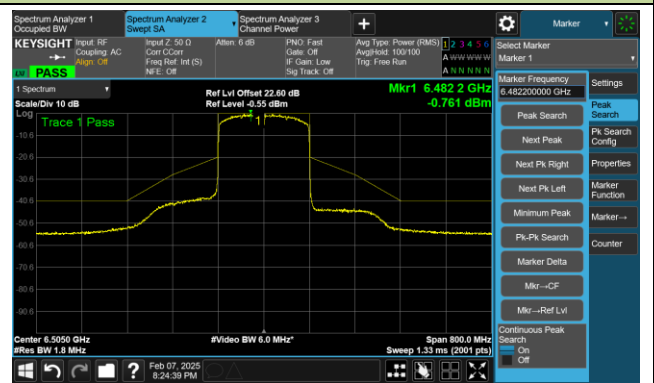 


Channel 143 (6665MHz)

 The Reference Level

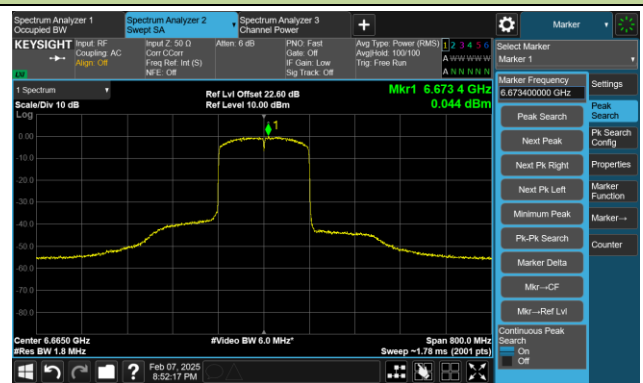


The Mask Data

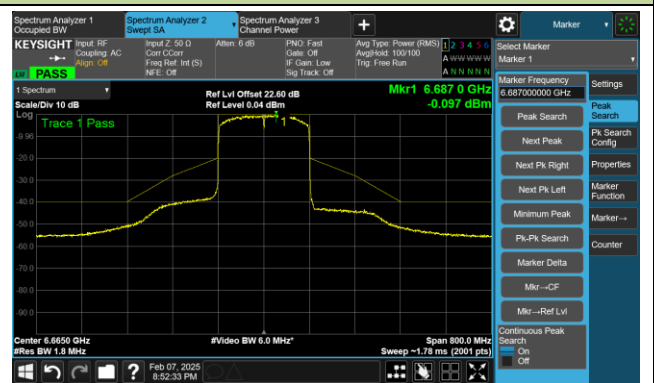 


802.11ax-HE160 – Ant 2

Channel 207 (6985MHz)

 The Reference Level

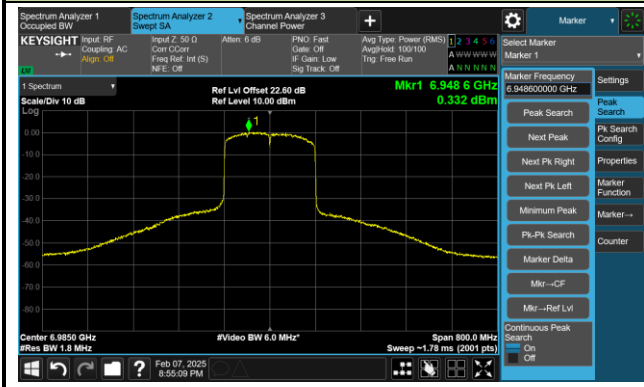


The Mask Data

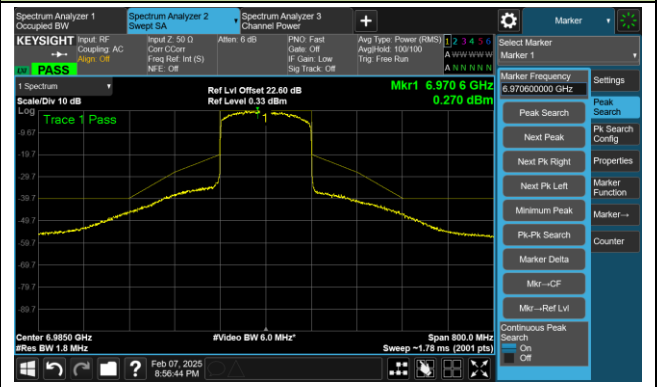 


802.11ax-HE20 – Ant 3

Channel 01 (5955MHz)

 The Reference Level

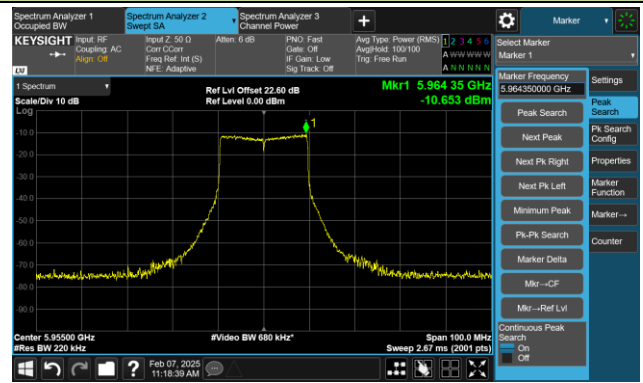


The Mask Data

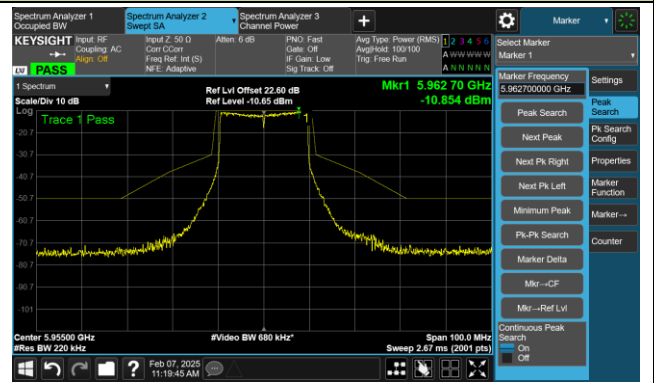 


Channel 97 (6435MHz)

 The Reference Level

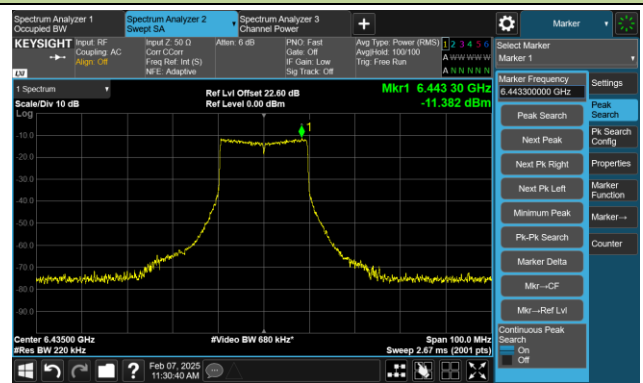


The Mask Data

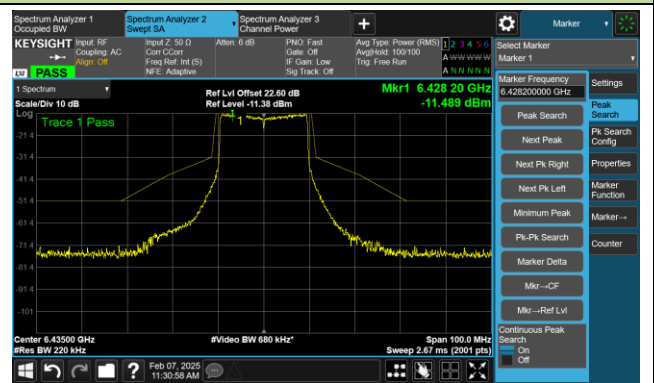 


Channel 117 (6535MHz)

 The Reference Level

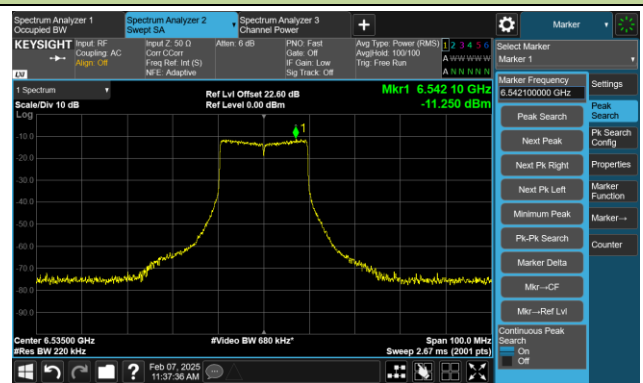


The Mask Data

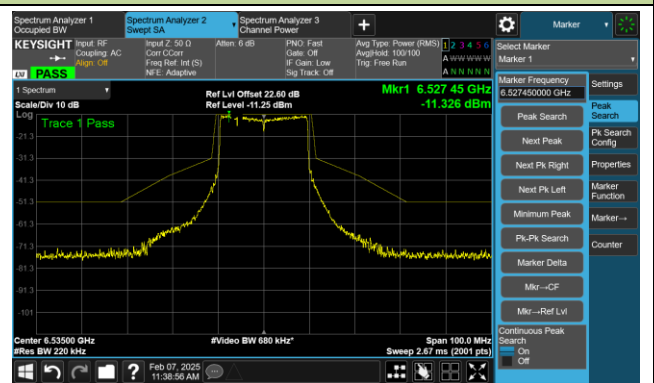 


802.11ax-HE20 – Ant 3

Channel 189 (6895MHz)

 The Reference Level

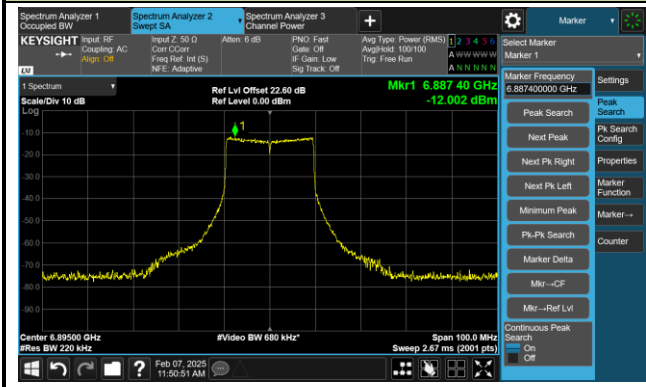


The Mask Data

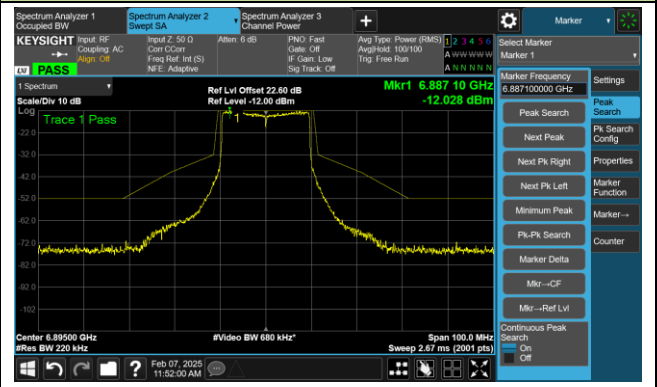 


802.11ax-HE40 – Ant 3

Channel 03 (5965MHz)

 The Reference Level

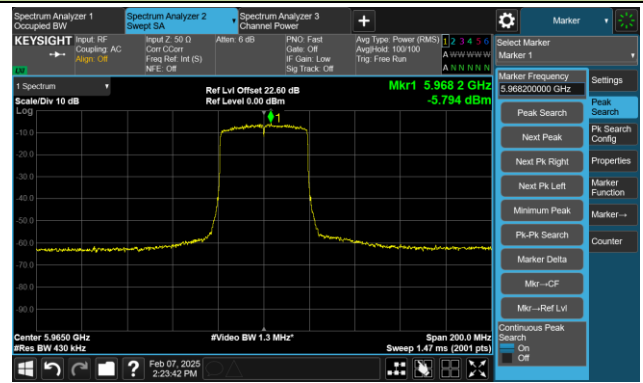


The Mask Data

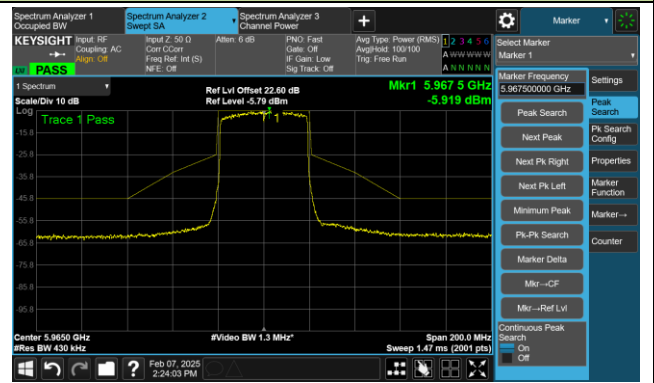 


Channel 99 (6445MHz)

 The Reference Level

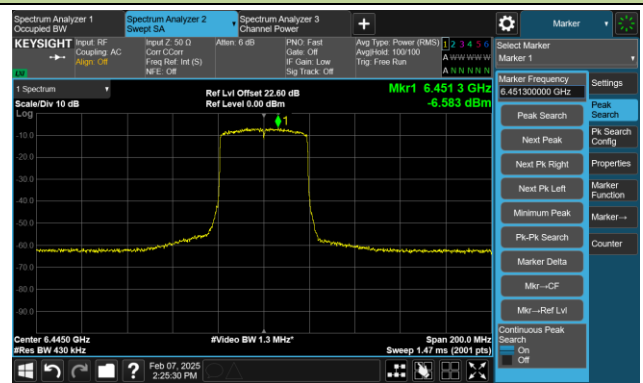


The Mask Data

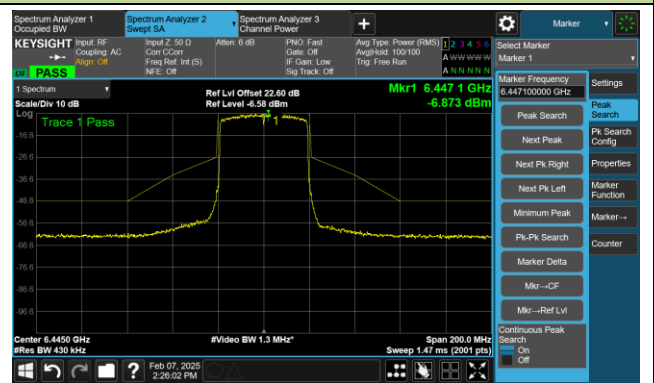 


Channel 123 (6565MHz)

 The Reference Level

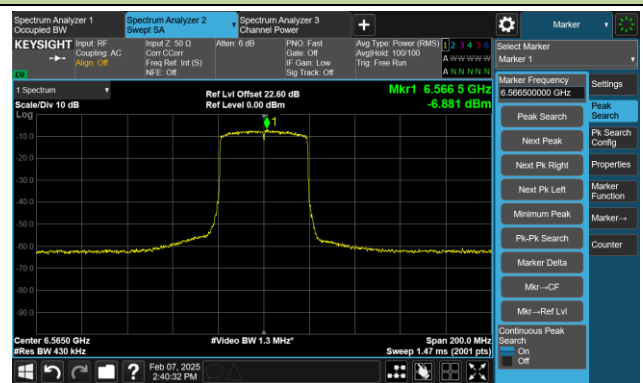


The Mask Data

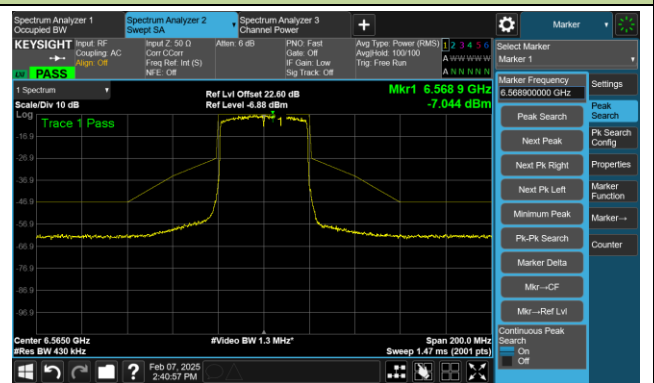 


802.11ax-HE40 – Ant 3

Channel 195 (6925MHz)

 The Reference Level

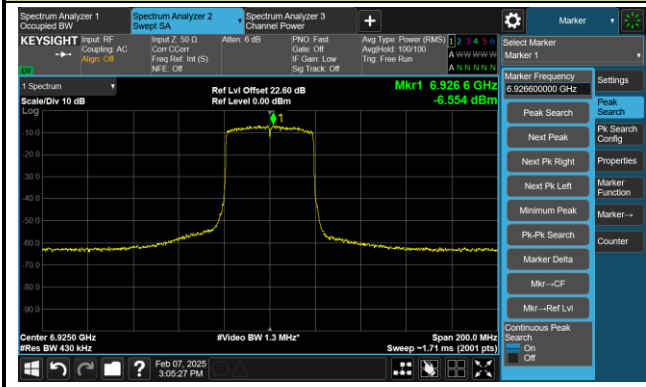


The Mask Data

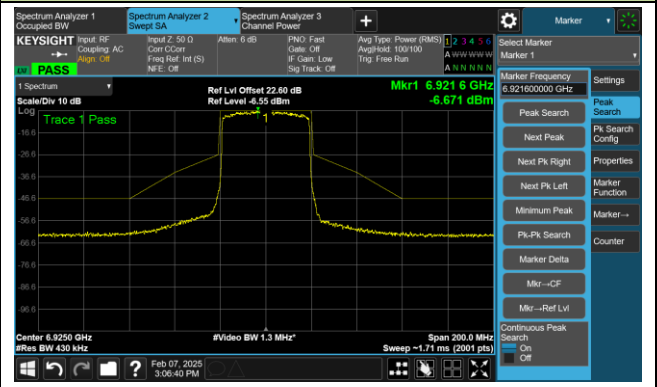 


802.11ax-HE80 – Ant 3

Channel 07 (5985MHz)

 The Reference Level

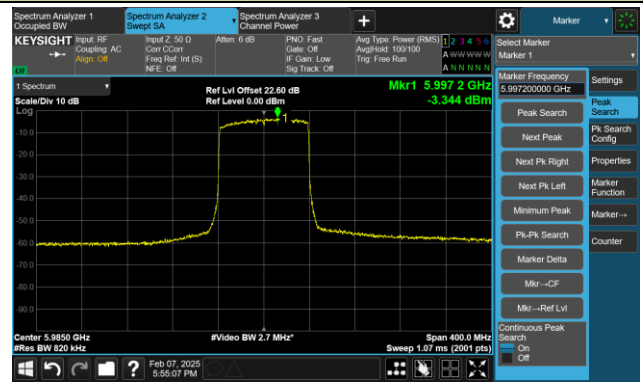


The Mask Data

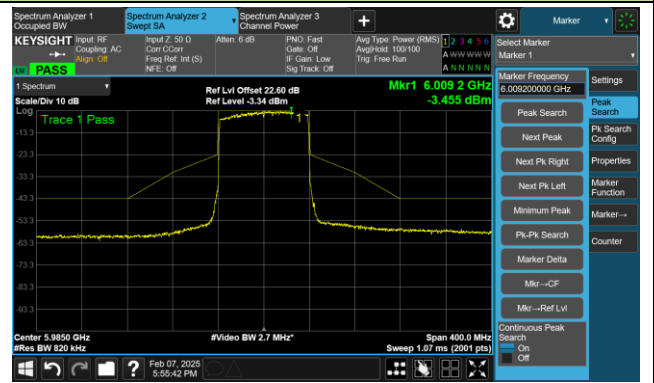 


Channel 103 (6465MHz)

 The Reference Level

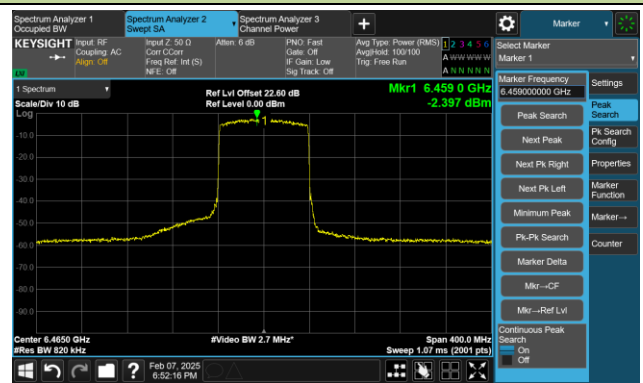


The Mask Data

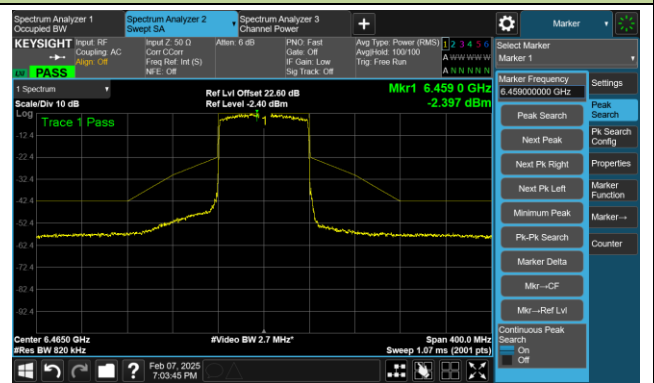 


Channel 135 (6625MHz)

 The Reference Level

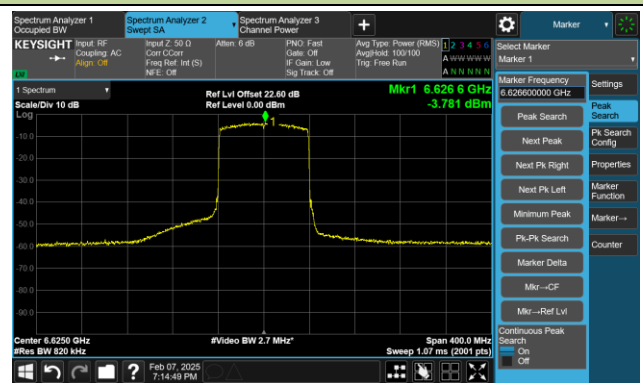


The Mask Data

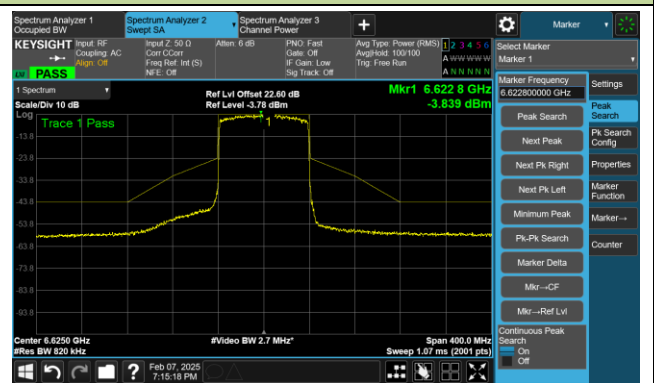 


802.11ax-HE80 – Ant 3

Channel 199 (6945MHz)

 The Reference Level

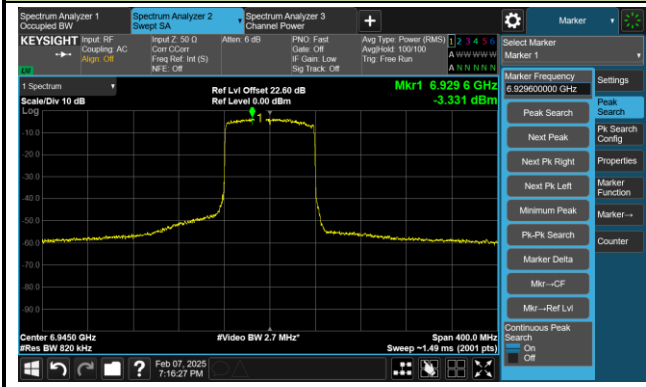


The Mask Data

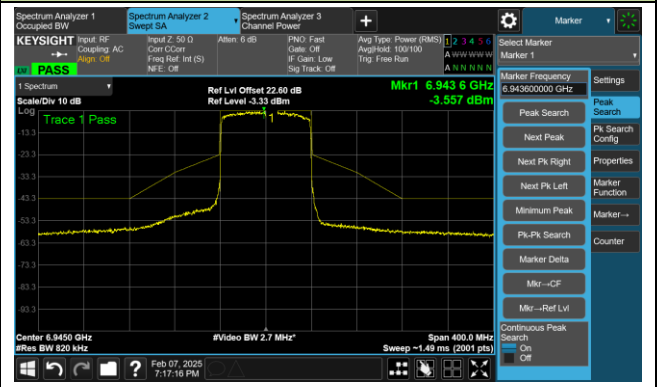 


802.11ax-HE160 – Ant 3

Channel 15 (6025MHz)

 The Reference Level

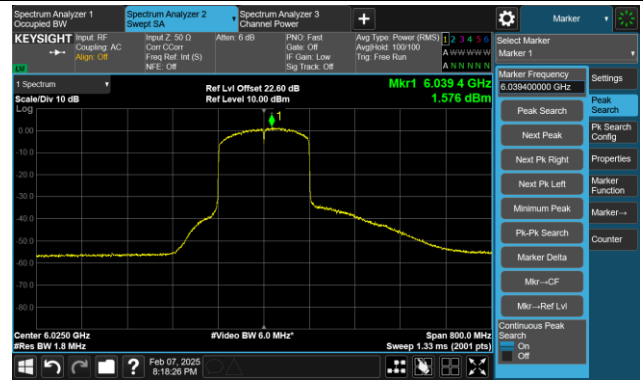


The Mask Data

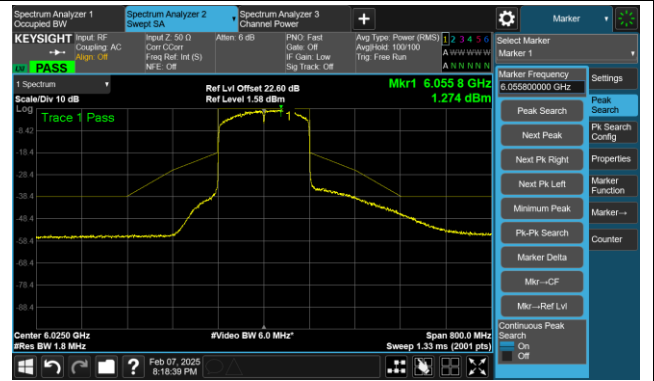 


Channel 111 (6505MHz)

 The Reference Level

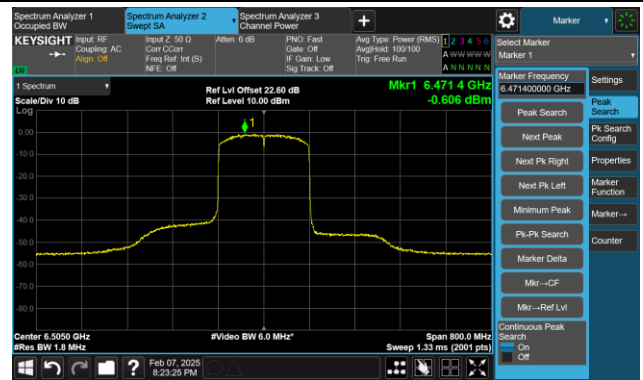


The Mask Data

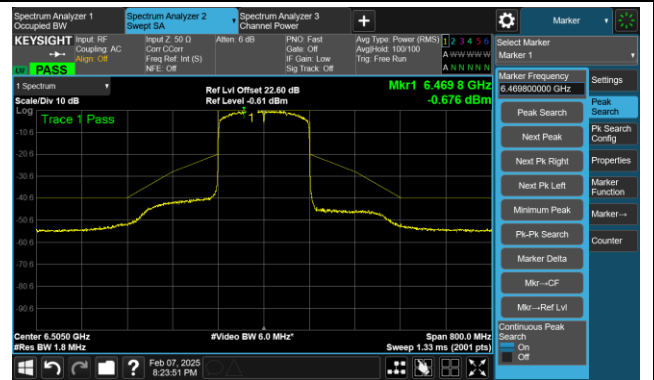 


Channel 143 (6665MHz)

 The Reference Level

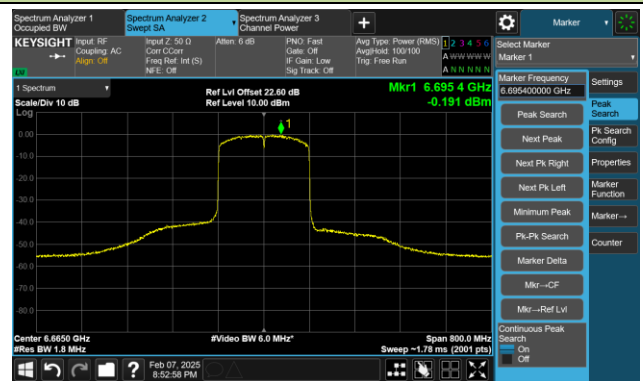


The Mask Data

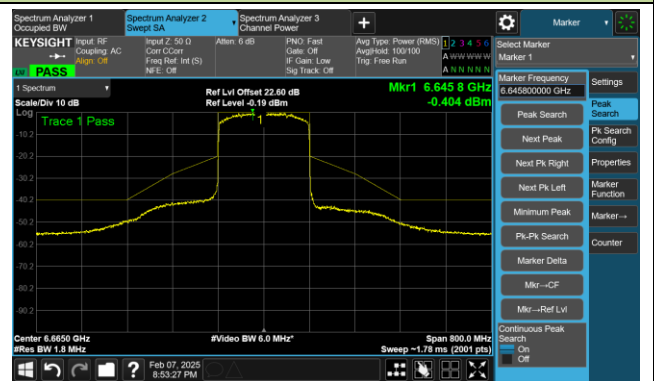 

802.11ax-HE160 – Ant 3

Channel 207 (6985MHz)

 The Reference Level

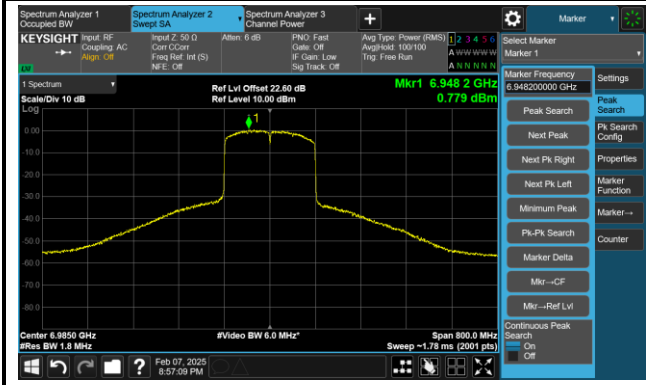

The Mask Data

