

neurosmith®

433.92 MHz Wireless Transmitter

Musini Magic Baton

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limit for Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help

Warranty

There is a 1-Year Limited Warranty for Neurosmith, LLC warrants to the customer purchaser that this product will be free from defects in material or workmanship for 1 year from the date of purchase. This warranty does not cover damage resulting from accident, misuse, or abuse. **VALID ONLY IN THE USA.** This warranty gives you specific legal rights and you may also have other rights which vary from State to state. If you believe that your product may be defective, please call us at (800)220-3669 or Email us at customer@neurosmith.com. For more information on this product or to order replacement parts, please visit our website, www.neurosmith.com, or call us at (800)220-3669

neurosmith

Neurosmith, LLC, PO Box 14719, Long Beach, CA 90853 USA
All rights reserved. All trademarks are the property of Neurosmith, LLC.

Inserting Batteries

Musini Magic Baton takes 3 “AAA” alkaline batteries. To install the batteries unscrew the battery door in the handle of the baton insert the batteries, and screw the door back into place. To remove the batteries, unscrew the battery door and use your fingers to carefully extract each battery. Never use a metal object to remove the batteries. If the lights on your Musini Magic Baton start dim or do not come on at all, it is probably time to change the batteries.

- Do not use rechargeable batteries.
- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not be charged
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the device.
- The supply terminals are not to be short-circuited.

Activating Musini Magic Baton

To activate the Musini Magic Baton(433.92 MHz Transmitter), insert the Magic Baton Cartridge(433.92MHz Receiver) into the cartridge slot on Musini. Press the button on the Baton- you should see a series of lights on the Baton. If not, check that the cartridge is inserted all the way that your Musini is turned on and the sensitivity adjusted properly. Next, turn the Style Dial on top of Musini to your desired musical activity. Musini will give you the instructions for each musical style – just shake your baton or stomp your feet to respond. This wireless device is controlled manually, the transmitting time is 56ms, it will not be automatically activated if you do not press the button.

Sleep Mode

The Musini Magic Baton will automatically go to “Sleep” after a period of inactivity. If you resume operations and nothing happens, simply press the yellow button on the Baton to wake it up.

Turning Your Musini Magic Baton Off

There is no “On/Off” switch on the Baton. It will automatically turn off after a period of inactivity and will resume again if shaken or if there is any vibration detected near Musini. If you wish to turn your Musini Magic Baton completely off, slide the “On/Off” switch on the bottom of Musini to the “Off” position

Musini Magic Baton is your first musical instrument!

The Musini Magic Baton enables you to experience the joys of musical creation. This innovative musical experience allows you explore music physically, making the important connection between movement and sound – the first step in learning to play a musical instrument. The baton will also introduce the musical concepts of beat, rhythm, melody, timing, and tempo. In addition, you will learn to identify instruments by name and differentiate their sounds.

Musical Instrument

What's That Sound?

Before experimenting with music making, it's important that you explore the sounds of different instruments. This interactive action will help you learn to distinguish between the sounds of the drum, flute, horn, piano, violin, and banjo. You will listen to the name and sound of the instrument Musini plays, then shake the baton when you hear that sound again. Each correct identification is rewarded with a musical flourish. When you correctly identify the same instrument four times in a row, the speed of the music will increase. An incorrect identification or a missed opportunity will receive an "Oops!" message and the music will begin again with a new instrument sound. Note: pressing one of the colorful buttons on Musini will restart the music. The button on the Baton does not have any effect in this musical style.

Musical Styles

The Waltz – Conduct a traditional waltz!

The March – Lead a full brass band in an all-American march!

Hoedown – Join a real country western hoedown!

Hungarian Dances - Conduct your own classical composition!

Once you have mastered the sound of different musical instruments, you're ready to compose! In each of these four musical selections, Musini gives you the rhythm – simply shake the Baton to add the melody and stomp your feet to add a percussive beat.

Note: Pressing one of the four Musini buttons will also skip the introductory dialogue for each musical selection.

Keep this guide- it contains important information

WARNING: Keep batteries away from children. Parents are urged to exercise care in the storage, use, and disposal of all batteries.

.Do not dispose of batteries in fire. They may explode.

Failure to follow the following instructions may cause the batteries to make “popping” sounds and leak battery acid resulting in personal injury and damage to the Monitor.

If battery leakage occurs, thoroughly wash the affected skin and clothes. Keep battery acid away from your eyes and mouth. Contact the battery manufacturer for further information. To avoid battery leakage:

. Be sure to insert batteries correctly following instructions.

Do not put batteries in backwards (positive (+) and negative (-) ends must face the proper direction).

. Do not mix old and new, rechargeable and non-rechargeable or carbon zinc and alkaline batteries.

.Always remove exhausted batteries from the product.

.Never use a screwdriver or any other tool to pry batteries from the compartment, as the supply terminals may be short-circuited.

. Do not leave batteries in the Monitor for long periods of non-use.