



DRIVING YOUR VRC II SPEECHMASTER VEHICLE

Welcome to the VRC 2 Speechmaster Voice Controlled Vehicle. In order to get the most enjoyment from your new toy, please read the following instruction carefully.

Your VRC II Speechmaster Voice command Vehicle comes with several accessories such as a voice control car, voice command controller, 4.8V NiCd rechargeable battery and a charger.


CONTROLLING YOUR VEHICLE

VRCII Voice control Vehicle



Voice Command Controller

BATTERY INSTALLATION

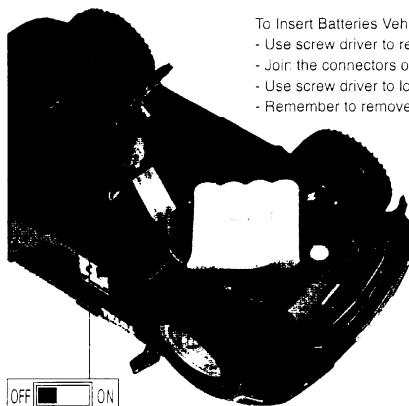

To Insert Batteries in Controller:

- Carefully pull down the battery lid downward and install 1 9V/6LR61 battery and replace door.
- Make sure the battery is inserted and positioned properly. (+/-)
- Remember to remove the battery from the controller after playing.



CAUTION - ELECTRIC TOY:

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

INPUT: AC120V, 60HZ, 4.5W

OUTPUT: DC6 0V 300MA




VRC II COMMANDS / HOW TO OPERATE

There are two different ways you can operated the vehicle:

- First is to speak directly to controller microphone to command the vehicle to move.
- Second is to press the four button on the controller to move vehicle.


The vehicle is capable of moving forward, left, right, reverse, back left, back right and stop.

The VRC Commands

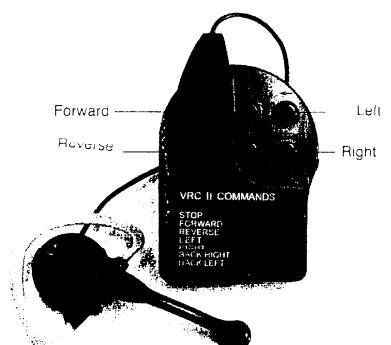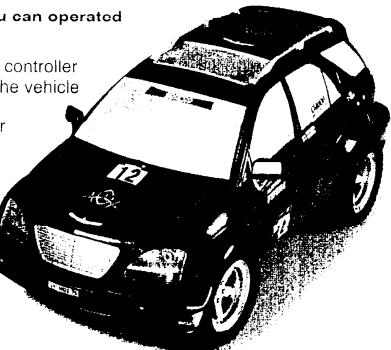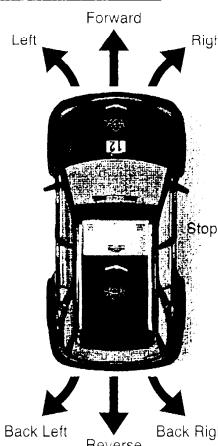

ADJUST STEERING ALIGNMENT

Alignment Tune For Steering

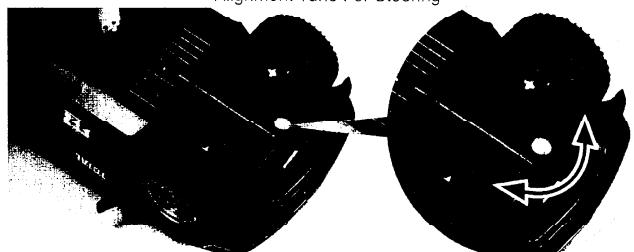

You can adjust vehicle steering alignment by turning this position knob.


RECHARGING



CAUTION:

- Do not remove warm or hot power packs. Wait 20 mins. until pack has cooled. Recharging too early will shorten pack life.
- Recharging near fire or high temperature is dangerous.
- Do not recharge packs that show wear or leakage.
- Always unplug power pack when not in use.
- Do not dispose of packs in fire, explosion or personal injury may occur.
- Dispose of power packs properly, do not disassemble.
- Always remove power packs from vehicle before charging.
- Do not use charger for any use other than instructed in directions.

- Join the connector of the 4.8V charger to the connector of the NiCd rechargeable battery.
- Plug the charger into electrical outlet.
- Average recharging time is approximately 4 hours.
- After charging for 4 hours, the battery pack will feel warm. This is normal for fully charged batteries.
- When the recharging is over, unplug the charger from the electrical outlet and detach the connector.

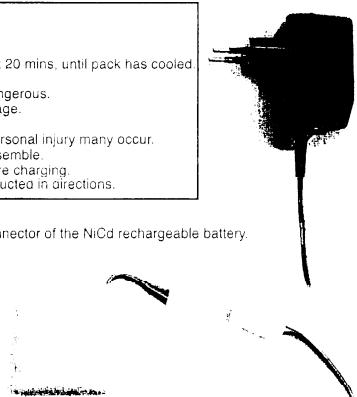

OTHER INFORMATION

Charger and Battery Specifications:
Charger : Input - AC 120V 60Hz
: Output - DC 6V 300mA
Battery : 4.8V NiCd Battery Pack - Normal 600mA or over 9V Battery (6LR61)
Charger and Rechargeable Battery Included.



CAUTION:

- 1) Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.
- 2) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 3) Toy must only be used with the recommended charger.
- 4) The charger is not a toy.

TO ENSURE PROPER FUNCTION:

- Battery installation should be done by an ADULT.
- Non-rechargeable batteries are not to be recharged.
- rechargeable batteries are to be removed from the toy before being recharged.
- Re-chargeable batteries are only to be recharged under ADULT supervision (if removable).
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- Use only rechargeable battery must be recycled or disposed of properly.
- Toy is not to be connected to more than recommended number of power supplies.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.

DO NOT DISPOSE OF THIS PRODUCT IN FIRE BATTERIES INSIDE THIS

CLEANING AND MAINTENANCE HINTS

- Brush areas where dirt and dust get trapped.
- Wipe body off with a soft rag or tact cloth.
- Do not clean vehicle with chemicals or water.

Care and use maintenance:

- Clean the unit with a soft, damp cloth.
- Please do not put the unit in direct sunlight or near any source of heat.
- Please remove the battery if you won't be using the unit for a long period of time.
- Do not use any chemical solvent to clean the unit.
- Do not spill anything on the unit.
- Do not immersed in water.

SAFETY

1. DO NOT operate your vehicle over wet surfaces. Water can damage the internal electronic assemblies.
2. DO NOT drive your remote control vehicle into the streets.
3. Parent should examine the unit and charger periodically. In case there is any damage, the toy must not be used until that damage had been properly repaired.
- Keep vehicle away from wet surface or rain. If your vehicle ACCIDENTALLY gets wet and stops running, let it dry overnight before trying to run it again.
- Keep vehicle away from sandy, dusty areas.
- Electronic instruments are sensitive to direct sunlight or heat. Avoid long period of play under direct sunlight.

INFORMATION TO USER

"MODIFICATIONS NOT AUTHORIZED BY THE MANUFACTURER MAY VOID USERS AUTHORITY TO OPERATE THIS DEVICE."

FCC STATEMENT:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



© 2003 Speedworld Toys Ltd.
All Right Reserved
Made in China