 


Controller operation for movement

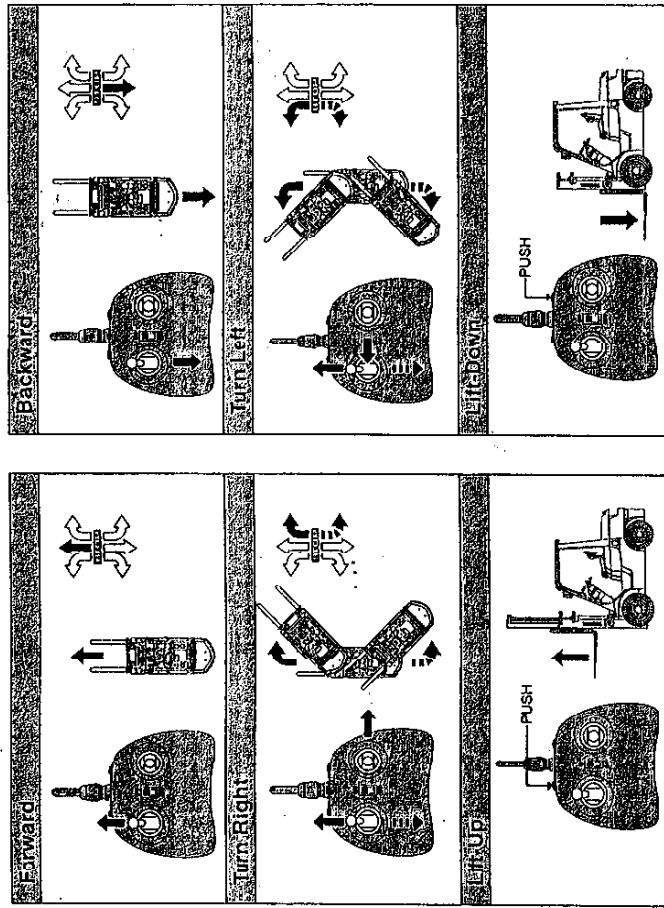

* When the vehicle hits an obstacle, stop the motion and remove it from the obstacle immediately.
* Performance of the vehicle depends on surface on which it is played.

CAUTION

For parents to read:

1. This product is not suitable for children under 12 years old due to small parts which may be hazardous. Please retain this information for future reference.
2. Do not use rechargeable battery as it may cause excessive heat, fire, leakage, or even explosion.
3. Use LR03-size batteries only (non-rechargeable type).
4. Non-rechargeable batteries are not to be recharged.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. The supply terminals are not to be short-circuited.
7. Do not use new and old batteries together. Do not mix different brands or different kinds of batteries.
8. Make sure to insert batteries with correct (+) and (-).
9. Make sure to switch off the toy after each play and remove batteries.
10. Do not short-circuit the toy, as it will cause danger.
11. If the toy gets wet, dry it up and stop playing to avoid short-circuit and causing hazards.
12. Do not bend the antenna; this may cause sharp points and the child may get hurt.
13. Do not put finger, hair or clothes into the shaft or rotating parts of the toy.
14. Always play in safe places only.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction with the instruction, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on; the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATION TO THIS EQUIPMENT. SUCH MODIFICATION COULD VOID THE USER'S AUTHORITY.

NOT SUITABLE FOR CHILDREN UNDER 12 YEARS OLD.

27 M-12

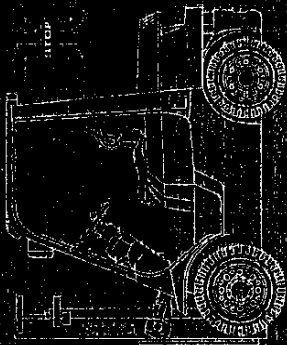

Instructions


7FG/7FD25

Contents: Car lift x 1, Controller x 1, Battery x 1,
Case x 4, Miniature Car x 1

Battery placement


1. Remove the battery cover (seat) of the vehicle and place 3 pieces of "LR03"(AAA) battery with correct (+) and (-) polarity as shown. Put the battery cover (seat) back after adding batteries.
2. Remove battery cover from backside of the controller, put a piece of 9V(6LR61) battery with correct (+) and (-) polarity. Put the battery cover back after adding battery.

BATTERY REQUIRED
LR03(AAA)x3
9V(6LR61) x1
(Not included)

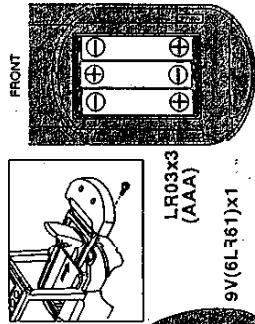

How to play

1. Switch on the vehicle by the ON/OFF switch of the vehicle. The vehicle is now ready for motion. (The transmission range is normally 2 to 3 meters but may vary, depending on conditions of batteries and transmission environment.)
2. Use the two control sticks to control movement of the vehicle, and use the two lift buttons to control the up and down motions of the lift.
3. Steering trim Adjust straight move Slightly adjust straight move by turning left or right.

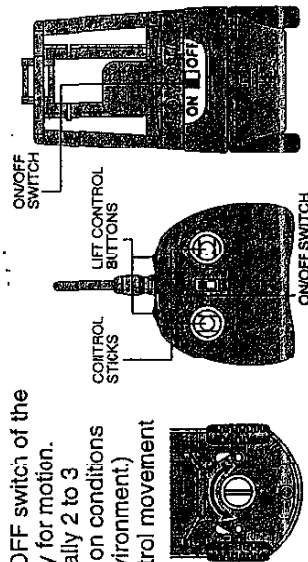

WARNING

1. Do not play in the street or in crowded places.
2. As this toy uses radio waves of low energy level, transmission range may become short when being played in sheltered areas e.g. under the table. In situation that the unit cannot function, try at a different place or at a later time.
3. As this toy contains sophisticated, delicate parts, please pay attention to the following:
 - Do not disassemble the control unit or the vehicle.
 - Do not play under rain, in the water, under extreme strong sunlight or on thick carpet.
 - Do not apply strong shock to the toy or drop it from height.
 - Do not put the toy near heater or hot areas.
4. After each play, switch off using the power button at the rear of the vehicle.
5. Unexpected out-of-control motions may result when two vehicles are being played together. Keep distance from one another to avoid interference.
6. When battery level gets low, it may result in incorrect motions. In such case replace all batteries with new ones.