


1:56 MINI RACER

Please read the instructions carefully before using.

CONTENTS

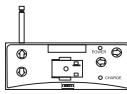

(Transmitter)x1




(Mini racer)x1




(Road-block)x4

PART DETAILS


● (Transmitter)

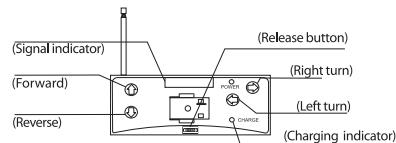


● (Mini racer)

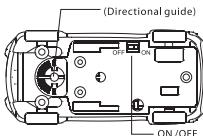


PREPARATION

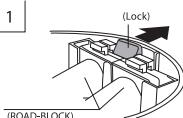

Open the can, detach the can cover and can body. Push the LOCK inside the can cover towards the direction shown to release the 4 ROAD-BLOCKS.

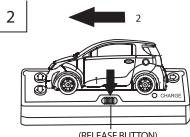

Take out the transmitter and mini racer from the can body. Press down the RELEASE BUTTON, slide the mini racer in the direction shown to release it.

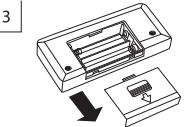

Slide the transmitter's battery compartment cover towards the direction shown and open it.




Insert 2 x AAA or 1.5V LR03 batteries with the correct polarity, then replace the battery compartment cover.




Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up to indicate the charging is in process.

6


CHARGING THE MINI RACER

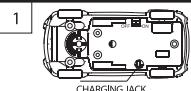

CHARGING JACK
The Rechargeable battery is built inside the racer. Plug the racer on the transmitter with correct side.

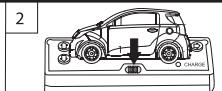

Press down the release button, plug the racer on the transmitter. The charging indicating light turns RED. The light goes off when fully charged.

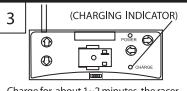

Charge for about 1-2 minutes, the racer is fully charged when the CHARGING INDICATOR goes off, then it will run for about 3-5 minutes.

OPERATION

1 Extend the transmitter's antenna for better signal reception. Turn the ON/OFF switch on the mini racer to ON, and place it on the ground.




2 Full Function Transmitter:

The SIGNAL INDICATOR lights up when any button on the transmitter is pressed.

The mini racer headlights light up when the transmitter's FORWARD button is pressed.

Press the FORWARD button on the transmitter while the mini racer is running forward or reverse, the mini racer will make left-right turns. The RELEASE BUTTON on the transmitter is used to release the mini racer which is locked on the transmitter.

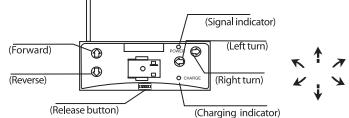

3 The DIRECTIONAL GUIDE is used to adjust the mini racer's direct-line-running-performance.



CAUTIONS

- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries should be removed from the product.
- Do not dispose of batteries in fire, or batteries will explode or leak.
- The supply terminals are not to be short-circuited.
- Batteries are not to be charged in an open area.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged (if removable).
- Remove batteries if the product is not to be used for an extended period.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.