

Contents:


- 1 Tractor
- 1 Trailer
- 1 Radio Control unit

Features:

- Forward, reverse, left / right steering and stop
- Working lights
- Sound: engine, reverse, horn
- Adjustable steering alignment
- Fold down stand for Trailer
- Opening rear door on Trailer

Battery Installation:

- 4 x 1.5 V AA size for Tractor

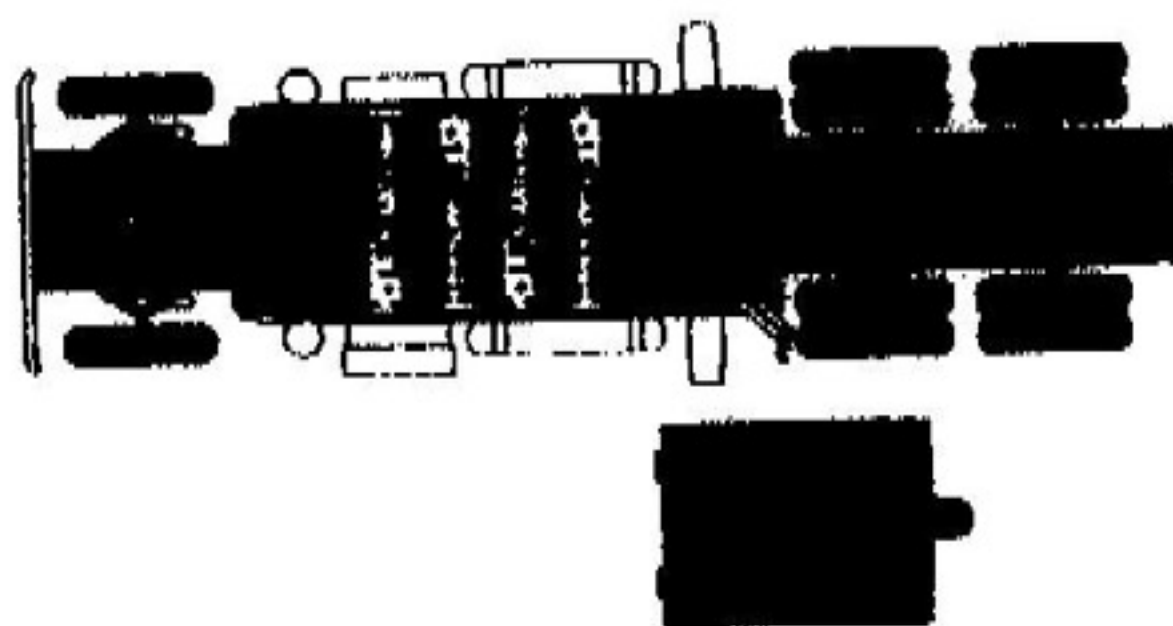

- 2 x 1.5 V AA size for Trailer

"NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT."

- 1 x 9V (006 P) for Radio Control unit



Warning:


- Check correct polarity.
- Do not dispose of batteries in a fire. Only dispose of batteries in a safe place.
- Only use batteries as shown.
- Batteries should only be changed by adults.
- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries prior to recharging.
- Recharging of rechargeable batteries should only be carried out under the supervision of an adult.
- Do not mix used and new batteries, different brands or types.
- Remove batteries when not in use.

Antenna Installation:

Carefully thread the antenna wire (located on the back of tractor) all the way through the black antenna straw. Do not pull on the wire. Then slot the straw into the slot on the tractor so that it is held in place in an upright position.

Steering Adjustment:

If the front wheels are off centre, you can adjust the steering trimmer located under the chassis of the truck to correct the error.

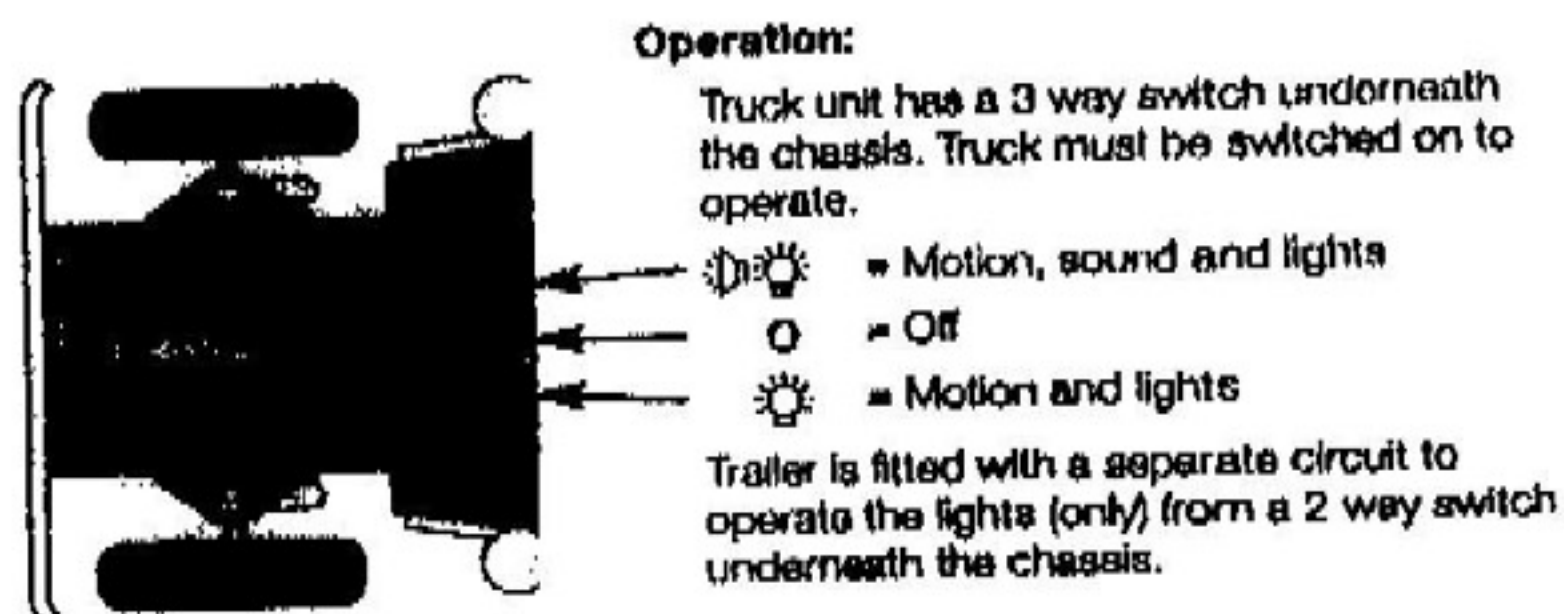

Radio Control Unit: 27 Mhz Frequency

Switch on unit on back. An LED light indicates when the power is on. It is recommended that you switch off this transmitter when not in use.

