


LF-BT602 USER MANUAL

FEATURES

- More than 100 feet Bluetooth connectivity range in open spaces, over 60 feet through walls.
- Portable and compact speaker, HUGE sound
- Connects wirelessly to any Bluetooth audio device
- 3.5 mm audio cable included for non-Bluetooth devices
- Speakerphone function with built-in echo canceling microphone, use the speaker to take a call and speak back through the built-in microphone
- Party for more than 10 hours with the built-in rechargeable battery

QUICK STARTUP GUIDE


1. Before using Speaker system for the first time charge the Speaker for at least three hours using a computer USB port or a USB 5V / AC power adapter. When the Speaker's battery is fully charged the RED LED light () will turn to BLUE. The built-in Lithium Ion battery lasts more than 10 hours. The rate of battery discharge varies with the volume setting. You can extend the battery playback time by reducing the volume.

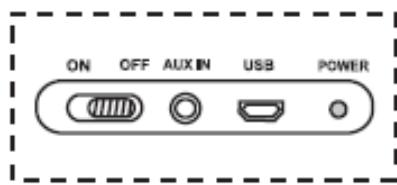

2. Power on the speaker by moving the power switch to the ON position (). Wait for three seconds until you hear a beeping sound.

CONNECTING TO A BLUETOOTH DEVICE

1. Turn on your Bluetooth device and switch its Bluetooth to Search Mode.
2. Press and hold the Speaker's Bluetooth button () for 3-5 seconds until you hear a beep and then release.
3. Search for **BT602** on your Bluetooth device and connect.
4. If your Bluetooth device asks for a password, use the numbers "0000".
5. Play music from your Bluetooth device.
6. Adjust volume using the speaker's +/- Volume buttons () or your Bluetooth volume controls.
7. If you are using a mobile phone as your Bluetooth music player, you can use the speakerphone function to take a call and speak back through the built-in microphone. Music playing will pause when receiving a phone call and resume after hanging up.

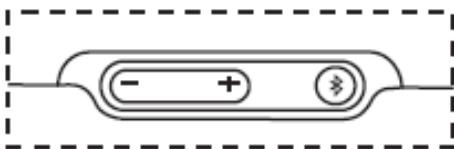

CONNECTING TO NON-BLUETOOTH DEVICE

You can attach the speaker to any headphone jack audio output. Included with the speaker a standard 3.5 mm audio cable to connect your music player to the BTunes100's audio input jack.



NOTE: Speaker's Volume controls are non operational in this mode. Use your player to control volume.

TROUBLESHOOTING

Speaker will not turn on

- Make sure the battery is charged or your system is connected to a working AC (mains) outlet.

Paired Bluetooth device will not connect

- Turn the speaker off and back on.
- Remove the speaker from the pairing list on your Bluetooth device pairing list. Then pair the device and the speaker again.

The speaker indicates a connection, but is not playing music

- Turn off or disable Bluetooth on all other paired devices nearby and reconnect the device you want to hear.
- Turn the speaker off and back on.

Cannot pair the speaker with my Bluetooth device

- Press and hold the Speaker's Bluetooth button for 3-5 seconds until you hear a beep and then release.
- Make sure the Bluetooth device is turned on.
- Your Bluetooth device may be out of range - try moving it closer to the speaker.
- Make sure your Bluetooth device supports the transfer of audio.
- Move your Bluetooth device and/or the speaker away from other devices that generate electromagnetic interference. Examples are cordless phones, microwave ovens, wireless network routers, or other Bluetooth devices.
- If possible, turn off all other nearby Bluetooth devices or disable their Bluetooth functionality.
- Turn the speaker off and back on.

No audio from a Bluetooth device

- Make sure your speaker is not muted, and the volume is up.
- Make sure your Bluetooth device is playing audio, and the volume is up.
- Your Bluetooth device may be out of range - try moving it closer to the speaker.
- Turn the speaker off and back on.

Poor sound quality from a Bluetooth device

- Your Bluetooth device may be out of range - try moving it closer to the speaker.
- Move your Bluetooth device and/or the speaker away from any device that

- generate electromagnetic interference. Examples are cordless phones, microwave ovens, wireless network routers, or other Bluetooth devices.
- If possible, turn off all other nearby Bluetooth devices or disable their Bluetooth functionality.
- Turn the speaker off and back on.

No audio from a Bluetooth device

- Make sure your speaker is not muted, and the volume is up.
- Make sure your Bluetooth device is playing audio, and the volume is up.
- Your Bluetooth device may be out of range - try moving it closer to the speaker.
- Turn the speaker off and back on.

Poor sound quality from a Bluetooth device

- Your Bluetooth device may be out of range - try moving it closer to the speaker.
- Move your Bluetooth device and/or the speaker away from any device that generates electromagnetic interference, such as another Bluetooth device, cordless phone, microwave oven, or wireless router.
- Reduce the number of applications running on your Bluetooth device. Running multiple applications can reduce the amount of internal resources available to transmit audio. Closing non-essential applications may improve audio quality.
- Try turning off WiFi to improve audio quality.
- Try unpairing your Bluetooth device from the speaker and then re-pairing the two.

This action can possibly clear issues that might have occurred during initial device pairing.

- Turn the speaker off and back on.

No audio or poor sound quality from the AUX source

- Make sure your connected device is on and playing.
- Make sure the 3.5 mm plug is fully inserted into the speaker.
- Change the volume level on the device.
- Change the speaker volume.

SPECIFICATION

Audio Input: Wireless Bluetooth and AUX in.

Wireless Range: More than 100 feet

Speakers: Dual 2" speakers with passive radiator, 4W total power

Speakerphone: Built-in MIC and echo canceling software

Power: 1100mA Li-ion rechargeable battery. USB AC/Computer charging

Dimensions: 9 x 3.4 inches

Weight: 1 lb. 9 ounces

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help