

ATTACHMENT E.

- USER'S MANUAL

Federal Communications Commission Requirements

Warning : Changes or modifications not expressly approved by the party responsible for compliance with the FCC'S rules could void the user's authority to operate the equipment.

Because
Compliance

Nective Co., Ltd

FCC ID : QBFNSB-002

**THIS DEVICE COMPLIES WITH PARTS 15 OF FCC RULES
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS
THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE,
AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE
RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE
UNDESIRED OPERATION.**

NOTE : This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment dose cause harmful interference to radio or television reception. Which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

SoundBird Manual

Transmitter

1. Connect No.2 of Transmitter to the audio outlet (Earphone, Headphone, AUX) of Audio Instruments (MP3, Computer, Audio apparatus)
2. Certify Transmitter Power On with No.4 Lamp
3. Plug the Antenna in No.3

○ You can enjoy the perfect quality sound using the radio with FM 88.3 MHz without receiver○

Receiver


1. Plug Earphone or Speaker in No.5 of Receiver, then Power on with No.6 switch
2. Adjust the Volume with No.7

How to recharge

1. Connect the Adapter to No.8 of the Recharge Cable (Adapter: 6~9V 300mA, center+)
2. Plug No.9 in No.1 of Transmitter
3. Plug No.10 in No.5 of Receiver

Connecting to Antenna

The antenna of 'SOUNDBIRD' adopts 'Jack Type' (putting it into the Ant jack). You can put it in and pull it out as shown in the picture. Antenna is separated on your purchasing.

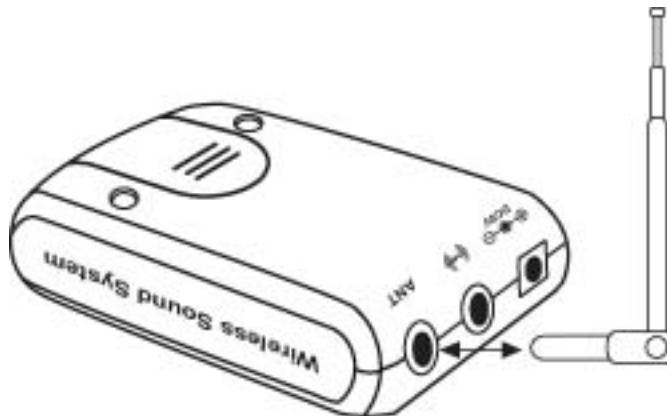

* Since the antenna in the box set is specially manufactured, no other products can be substituted. Other products may exceed FCC rules and cause the malfunction.

The Annotation:

- 1. You must charge your module battery because the purchase module does not have full battery power.**
2. When you want to power off, turn off No.6 switch of Receiver first.
3. You'd better to adjust the Volume of the main audio instruments because each instruments has the different volume position(computer 40~50%, MP3Player 70~80%).
4. You must plug out the cable being connected No.2 of Transmitter after using because the power of Transmitter power is automatically working whenever you plug in.
5. **The attention point in recharging:**
 - a. Need time to full recharge (from blank to full): 10 hr.
 - b. Confirm Power off position of Transmitter and Receiver



Recharge Cable



Antenna



Audio Cable

