

## APPENDIX H

### : USER'S MANUAL


**15" TFT LCD TV/MONITOR**

# **Owner's Manual**

Model: **LT-15KMF**



# Warnings

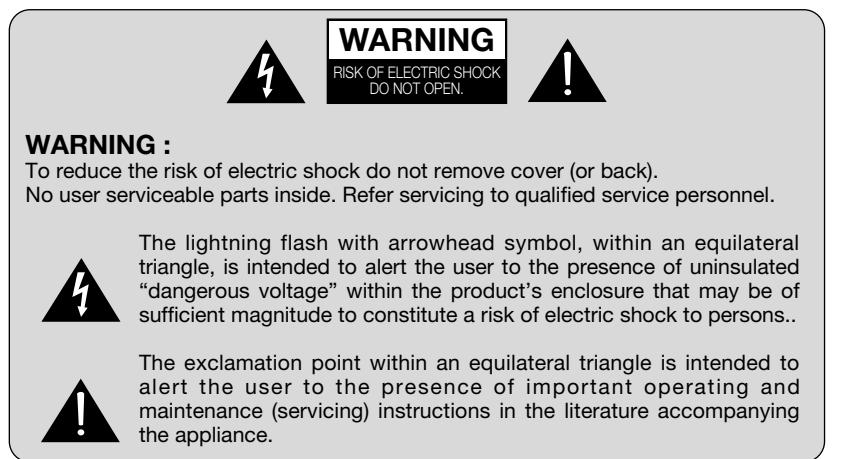

## WARNING :

To reduce the risk of electric shock do not remove cover (or back).  
No user serviceable parts inside. Refer servicing to qualified service personnel.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons..

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THE SET TO RAIN OR MOISTURE.

## NOTE TO CABLE/TV INSTALLER:

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

## REGULATORY INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B DIGITAL device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential Installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION:

Do not attempt to modify this product in any way without written authorization. Unauthorized modification could void the user's authority to operate this product.

# **IMPORTANT SAFETY INSTRUCTIONS**

## **IMPORTANT SAFETY INSTRUCTIONS**

### **Important safeguards for you and your new product**

Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference.

Observing the simple precautions discussed in this operating guide can help you get many years of enjoyment and safe operation that are built into your new product.

This product complies with all applicable U.S. Federal regulations and voluntary safety standards.

#### **1. Read Instructions**

All the safety and operating instructions should be read before the product is operated.

#### **2. Follow Instructions**

All operating and use instructions should be followed.

#### **3. Retain Instructions**

The safety and operating instructions should be retained for future reference.

#### **4. Heed Warnings**

All warnings on the product and in the operating instructions should be adhered to.

#### **5. Cleaning**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

#### **6. Water and Moisture**

Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

#### **7. Accessories, Carts, and Stands**

Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

#### **8. Transporting Product**

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

#### **9. Attachments**

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

#### **10. Ventilation**

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be locked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

#### **11. Power Sources**

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

#### **12. Power Cord Polarization**

This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

#### **13. Power Cord Protection**

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.




# IMPORTANT SAFETY INSTRUCTIONS

## 14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

### Example of Grounding According to National Electrical Code Instructions

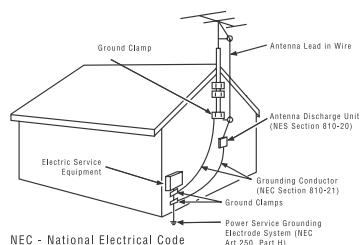

## 15. Lightning

For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

## 16. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

## 17. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

## 18. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

## 19. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## 20. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. If the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or the cabinet has been damaged.
- f. If the product exhibits a distinct change in performance.

## 21. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

## 22. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## 23. Wall Mounting

The product should be mounted to a wall only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product.

## 24. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

# Contents


Before operating the set, please read this manual carefully.

<b>Warnings</b>	3~4
<b>Contents</b>	5
<b>Supplied Accessories</b>	6
<b>Controls</b>	7~9
Controller of panel	7
Remote controller	8
Battery installation	9
<b>Basic Operation</b>	10
Turning the TV On and off	10
Channel selection	10
Volume adjustment	10
Quick view	10
Sound Mute function	10
<b>On screen menu language selection</b>	10
<b>On Screen Menus and Displays</b>	11
<b>Setting up TV Program</b>	12~13
Auto Program	12
Manual Program	13
<b>Parental Control</b>	14~16
<b>Captions</b>	17
<b>Picture Control</b>	18
<b>Sound Control</b>	19~20
<b>Other functions</b>	21~22
Clock	21
Blue back	22
Auto sleep	22
Childlock	22
Radio	22
<b>Radio Control</b>	23
<b>External Equipment Connection</b>	24~25
Antenna connection	24
COMPONENT INPUT	24
A/V INPUT	24
S-VIDEO INPUT	25
Headphone jack	25
<b>Connecting PC as monitor</b>	26~29
Picture adjustment	26
Sound adjustment	27
Position Adjustment	28
Setup	28
Auto	28
Reset	28
PC/DTV INPUT	29
<b>Product Spec.</b>	30
<b>Troubleshooting</b>	31
<b>Limited Warranty</b>	32

## Supplied Accessories

■ Make Sure the following accessories are provided with Product.


1. AC/DC adaptor

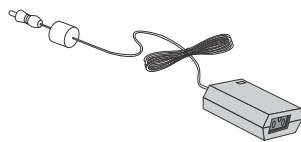

2. AC Cord



 
3. Remote controller




4. Batteries (type AAA)




5. Owner's manual

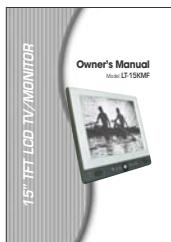

 6. PC IN cable



 7. PC Audio IN cable



## Controls

### 1. MENU

Displays a menu.

### 2. + CH - (Program Up/Down)

Selects a program or a menu item.

### 3. Power Indicator

Illuminates in red when the TV is in standby mode./ Illuminates in green when the TV is switched on. Illuminates in blinked when the power save mode(only PC mode).

### 4. ON/OFF Switches TV set on or off.


### 5. Remote control sensor

Accepts the IR signal of remote controller.

### 6. + VOL - (Volume Up/Down)

Adjusts the volume./ Adjusts menu settings.

### 7. TV/AV Selects TV, COMPONENT, VIDEO, S-VIDEO, RADIO(Only when the set is Radio On.) or PC mode. / Clears the menu from the screen.

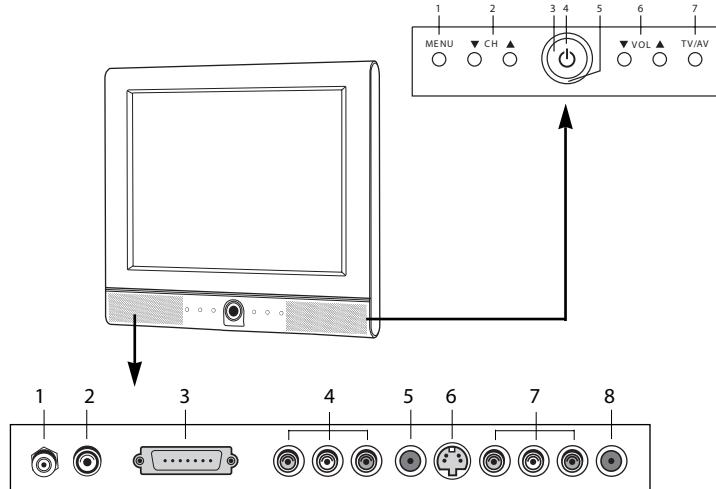

### 1 ANT. (Antenna input)

### 2. DC12V IN

### 3. PC/DTV INPUT

### 4. COMPONENT INPUT

### 5. HEADPHONE OUT

Connect a headphone to this socket.

### 6. S-VIDEO IN

Connect the output of an S -VIDEO VCR to the S-VIDEO input.

Connect the audio outputs of an S-VIDEO VCR to the AV-IN audio inputs.

### 7. A/V-IN

Connect the Audio/Video outputs of external equipment to these inputs.

### 8. PC AUDIO IN

Connect the audio cable from the PC to the PC AUDIO IN of the set.

# Controls

All the functions can be controlled with the remote controller. Some functions can also be adjusted with the buttons on the front panel of the set.

## Remote controller

Before you use the remote controller, please install the batteries.

### 1. POWER

Turns the TV on from standby to off to standby mode.

### 2. MUTE

Turns the sound on and off.

### 3. NUMBER buttons

Selects program numbers.

### 4. MENU

Displays a main menu.

### 5. TV/AV

Selects TV, COMPONENT, VIDEO, S-VIDEO, RADIO(Only when the set is Radio On.) or PC mode. Clears the menu from the screen.

### 6. LIST

Displays the program list menu.

### 7. ST/SAP

Selects the language during dual language broadcast. Selects the sound output.

### 8. SLEEP

Sets the sleep timer.

### 9. Q.VIEW


Returns to the previously viewed program.

### 10. PR▲▼ (CHANNEL Up/Down)

Selects next program or a menu item.

### 11. OK

Accepts your selection or displays the current mode.

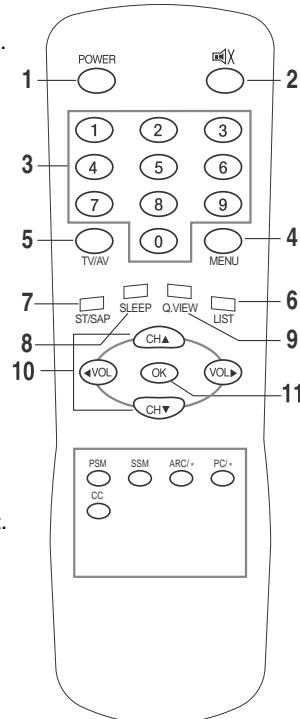

# Controls

## 12. VOL◀▶ (Volume Up/Down)

Adjusts the sound level. Adjusts menu settings.

## 13. PSM (Picture Status Memory)

Recalls your preferred picture setting

## 14. SSM (Sound Status Memory)


Recalls your preferred sound setting

## 15. PC/\*

Selects the PC mode.

## 16. CC


Sets the caption function section.

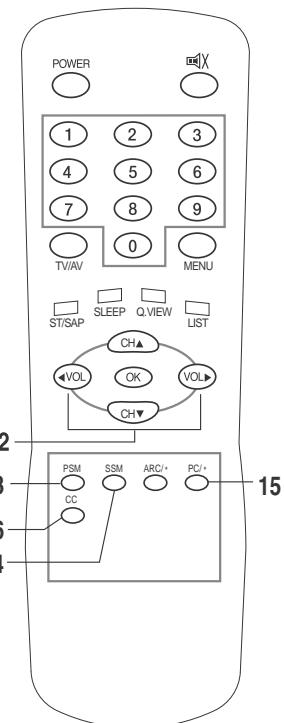

## Battery installation

### ■ Inserting batteries

1. Remove the battery cover by pulling it upward in the direction shown by the arrow.
2. Insert the batteries with correct polarity ("+" to "+", and "-" to "-").
3. Replace the battery compartment cover.

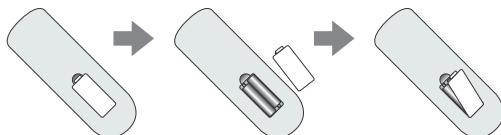

\* Install two high-quality 1.5V "AAA" alkaline batteries. Don't mix old batteries with new batteries.

\* Remove batteries when you won't use the remote controller for long time. Liquid leakage from old batteries may cause operation failure.

### ■ Notes for using remote controller

- Make sure there are no objects between the remote controller and its sensor.
- Don't place the remote control near a heater or in damp place. Strong impact to the remote control may cause operation failure.
- Signal from the remote control may be disturbed by sun light or other bright light. In this case, darken the room or move the TV.


# Basic Operation

## Turning the TV On and Off

Standby Setup: The AC-DC adapter and the AC power cord must be set up and connected to have the TV in standby mode ready to be turned on. Press the ON/OFF button on the front panel of the TV to go into standby mode.

1. If the TV is in standby mode, press the Power button on the remote controller or the TV itself to turn the TV on.
2. Press the Power button again on the remote controller or the ON/OFF button the TV itself to turn the TV off.

**Note :** If the TV is on and the POWER button is pressed to turn the TV off, the TV goes into standby mode.

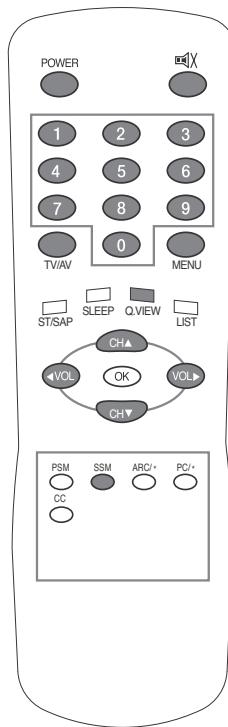

## Channel selection

You can select a Program number with the CH▲▼ button or NUMBER buttons.

## Volume adjustment

Press the VOL◀▶ button to adjust the sound level.

## Quick view

Press the Q.VIEW button to view the last channel you were watching.

## Sound mute function

Press the MUTE button. The sound is switched off and the mute display  appears.

To cancel mute mode, press the MUTE button again, VOL◀▶ or SSM button.

## On screen menu language selection

The menu can be displayed on the screen in desired language.

First, select your language.


1. Press the MENU button.
2. Select the Setup menu.
3. Select the Language menu.
4. Press the CH▲▼ button to select your desired language.
5. Press the TV/AV button.

All the on screen displays will appear in the selected language.



# On Screen Menus and Displays

1. Press the **MENU** button to display main menu.
2. Press the **CH ▲▼** button to select menus-Picture, Sound, Special, Setup.
3. Adjust each menu with the **VOL◀▶** button.
4. Press the **MENU** button to return to preceding menu.
5. Press the **TV/AV** button to finish adjusting menu.

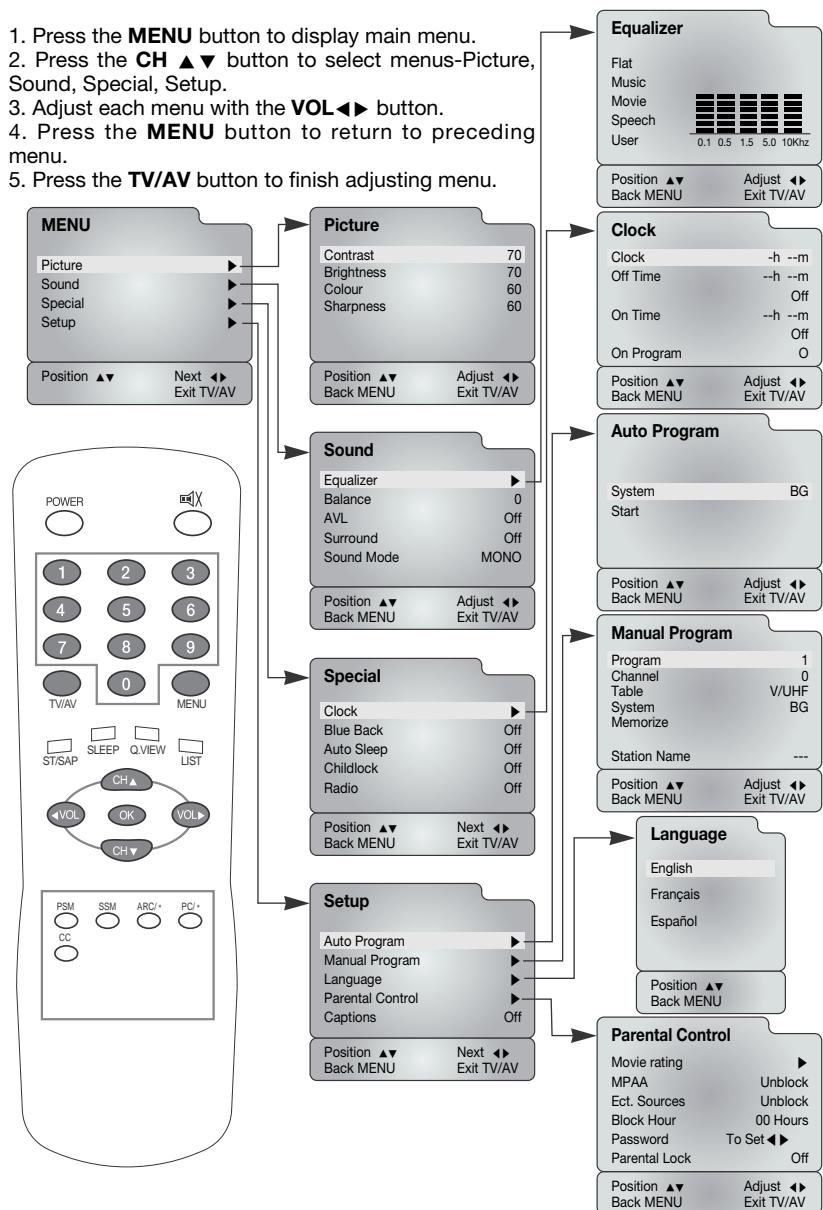

# Setting up TV Program



Once you have preset the programs, you will be able to use the **CH▲▼** or **NUMBER** buttons to scan the programs you programmed.

Programs can be tuned using automatic or manual modes.

## Auto program

All programs that can be received are stored by this method. It is recommended that you use Auto program during installation of this set.

1. Press the **MENU** button.
2. Select the **Setup** menu.
3. Select the **Auto program** menu.
4. Press the **CH▲▼** button to select **System**.
5. Select a TV system with the **VOL◀▶** button;  
**BG** : (Germany/Asia/M.East/Africa/Australia)  
**I** : (UK/Hong Kong/South Africa)  
**DK** : (CIS/China/East Europe)  
**L** : (France)
6. Select the **Start** menu to start **AUTO Program**.
7. Press the **MENU** button to stop Auto program
8. Press the **TV/AV** button to return to normal TV viewing.

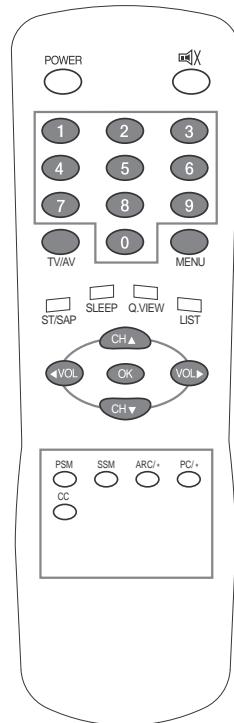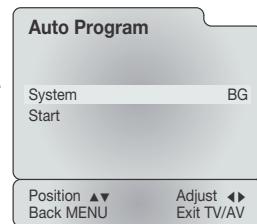


# Setting up TV Program



## Manual program

Manual Program lets you manually tune and arrange the programs in whatever order you desire. Also you can assign a program name with 3 characters to each program number.

1. Press the **MENU** button.
2. Select the **Setup** menu.
3. Select **Manual program** menu.
4. Select a program with the **VOL◀▶** button.
5. Press the **CH▲▼** button to select Channel menu.
6. Press the **VOL◀▶** button or directly number button to select a Channel.
7. Press the **CH▲▼** button to select the Table menu.
8. Press the **VOL◀▶** button to select V/UHF or Cable as required.
9. Select a TV system with the **VOL◀▶** button.  
**BG** : (Germany/Asia/M.East/Africa/Australia)  
**I** : (UK/Hong Kong/South Africa)  
**DK** : (CIS/China/East Europe)  
**L** : (France)
10. Press the **CH▲▼** button to select Memorize menu.
11. Press the **CH▲▼** button to select Name Edit.
12. Press the **VOL◀▶** button to edit program name. Then press the **CH▲▼** button repeatedly. You can use the numeric 0 to 9, the alphabet A to z(capital and small letters.), a blank and -. With the **VOL◀▶** button, you can select in the opposite direction.

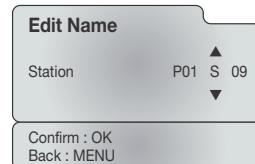

13. Press the **OK** button to store it.
14. Press the **MENU** button to return menu.
15. Press the **CH▲▼** button to select **Memorize**. Then press the **VOL◀▶** button to memorize the setting program manually.
16. Press the **TV/AV** button to return to normal TV viewing.

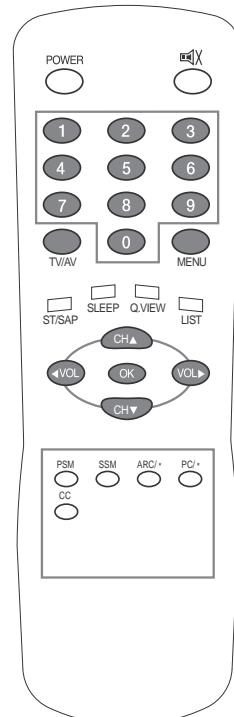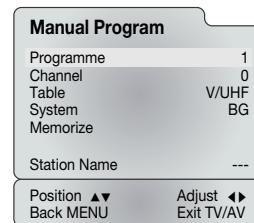

# Parental Control

---

If used, this optional feature can "block" undesirable programs from appearing on the TV.

Parental Control offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental control allows the user the capability of defining which program rating is acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-digit code, the password. The number of hours blocked are specified. General audience and children viewer blocks should be programmed into the TV's memory respectively. Viewer ratings are specified for both TV and the motion picture industry; both rating systems should be used, for complete coverage. The ratings are based on the ages of children.

## Overview

To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below. And choose ratings from the TV Parental Guidelines Rating System on the next page, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to add additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example on the next page.

## Things to Consider before Setting Up Parental Control

Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.)

Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux. Block option.) Or leave unblocked, then choose allowable ratings.

Block program "Content" based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option.

How many hours do you want Parental Control to be active? You can set the Hours option for up to 99 hours.

Select a secret password; in the Set Password option. Use the number keys on the remote. Don't forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off.

Do you want Parental Control to be active all the time? If not, you can turn it on or off; with the Lock On/Off option.

\* You can set different Parental Control viewing restrictions for general audiences and for children - - both can be active at the same time.


\* Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing.

\* Even if you choose to leave the Aux inputs unblocked, the ratings you specify will automatically restrict the program that appears from the video sources.

\* You cannot disable Parental Control by disconnecting the TV from power. Block hours will automatically reset to the original block time setting specified if power is disconnected.

# Parental Control

1. Press the **MENU** button.
2. Select the **Setup** menu
3. Select the **Parental Control** menu.
4. Press the **CH▲▼** button to select.
5. Adjust each item with **VOL◀▶** button

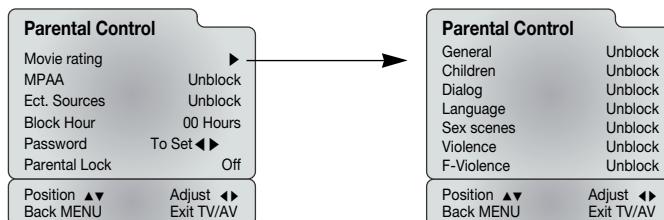

Parental Control	
Selected Item	Setting Change
<b>MPAA</b>	Unblock ↔ G and Above ↔ PG and Above ↔ PG-13 and Above ↔ R and Above ↔ NC-17 and Above ↔ X
<b>Ect.Sources</b>	Unblock ↔ Block
<b>Block Hours</b>	00~99 hours
<b>Parental Lock</b>	On ↔ Off
Movie rating	
<b>General</b>	Unblocked ↔ TV-G and Above ↔ TV-PG and Above ↔ TV-14 and Above ↔ TV-MA
<b>Children</b>	Unblock ↔ TV-Y and Above ↔ TV-7
<b>Dialog</b>	Unblock ↔ TV-PG and Above ↔ TV-14
<b>Language</b>	Unblock ↔ TV-PG and Above ↔ TV-14 and Above ↔ TV-MA
<b>Sex Scenes</b>	Unblock ↔ TV-PG and Above ↔ TV-14 and Above ↔ TV-MA
<b>Violence</b>	Unblock ↔ TV-PG and Above ↔ TV-14 and Above ↔ TV-MA
<b>F- Violence</b>	Unblock ↔ TV-Y7

2. As shown above, with the Parental Control menu on-screen, Use the **VOL◀▶** and **CH▲▼** button to select and adjust or set the rating for the Age Block or Content Blk.  
For Sex Scenes for example, use the "From TV-PG" setting. (See the Mini Glossary, Ratings Charts on this and the previous page for rating definitions.)
3. After you have selected and adjusted the Parental Control menu options to your preferences:
  - Set the hours you want Parental Control active.
  - Set a 4-number password.
  - Set the Lock On/Off option to either on or off.

# Parental Control

## INFORMATION

### MOTION PICTURE ASSOCIATION OF USA (MPAA) RATING SYSTEM

Grade		Meaning
<b>G</b>	General Audiences	Content not offensive to most viewers
<b>PG</b>	Parental Guidance Suggested	Content is such that parents may not want their children to view the program.
<b>PG-13</b>	Parental Guidance Suggested	Program is inappropriate for preteens, with a greater degree of offensive material Suggested than a PG rated program
<b>R</b>	Restricted viewing	Not for children under age 17. Strong elements of sex and/or violence.
<b>NC-17</b>	Restricted Viewing	Not for children under age 17 under any circumstances. Strong sexual content.
<b>X</b>	Hard Core Films	Same as NC-17 rating.

### TV PARENTAL GUIDELINE RATING SYSTEM

Grade		Meaning
<b>TV-G</b>	General Audience	Considered suitable for all audiences; children may watch unattended.
<b>TV-PG</b>	Parental Guidance	Suggested Unsuitable for younger children, may contain: Suggestive Dialog, Bad Language, Sex, and Violence Scenes
<b>TV-14</b>	Parents Strongly Cautioned	Unsuitable for children under 14, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.
<b>TV-14</b>	Parents Strongly Cautioned	Unsuitable for children under 14, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.
<b>TV-MA</b>	Mature Audience Only	Adults only, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.

### MOTION PICTURE ASSOCIATION OF USA (MPAA) RATING SYSTEM

Grade		Meaning
<b>TV-Y</b>	Children	Considered suitable for all children under 7 years old.
<b>TV-Y7</b>	Children 7 and over	Considered suitable for children over 7, may contain Fantasy Violence Scenes.

# Captions

The captions is a process which converts the audio portion of a television program into written words which then appear on the television screen in a form similar to subtitles. Closed captions allow viewers to read the dialogue and narration of television programs.

## Using Closed Captions



Captions are the subtitles of the dialogue and narration of television programs. For prerecorded programs, program dialogue can be arranged into captions in advance. It's possible to caption a live program by using a process called real-time captioning, which creates captions instantly. Real-time captioning is normally done by professional reporters using a machine shorthand system and computer for translation into English.

Captioning is an effective system for the hearing-impaired, and it can also aid in teaching language skills.

- The picture at left shows a typical caption.

Poor reception conditions are encountered:

### • IGNITION:

Picture may flutter, drift, suffer from black spots or horizontal streaking. Usually caused by interference from automobile ignition systems, neon lamps, electrical drills, and other electrical appliances.

### • GHOSTS:

Ghosts are caused when the TV signal splits and follows two paths. One is the direct path and the other is reflected off tall buildings, hills or other objects. Changing the direction or position of the antenna may improve reception.

### • SNOW:

If your receiver is located at the weak, fringe area of a TV signal, your picture may be marred by small dots. It may be necessary to install a special antenna to improve the picture.

An old, bad, or illegally recorded tape is played.

Strong, random signals from a car or airplane interference with the TV signal.

The signal from the antenna is weak.


The program wasn't captioned when it was produced, transmitted or taped.

1. Press the **MENU** button.
2. Select the the **Setup** menu
3. Press the **CH (▲▼)** buttons to select Caption menu.
4. Press the **VOL (◀▶)** button, select the Caption mode.
5. Each time you press the **VOL (◀▶)** buttons, the caption mode is displayed one by one as shown below.

→ OFF ↔ CC1 ↔ CC2 ↔ CC3 ↔ CC4 →  
↑ ↓  
↔ TEXT4 ↔ TEXT3 ↔ TEXT2 ↔ TEXT1 ↔

6. Press the **TV/AV** button

\* This TV is programd to remember which mode was last, even if you switch the POWER off.

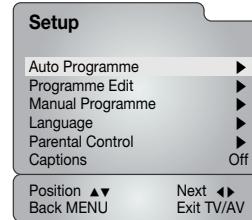

# Picture Control

You can adjust picture Contrast, Brightness, Colour, Sharpness and Tint (only in NTSC mode) to the levels you prefer.

## Manual Picture Control

1. Press the **MENU** button.
2. Select the **Picture** menu.
3. Press the **CH▲▼** button select a picture item.
4. Press the **VOL◀▶** button to adjust the picture condition as you want.
5. Press the **TV/AV** button to store for the picture **User**.

Picture	
Contrast	70
Brightness	70
Colour	60
Sharpness	60
Position ▲▼	
Back MENU	
Adjust ▲▼	
Exit TV/AV	

Selected Item	Setting Change
Contrast	More darkness VOL◀ 0~100 ▶VOL More light
Brightness	Less bright VOL◀ 0~100 ▶VOL More bright
Colour	Lower color intensity VOL◀ 0~100 ▶VOL Higher color intensity
Sharpness	Soft picture VOL◀ 0~100 ▶VOL Sharp picture

## Auto Picture Control

\*The Picture options - Dynamic, Standard, Mild, Game and User are programmed for good picture reproduction at the factory and cannot be changed.


### PSM (Picture Status Memory)

1. Press the **PSM** button.
2. Press the **PSM** button repeatedly to select [PSM]. Each press of the button changes the screen display as below.

Dynamic → Standard → Mild → Game → User




- **Dynamic** : Vivid Picture Appearance
- **Standard** : Standard Picture Appearance
- **Mild** : Softer Picture Appearance
- **Game** : External Video Game Picture Setup
- **User** : Manual Picture Setup

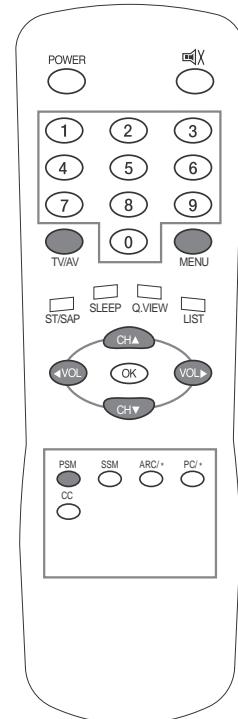

## Sound Control

You can select your preferred sound setting; Flat, Music, Movie or Speech and you can also adjust the sound frequency of equalizer, balance. If you switch AVL to on, the set automatically keeps on an equal volume level even if you change programs.

1. Press the  **MENU** button.
2. Select the  **Sound** menu.
3. Press the  **CH▲▼** button to select the desired sound item;  **Equalizer, Balance, AVL, Surround or Sound Mode**.
4. Press the  **VOL◀▶** button to make desired adjustment.
5. Press the  **VOL◀▶** button in  **Equalizer** to set the  **Equalizer**.


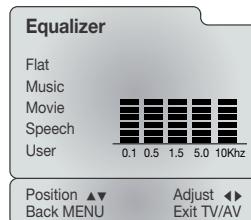


6. Press the  **CH▲▼** button to select your preferred setting ;  **Flat, Music, Movie, Speech or User**.

To set the  **Equalizer User**.

- a. Select  **User** by pressing the  **CH▲▼** button.
- b. Select a sound band by pressing the  **VOL◀▶** button.
- c. Make appropriate sound level with the  **CH▲▼** button.
- d. Press the  **MENU** button to return to preceding menu.

7. Press the  **CH▲▼** button to the Balance menu.
8. Select the Balance menu with the  **VOL◀▶** button and adjust the balance of speaker.
9. Select the AVL(Automatic Vlolume Leveler) menu ON or OFF.
10. Select the Surround menu On or Off.

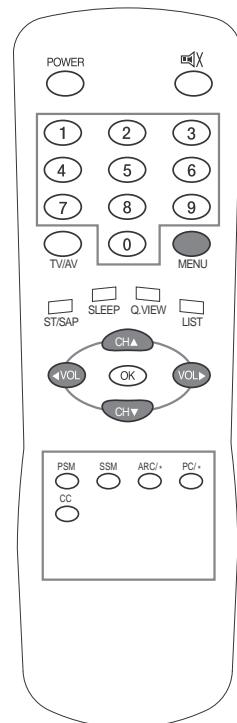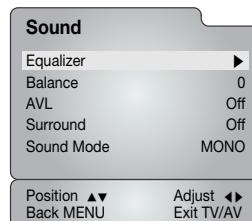

# **Sound Control**

---

## **Auto Sound Control**

\* The sound **Flat**, **Music**, **Movie** and **Speech** are programmed for good sound reproduction at the factory and cannot be changed.

## **SSM (Sound Status Memory)**

1. Press the **SSM** button.
2. Press the **SSM** button repeatedly to select.

Each press of the button changes the screen display as below.

**Flat → Music → Movie → Speech → User**





## Other functions

You can control other functions; Clock, Blue Back, Auto Sleep, Childlock, Radio menu.


### Clock

Setting the clock is necessary in order to use the various timer features of the TV. You can set automatic TV **On** or **Off** time.

1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the **Special** menu.  
Then press the **VOL◀▶** button.
3. Press the **VOL◀▶** button to select **Clock** menu.

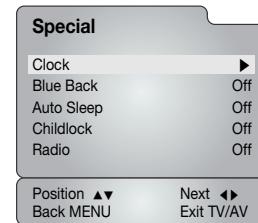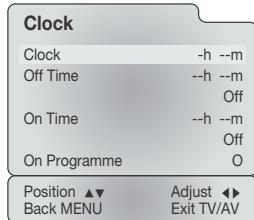

4. Set the present time with the numeric buttons on remote controller. (Store a time value between 00:00 ... 23:59(hours:minutes)
5. Press the **CH▲▼** button to select **Off Time**.
6. Set the TV off time with the numeric buttons. Then press the **VOL◀▶** button to select **On** or **Off**. (When the setting is off, the TV set will be switched off to stand by mode.)
7. Press the **CH▲▼** button to select **On Time**.
8. Set the TV on time with the numeric buttons. Then press the **VOL◀▶** button to select On or Off. (When the setting is On, the set will be switched On automatically to the last selected program.)
9. Press the **CH▲▼** button to select **On Program**.  
You can select the first displayed program with the **VOL◀▶** button when the set is switched on automatically.)

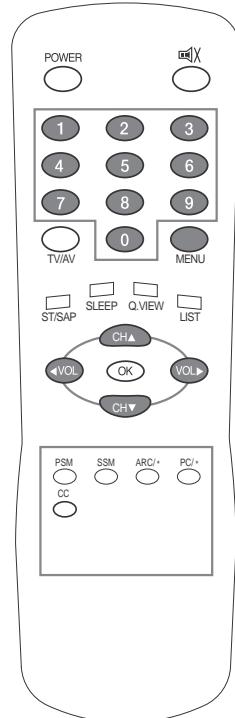

## **Other functions**

---

### **Blue back**

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background.

If you wish to continue viewing the poor picture, you must select the **Blue back On**. (Pressing the VOL button will alternate between "On" and "Off".

### **Auto sleep**

If you select **Auto sleep On** the set will automatically switch itself to standby mode approximately ten minutes after a TV Channel stops broadcasting.

1. Press the **MENU** button.
2. Select the **Special** menu.
3. Press the **CH▲▼** button to select **Auto sleep**.
4. Press the **VOL◀▶** button to select **On**.
5. Press the **TV/AV** button to return to normal TV viewing.

### **Childlock**

Childlock menu is necessary in order to disable the buttons on the side panel of the set. Especially it is useful to block the use of children.

1. Press the **CH▲▼** button to select Childlock.
2. Press the **VOL◀▶** button repeatedly to select On or Off.

\* When the setting is Childlock On, the buttons on the side panel of the set is disabled.

\* When the setting is Childlock Off, the buttons on the side panel of the set is enabled.

### **Radio**

You can listen to radio with the set.





1. Press the **MENU** button.
2. Press the **CH▲▼** button to select the Special menu.  
Then press the **VOL◀▶** button.
3. Press the **CH▲▼** button to select Radio.
4. Press the **VOL◀▶** button to select Radio On or Off.

**Note.** When the setting is On, you can adjust radio function in radio mode.  
(see page 20)

# Radio Control

This function is possible only when the set is in Radio mode.(Radio mode is displayed when the Setting for special menu is radio On.)

1. Use **TV/AV** button on remote controller to select **Radio mode**.
2. Press the  **MENU** button to set **Radio Setup** menu.
3. Press the **VOL** button repeatedly to select **Mode Auto or Manual**.
4. Press the **CH** button select **Frequency**. Then press the **VOL** button repeatedly to tune in the desired station manually.
5. Press the **CH** button to select **Program**. Then press the **VOL** button repeatedly to select program.
6. Press the **CH** button to select **memorize**. If you want to memorize this radio setup, press the **VOL** button.
7. Press the **CH** button to select **Auto Program**.
8. Press the **VOL** button repeatedly to automatically scans and tunes to the next available station.
9. Press the **CH** button to select **Off Time**. Then press the **VOL** button repeatedly to select Off, 5, 10, 30.
10. Press the **CH** button to select **Edit Name**. Then press the **VOL** button to edit radio name.
11. You can assign a radio name with 7 characters. Press the **CH** button repeatedly. You can use the numeric 0 to 9, the alphabet A to z(capital and small letters.) and a blank. With the **VOL** button, you can select in the opposite direction.
12. Press the  **MENU** button to return to prior menu.
13. Press the **TV/AV** button to exit. Then the radio setting condition is displayed.

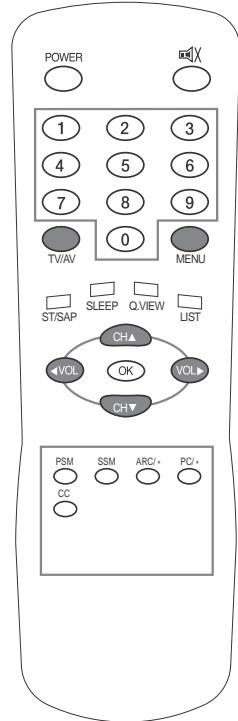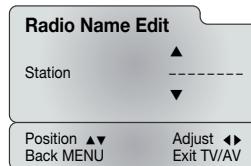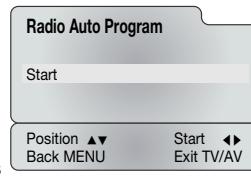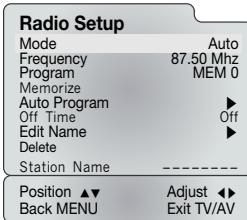


## **External Equipment Connection**

You can connect additional equipment, such as VCRs, camcorders etc. to your set. Examples are shown below.


### **Antenna connection**

1. Connect RF out on the VCR to the Antenna input on the rear of the TV.
2. Connect the antenna cable to the antenna in jackson the VCR.
3. Press the **TV/AV** button to select Antenna Input source.
4. Press the **PLAY** button on the VCR.

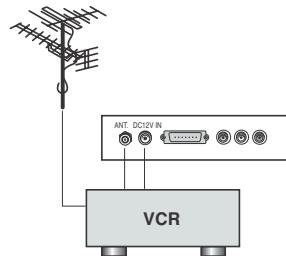

### **COMPONENT INPUT**


1. Connect the Video outputs (Y Cb Cr) on a DVD to the COMPONENT on the TV.
2. Use the **TV/AV** button to select **COMPONENT** mode.
3. Press the **PLAY** button on the DVD.

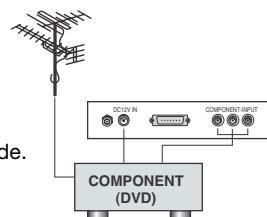

### **A/V INPUT**

1. Connect the A/V out jacks on a VCR to A/V-IN jacks on the TV.
2. Use the **TV/AV** button to select **VIDEO** mode.
3. Press the **PLAY** button on the VCR.

The VCR playback picture appears on the TV screen.  
**Note** : If you have a mono VCR, connect the audio cable from the VCR to the **L(MONO)** socket of the set.

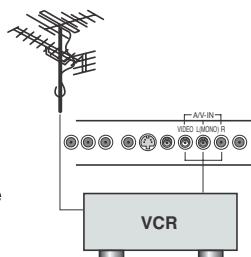


## External Equipment Connection

### S-VIDEO INPUT

If using an **S-VIDEO** source, the picture quality will be improved over a video source.


1. Connect the S-VIDEO output of a VCR to the **S-VIDEO** input on the TV.
2. Connect the audio cables from the S-VIDEO VCR to the **L (MONO)**, **R** inputs on the TV.
3. Select **S-VIDEO** mode by pressing the **TV/AV** button repeatedly.
4. Press the **PLAY** button on the VCR.

The VCR playback picture appears on the screen.

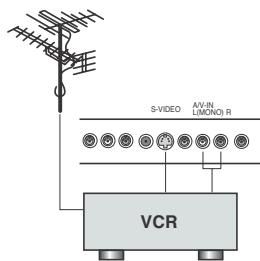

### Headphone jack

Insert the headphone plug to the headphone jack on the TV. You can listen to the sound through the headphone; no sound from the speaker on the TV. To adjust the headphone volume, press the **VOL** button. If you press the **MUTE** button, the sound from the headphone is turned off.

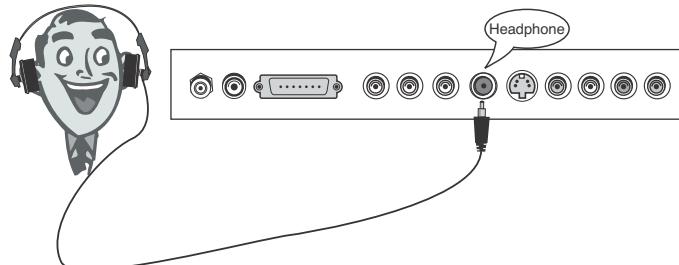

# Connecting PC as monitor

This function is possible only when the set is in PC mode.  
Use the TV/AV button on remote controller.

## Picture adjustment

You can adjust picture Contrast, Brightness, Temperature, Clock, Phase, ARC as you prefer.

1. Press the **TV/AV** button to select the PC mode.
2. Press the **MENU** button.
3. Select the Picture.
4. Press the **CH▲▼** button to select the desired picture item.
5. Press the **VOL◀▶** button to make appropriate adjustments.
6. Press the **TV/AV** button to exit menu.

### Contrast

This function is to adjust picture to light/dark.

### Brightness

This function is to adjust brightness of picture.

### Temperature




Temperature is a measure of the warmth of the image color.

### Clock

This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.

### Phase



This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

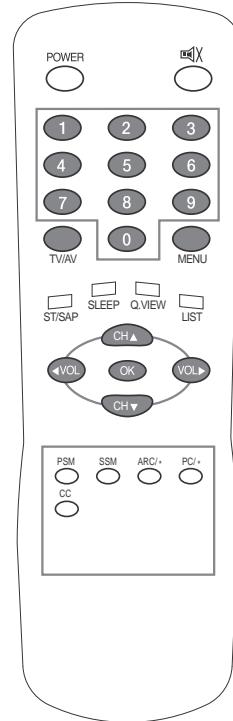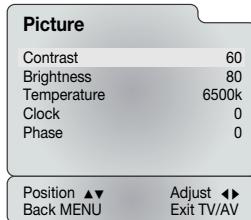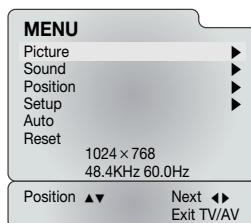

# Connecting PC as monitor

## Sound adjustment

1. Press the **MENU** button.
2. Select the **Sound** menu.
3. Press the **CH▲▼** button to select the desired sound item; **Equalizer**, **Balance**, **AVL**, **Surround** or **Sound Mode**.
4. Press the **VOL $\downarrow\uparrow$**  button to make desired adjustment.
5. Press the **VOL $\downarrow\uparrow$**  button in **Equalizer** to set the **Equalizer**.
6. Press the **CH▲▼** button to select your preferred setting ; **Flat**, **Music**, **Movie**, **Speech** or **User**.  
To set the Equalizer User.
  - a. Select User by pressing the **CH▲▼** button.
  - b. Select a sound band by pressing the **VOL $\downarrow\uparrow$**  button.
  - c. Make appropriate sound level with the **CH▲▼** button.
  - d. Press the **MENU** button to return to preceding menu.
7. Press the **CH▲▼** button to the Balance menu.
8. Select the Balance menu with the **VOL $\downarrow\uparrow$**  button and adjust the balance of speaker.
9. Select the AVL(Automatic Volume Leveler) menu **ON** or **OFF**.
10. Select the Surround menu **ON** or **OFF**.
11. Select the **Sound Mode** with **CH▲▼** button.
12. Press the **VOL $\downarrow\uparrow$**  button to select sound mode – **STEREO**, **DUAL I**, **DUAL II**.

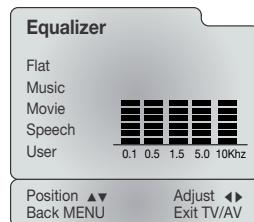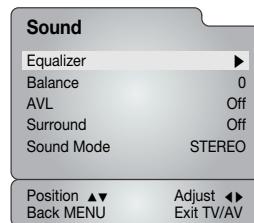


# Connecting PC as monitor

## Position Adjustment

This function is to adjust picture to left/right and up/down as you prefer.


1. Press the **MENU** button.
2. Select the **Position** menu.
3. Press the **CH▲▼** button to select the desired position item.
4. Press the **VOL◀▶** button to adjust horizontal position and vertical position.
5. Press the **TV/AV** button to exit menu

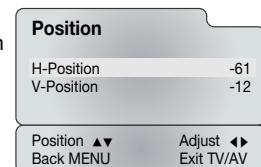

## Setup

You can select the desired language in PC mode.

1. Press the **MENU** button.
2. Select the **Setup** menu.

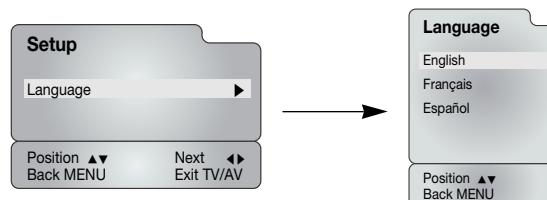

3. Press the **VOL◀▶** button twice to select language.  
Then select the desired language with **CH** button.
4. Press the **VOL◀▶** button to adjust horizontal position and vertical position.
5. Press the **TV/AV** button to exit menu.

## Auto

This function is for the automatic adjustment of the screen position, clock and clock phase. The displayed image will disappear for a few seconds while the Auto-configuration is in process.

**Note:** Some signal from some graphics boards may not function properly.  
If the results are unsatisfactory, adjust your monitor's position, clock and clock phase manually.


## Reset

This function allows you to return to the good picture reproduction programd at the factory and cannot be changed.

# Connecting PC as monitor

## PC/DTV INPUT

1. Connect the PC IN cable (D sub jack) from the monitor output socket of the PC to the PC/DTV input socket of the set.
2. Connect the PC Audio IN cable from the PC to the **PC AUDIO IN** of the set.
3. Press the **TV/AV** or **PC** button to select **PC** mode.
4. Switch on the PC, and the PC screen appears on the set.

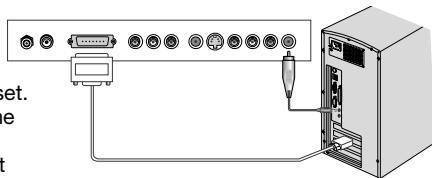

The set can be operated as the PC monitor.

### Resolution

Mode	Resolution	Horizontal frequency (KHz)	Vertical frequency (Hz)
VGA	640X480	31.5 KHz	60 Hz
	640X480	35 KHz	67 Hz
	640X480	37.9 KHz	72 Hz
	640X480	37.5 KHz	75 Hz
	640X480	43.5 KHz	85 Hz
	720X400	31.5 KHz	70 Hz
SVGA\	800X600	35.2 KHz	56 Hz
	800X600	37.9 KHz	60 Hz
	800X600	48.1 KHz	72 Hz
	800X600	46.9 KHz	75 Hz
	800X600	53.7 KHz	85 Hz
XGA	1024X768	48.4KHz	60Hz
	1024X768	56.5 KHz	70 Hz
	1024X768	60.2 KHz	75 Hz
	1024X768	68.7 KHz	85 Hz
DTV	1920X1080i	33.8 KHz	60 Hz
	1280X720i	45KHz	60 Hz
	720X480p	31.5 KHz	60 Hz

### Note:

- a. If the set is cold, there may be a small "flicker" when the set is switched on.  
This is normal, there is nothing wrong with the set.
- b. Some dot defects may appear on the screen, like Red, Green or Blue spots.  
However, this will have no impact or effect on the monitor performance.

## Product Spec.

<b>Main body</b>	Horizontal size 390 mm	Thickness 60 mm
	Height 350 mm	Weight 6.2 kg
<b>Power requirements</b>	DC 12V/3.0A	
<b>Television system</b>	NTSC	
<b>Television channels</b>	VHF: 2~13 UHF :14~69 Cable : 01~125	
<b>Display panel</b>	15.1" TFT-LCD	
<b>Power consumption</b>	45W	
<b>External antenna impedance</b>	75K	
<b>Audio output</b>	1.5W + 1.5W	
<b>External input ports</b>	<ul style="list-style-type: none"><li>• DC 12V IN</li><li>• Headphone jack</li><li>• AV-IN</li><li>• S-VIDEO IN</li><li>• COMPONENT IN</li><li>• Antenna IN</li><li>• PC AUDIO IN</li><li>• PC/DTV IN</li></ul>	
<b>AC Power Adaptor</b>	AC 100-240V, 50/60Hz Output:12Vdc, 3.0A	

## Troubleshooting

Problem	Check item
No picture on screen and no sound from speakers	<ul style="list-style-type: none"><li>• Insert the AC power cord plug securely in AC power outlet.</li><li>• Make sure the remote control is not in the standby mode (The POWER/Standby indicator is red.)</li></ul>
No picture/No picture from AV terminal	<ul style="list-style-type: none"><li>• Check the brightness setting of the display.</li><li>• Lamp may have malfunction.</li><li>• Make sure a cable with no VIDEO input signal is connected to the S-VIDEO INPUT terminal.</li></ul>
Picture is displayed, but no sound from the speakers.	<ul style="list-style-type: none"><li>• Check the sound setting.</li><li>• Make sure the sound is not muted.</li><li>• Make sure a pair of headphones is not connected.</li><li>• Make sure the connectors of the optional speaker system are securely inserted.</li></ul>
Picture is too light	<ul style="list-style-type: none"><li>• Make sure COLOR and CONTRAST settings.</li></ul>
Picture is too dark.	<ul style="list-style-type: none"><li>• Make sure BRIGHTNESS setting is not set too low.</li><li>• Lamp may have malfunction.</li></ul>
Remote control does not work.	<ul style="list-style-type: none"><li>• Change the batteries.</li><li>• Make sure the infrared transmitter window is not receiving strong light such as light from fluorescent lamps.</li></ul>
The picture is not sharp. The picture moves.	<ul style="list-style-type: none"><li>• The reception may be weak.</li><li>• The state of the broadcast may also be bad.</li><li>• Make sure the antenna is facing the right direction.</li><li>• Make sure the outside antenna is not disconnected.</li></ul>
The picture is doubled or tripled.	<ul style="list-style-type: none"><li>• Make sure the antenna is facing the right direction.</li><li>• There may be reflected electric waves from mountains or buildings.</li></ul>
The picture is spotted.	<ul style="list-style-type: none"><li>• There may be interference from automobiles, trains, high voltage lines, neon lights, etc.</li><li>• There may be interference between the antenna cable and power cable. Try positioning them further apart.</li></ul>
There are stripes on the screen or colors fade.	<ul style="list-style-type: none"><li>• Is the unit receiving interference from other devices? Transmission antennas of radio broadcasting stations and transmission antennas of amateur radios and cellular phones may also cause interference.</li><li>• Use the unit as far apart as possible from devices that may cause possible interference.</li></ul>