

GSM/GPRS Phone

User Guide



Copyright Statement

Copyright 2002 by CMCS. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of CMCS.

Disclaimer

CMCS makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, CMCS reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of CMCS to notify any person of such revision or changes.

ALL INFORMATION IS PROVIDED BY CMCS ON AN "AS IS" BASIS ONLY. CMCS PROVIDES NO REPRESENTATIONS AND WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY AND NONINFRINGEMENT.

Important Safety Precautions

When using this product, the safety precautions below must be taken against possible legal issues and damages.



SAFETY IN AIRCRAFT

The interference would be caused by this product to an aircraft's navigation system and its network. In most countries, using this product on board an airplane is against the law.



SAFETY FOR ENVIRONMENTS

Do not use this product in gas stations. Also the use of this product is prohibited in fuel storehouse, chemical plants and locations containing explosives.



SAFETY ON THE ROAD

Vehicle drivers in motion are not permitted to use telephony services with the handheld device, except in the case of emergency. In some countries, using hand-free devices as an alternative is allowed.



SAFETY ABOUT RADIATION

This product should be operated in the suggested normal condition only to ensure the radiative performance and safety of the interference.



SAFETY FOR MEDICAL EQUIPMENT

This product may cause malfunctions of medical equipment. In most hospital or medical centers, use of this product is forbidden.

Attention



There are no user serviceable parts inside this product. If this product appears to be broken, call a qualified service personnel or send this product to your original dealer. Do not attempt to disassemble or repair this product as it may result in electric shock or unrecoverable damage to the product itself.



Keep this product out of reach of small children.



Store this product in its protective case in a cool dry place.



Do not throw the battery into fire or other heat source. Dispose of used batteries according to your local regulations.

Tips When Using

- Avoid using the product near metal structures (for example, large metal furniture or steel frames of a building). The transmission and reception of signal can be effected by these objects.
- Avoid using the product near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Avoid using the product right after dramatic change of temperature.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: QDJ-0212BAC01

Statement according to FCC part 15.21

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

Statement according to FCC part 15.105

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. (Body-worn measurements may differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR

levels of various phones and at various positions, they all meet the government requirement for safe exposure.

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only accessories that contain no metallic components. Use of other accessories may violate FCC RF exposure guidelines and should be avoided.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies:

- * American National Standards Institute (ANSI) IEEE. C95.1-1992
- * National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986
- * International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- * Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg *.

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in.

<Blank Page>

Table of Contents

Making Your First Call	1
Installing SIM card	2
Installing and charging the battery	3
Turning on the phone	5
Dialing phone number	6
Ending the call	6
Introduction to Your Phone	7
Parts of your phone and their names	8
Front view	8
Top view	9
Rear view	9
Icons on the screen	10
The keys on the phone	12
Function keys	12
Alphanumeric keys	13
Basic Operations	14
Turning on the phone	15
Turning off the phone	15
Making a call	15
Making an emergency call	17
Answering a call	17
Ending a call	17
Missed call message	17
Adjusting earpiece volume	17
Selecting sound profile	18

Options during a call	18
Making a new call	18
Answering a new incoming call	18
Transmitting DTMF tones	18
Ending calls	19
Consulting Phone Book	19
Accessing Main Menu	19
Muting/unmuting the microphone	19
Holding/unholding a call	20
Listening to your voice mail	20
Reading messages	20
Entering Text	20
Selecting an input mode	21
Entering text	21
Entering text using T9 English input method ..	22
Erasing text	22
Using key lock	23
Phone Book	24
Adding a Phone Book entry	25
Method 1	25
Method 2	25
Method 3	25
Searching for a Phone Book entry.....	25
Editing a Phone Book entry	25
Editing name	25
Editing number	26
Adding new phone number to existing entries	26
Changing caller group	26
Sending an entry as business card	26
Assigning default phone number	27

Changing the type of number	27
Sending messages from Phone Book	27
Erasing Phone Book entry	27
Method 1	27
Method 2	28
Copying Phone Book entry	28
Method 1	28
Method 2	28
Setting up Speed Dial	29
Method 1	29
Method 2	29
Viewing speed dial number	29
Changing speed dial number	29
Erasing speed dial number	30
Setting up Caller Group	30
Creating a new Caller Group	30
Renaming a Caller Group	30
Miscellaneous settings	31
Personal number	31
Adding a personal number	31
Editing personal number	31
Erasing personal number	31
Fixed dial number	31
Activating Fixed dial	31
Adding new Fixed dial number	32
Viewing Fixed dial number	32
Editing Fixed dial number	32
Erasing Fix dial number	32
Your own business card	32

Creating your own business card	33
Viewing your business card	33
Sending your business card	33
Editing your business card	33
Erasing your business card	33
Phone Book memory setting	34
Selecting Phone Book memory	34
Checking Phone Book memory status	34
The Main Menu	35
 Overview	36
 Message	37
Writing and sending new messages	37
Viewing sent messages	38
Receiving messages	38
Viewing received messages	39
Chatroom	40
Opening a new chat session	40
Options during a chat session	40
Customizing templates	41
Customizing message template	41
Erasing customized message template	41
Sending a message from templates	41
Erasing all messages	41
Message settings	42
Configuring message setting profiles	42
Using the profile on your SIM card	42
Configuring a new profile	42

Using a self-configured profile	42
Configuring voice mailbox number	42
Message options	43
Message status report	43
Reply path	43
Send by GSM or GPRS	43
Checking message memory status	44
Message delivery records	44
Cell broadcast options	44
Turning on or off cell broadcast	44
Setting up cell broadcast topics	44
Sending message service commands	45
Call Meter	46
Viewing missed call records	46
Viewing received call records	46
Viewing dialed call records	46
Erasing all call records	47
Viewing call time information	47
Clearing call timer	47
Viewing call cost information	47
Viewing call cost	47
Clearing call cost	48
Viewing remaining call cost credit	48
Configuring call cost settings	48
Viewing GPRS related information	48
GPRS data	48
GPRS data counter	49
Clearing GPRS data counter	49

GPRS connection time	49
GPRS timer	49
Clearing GPRS timer	49
In-call count	50
Session information	50
Call Feature	51
Call divert	51
Diverting voice calls	51
Deactivating voice call divert function	51
Inquiring status	52
Diverting data or fax calls	52
Deactivating data or fax call divert function	52
Inquiring status	52
Deactivating all call divert functions	52
Call waiting	52
Deactivating call waiting	53
Inquiring status	53
Call barring	53
Barring outgoing calls	53
Cancel barring of outgoing calls	53
Inquiring status	54
Barring incoming calls	54
Cancel barring of incoming calls	54
Inquiring status	54
Cancel all call barring functions	54
Changing network code	55
Showing/hiding your number	55
Selecting a phone line to use	55

Anykey answer	56
Flip answer	56
Auto redial	56
Speed dialing	56
Receiving a fax or data call	56
Talk and Fax	57
Sound	58
Sound profiles	58
Selecting a sound profile	58
Customizing a sound profile	58
Renaming a sound profile	59
Composing your ringing tones	59
Minute reminder	61
Phone setup	63
Changing menu language	63
Adjusting backlight duration	63
Adjusting screen contrast	63
Clock	63
Showing/hiding clock on the screen	63
Setting up current time and date	63
Selecting time zone	64
Setting up current time and date	64
Setting up date format	64
World clock	64
Auto power off	65
Activating Auto power off	65

Deactivating Auto power off	65
Idle screen display	65
Screen saver	65
Activating screen saver	65
Deactivating Screen saver	66
Setting up timeout period	66
Standby logo	66
Showing/hiding standby logo	66
Selecting standby logo	66
Key lock	66
Activating Key lock	66
Deactivating Key lock	67
Selecting default input mode	67
Restoring factory settings	67
Phone security settings	68
Activating/deactivating security codes	68
Activating/deactivating PIN code	68
Activating/deactivating phone code	68
Activating/deactivating SIM lock	69
Changing security codes	69
Changing PIN code	69
Changing PIN2 code	69
Changing phone code	70
Changing SIM lock code	70
Closed user group	70
Network settings	71
Network selection	71
Band selection	71

Extras	72
My Picture	72
Creating My Picture	72
Editing My Picture	73
Erasing My Picture	73
Sending My Picture	73
Alarm clock	74
Activating alarm clock	74
Deactivating alarm clock	74
Calendar	74
Writing note	74
Viewing note	75
Viewing today's note	75
Viewing notes on a specific date	75
View all notes	75
Editing note	76
Erasing note	76
Method 1	76
Method 2	76
Moving a note to another date	76
Copying a note to another date	77
Sending a note	77
Viewing calendar in month mode	77
Jumping to a specific day	77
Playing Games	78
Ping Pong	78
Bingo	78
Insect shooting	79
Tank destroyer	80
Thirteen	80
Calculator	80

Using calculator	81
Converting currencies	81
Setting up exchange rate	81
Performing currency exchange	81
Stopwatch	82
Split timing	82
Lap timing	82
Viewing timing records	82
Erasing timing records	83
Operator services	83
WAP Service	84
Browsing the Internet	84
Going to your homepage	84
Going to your bookmarked pages	84
Navigating the Internet using the options menu	84
Configuring WAP profiles	86
Setting up a WAP profile	86
Selecting and activating a WAP profile	87
Editing a WAP profile	87
Renaming a WAP profile	87
My shortcut	88
Using My shortcut	88
Customizing My shortcut	88

Making Your First Call




Installing SIM card

What is a SIM card?

The SIM (Subscriber Identification Module) card is a small plastic card with metal contact on it. You get this card after you subscribe to your operator. Your personal subscriber information is stored in the SIM card and you need to use it in the phone to make/receive calls and access services provided by your operator.

- Turn the phone face down.
- Slide the SIM card into the SIM card socket with the metal contact on the card facing down and the bevelled corner to the direction shown.

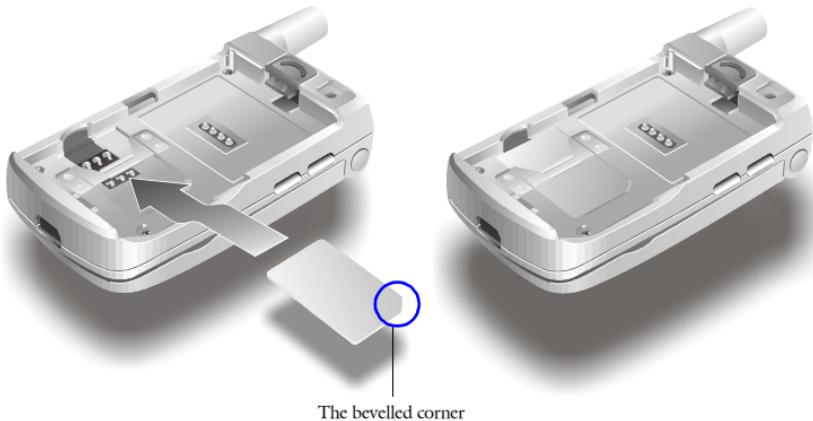

Pay special attention to the SIM card when you install and remove. Its metal contact can be damaged easily by scratches.

Installing and charging the battery

1

Place the bottom end of the battery on the back of the phone. Make sure the tabs on the battery are inserted into the slots on the phone.



2


Push the top end of the battery into the phone until you hear a click





3

Insert the battery charger connector into the battery charging socket located at the bottom of the phone. Note the direction of the connector when inserting.

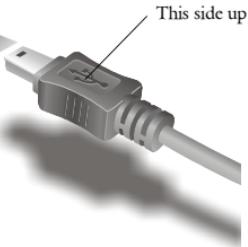

Note

- Charge the new battery before first time use. When the battery is being charged, the status indicator light illuminates and the bars of the charging status icon on phone screen scrolls. When charging is completed, the status indicator light goes off and the bars of the charging status icon stops scrolling. You can use the phone during the charging process, however, it will take longer to fully charge the battery.
- When battery power is low, low battery message will appear on the screen. Charge the battery immediately.
- If battery power runs out completely, the phone will be turned off automatically.
- When charging a completely drained battery, it will take longer for the charging status icon to appear on phone screen.

Turning on the phone

Open the flip. Press and hold the Power key  located on the keypad of the phone until a welcome screen appears.




You probably will be asked to enter your PIN code. Enter the PIN code and press **OK**. If you accidentally typed a wrong number, press **Clear** to erase it.


Note

For convenience of operation, your phone is equipped with two soft keys. You can press a softkey to execute the function that is indicated on the screen. In this manual, “press **OK**” refers to “press the softkey under **OK**, that is indicated on the screen”.

Press this soft key to confirm the PIN code you entered.

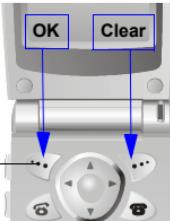

After the PIN code is verified, the phone will start searching for the network to use. If network is available, the operator name, signal strength and some other icons will appear on the screen (see "Icons on the screen" on page 10 for details). This is called the standby mode of the phone.

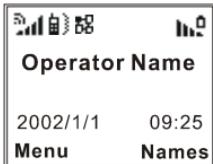

Dialing phone number

Enter the number you want to dial (including the area code) and press key. If the phone number you entered is wrong, press **Clear** to erase a wrong number, or press and hold **Clear** to clear a whole line.

Ending the call

When you want to end the call, press key (or press **End**). The call will be terminated.


Introduction to Your Phone




Parts of your phone and their names

Front view



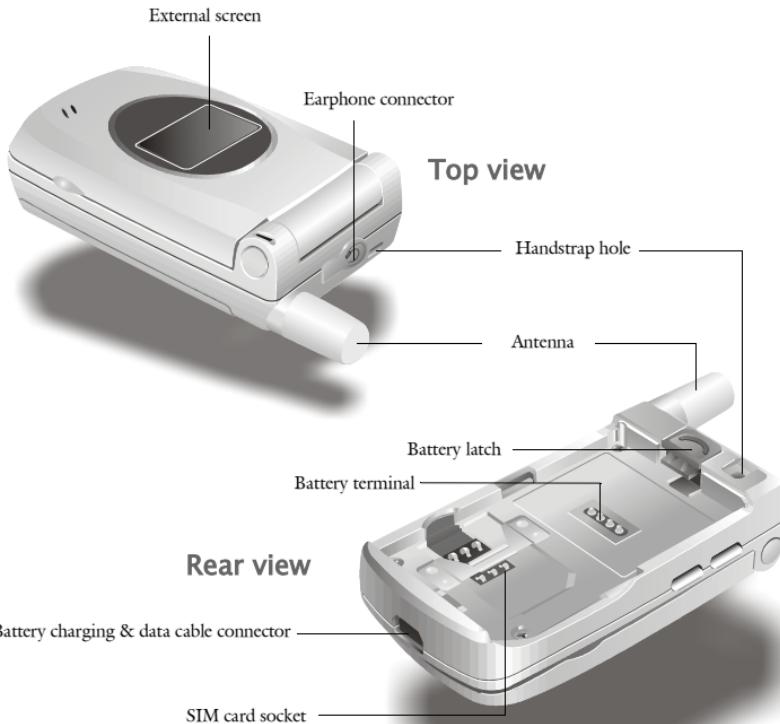

Icons on the screen

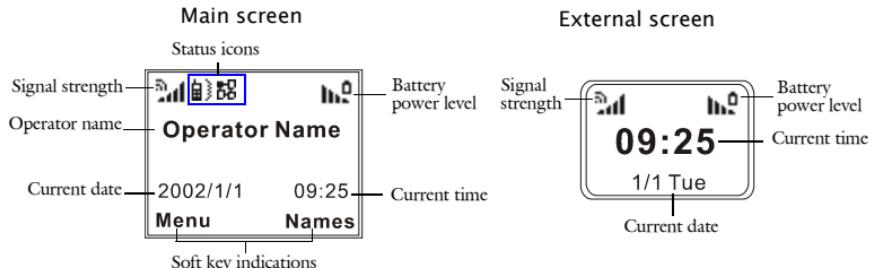

Please refer to the table below for the icons that appear on the screen and their meanings.

Icon	Name	Description
	Signal strength	Shows the condition of signal reception. The more the number of vertical bars, the better the reception of signal (Appearance of 4 bars indicates the best signal reception).
	Battery power level	Shows remaining battery power. The more the number of vertical bars, the more the battery power (Appearance of 4 bars indicates that the battery is full). If battery power is near empty, the battery icon flashes. At this time, charge the battery immediately. When charging, the vertical bars scroll until the battery is fully charged.
	Current time	Shows current time. See "Setting up current time and date" on page 63 for how to set up current time.
	New message	Appearance of this icon indicates that you have new unread message(s).
	Message full	This icon appears when the message storage is full. You need to delete some messages.
	New voicemail message	Appearance of this icon indicates that you have new voicemail messages.

Introduction to Your Phone

Status icons		Roaming	This icon appears when you are roaming under another network.
		Home zone	Appearance of this icon indicates that you are currently under your home network zone.
		Line 2	If you speak with the second telephone line, this icon will appear. (See "Selecting a phone line to use" on page 55 for details)
		Vibrator on	This icon appears when the vibrator function is turned on.
		Silent	This icon appears when you turn off all sounds of your phone.
		Key lock	This icon indicates that the key lock is ON. (See "Key lock" on page 66 for details)
		Call divert	This icon shows that the call divert function is turned ON. (See "Call divert" on page 51 for details)
		Call divert to voicemail box	This icon indicates that the Call divert to voicemail box function is enabled and your calls will be diverted to your voicemail box automatically.
		GPRS mode	When your phone is connected to a GPRS network, this icon will appear.
		Next call is set as fax call	This icon appears when you have set your phone ready to receive the next incoming call as fax call.
		Next call is set as data call	This icon appears when you have set your phone ready to receive the next incoming call as data call.
		Alarm	If you have activated the Alarm function, this icon will appear.
		Auto power off	If you have activated the Auto Power Off function, this icon will appear.
		New fax message	This icon appears when you have received a new fax message.
		New data message	This icon appears when you have received a new data message.


	New e-mail	This icon appears when you have received a new e-mail.
--	------------	--

The keys on the phone

Function keys


Key	Name	Description	
	Power key	<ul style="list-style-type: none"> Long press this key to turn phone power on or off. When phone power is on, press this key to open the Profile Selection menu. (See "Selecting sound profile" on page 18 for details) 	
	Call key	<ul style="list-style-type: none"> When there is an incoming call, press this key to answer the call. After phone number is entered using alphanumeric keys, press this key to dial. In standby mode, press to view the last dialed calls. 	
	Cancel key	<ul style="list-style-type: none"> Press to return to standby mode from the Main Menu. If there is an incoming call, press to reject the call. 	
	Navigation key	 <ul style="list-style-type: none"> In standby mode, press to access Phone Book. In Main Menu, press to scroll items up.  <ul style="list-style-type: none"> In standby mode, press to view miss calls. In Main Menu, press to return to the previous menu level. When entering text, press to move the cursor to the left.  <ul style="list-style-type: none"> In standby mode, press to view answered calls. In Main Menu, press to go to the submenus. When entering text, move the cursor to the right.  <ul style="list-style-type: none"> In standby mode, press to access Phone Book. In Main Menu, press this arrow to scroll items down. 	
	Left/Right Soft keys	Press these soft keys to execute corresponding commands that appear above them on the screen.	
Volume adjustment key		Press the key to adjust earpiece volume.	

Alphanumeric keys

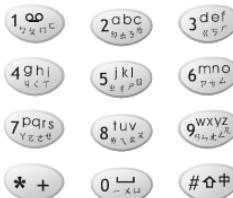

The alphanumeric keys on the phone can be used to enter numbers and letters. To enter phone numbers, press corresponding number keys directly. To enter letters, please see "Entering text" on page 21 for details.

Basic Operations

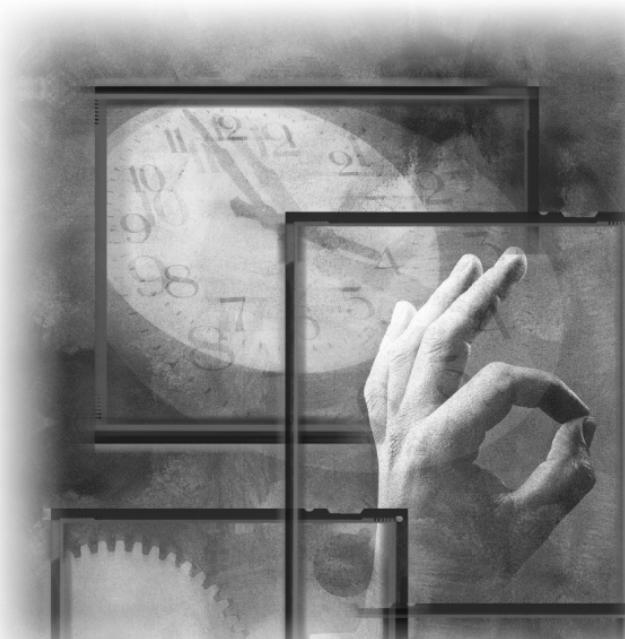

Turning on the phone

When phone power is off, press and hold the power key  to switch it on.

You will probably be asked to enter your PIN code. Enter PIN code and press **OK**. You can also choose to deactivate PIN code protection. Please see "Activating/deactivating PIN code" on page 68 for details.

A welcome screen will appear and the phone will start searching for its home network automatically. If the network is found, the operator and phone profile name, battery level icon and signal strength icon (and other icons if available) will appear on the screen.

Now the phone enters its standby mode. In this mode, you can:

- Press **Names** to enter Phone Book.
- Press **Menu** to access Main Menu.
- Press  or  to browse your Phone Book records.
- Press  to view missed call records.
- Press  to view answered call records.

Turning off the phone

When phone power is on, long press the power key  to switch it off.

Making a call

In standby mode, you can make an outgoing call using any of the methods below:

- Enter phone number using alphanumeric keys and press  key.
- Press  key two times to redial the last dialed call.
- Press  key to view last dialed call records.

Scroll to the one you want to call.

Press  key to dial.

- Press  to view missed call records.

Scroll to the one you want to call.

Press  key to dial.

- Press  to view answered call records.

Scroll to the one you want to call.

Press  key to dial.

- Find a phone number in the Phone Book and press  key to dial.

- Long press alphanumeric keys  ~  to dial the phone number located #2 ~#9 in the Phone Book. (You must set up Speed Dial and activate such function first. Please see "Setting up Speed Dial" on page 29 and "Speed dialing" on page 56 for details)

Note

Inserting pause

To insert a pause after phone number (used when there is an extension number following the phone number), long press  key until **P** appears.

For example, to call extension number 234 after the number **1234567**, enter **1234567** and then long press  key to insert a P, then enter the extension number **234**.

Making an international call

To make an international call:

1. Long press  key to insert a + (international dialing prefix).
2. Enter the recipient's country code and area code (omit the starting 0).
3. Enter the recipient's phone number.

During a call, the call time counter will appear on the screen, letting you know the time you spent on the call.

Making an emergency call

Press    (or any other emergency number specified by your operator) and then  key. Depending on your operator, the emergency call can be made even when there is no SIM card in the phone.

Answering/Rejecting a call

Your phone rings or vibrates (or remains silent, according to your setting of sound profile) when an incoming call is received. Meanwhile, the caller's name (if the caller's name can be identified and found in your Phone Book) or number will appear on the screen. Otherwise, "Unknown" will appear. You can:

- Press  key (or any key on the phone except  key, if the AnyKey Answer function has been activated, see "Anykey answer" on page 56) to answer the call.
- Or, if you have already activated the Flip answer function (refer to "Flip answer" on page 56), simply open the flip.
- To reject the incoming call, press  key.

Ending a call

Press  key to end a call. Depending on your setup in Session information (see "Session information" on page 50 for details), the session information may appear on the screen.

Missed call message

If you have missed calls, the icon  and number of missed calls will appear on the screen. You can press **Detail** to view detailed missed call records, or **Exit** to clear the screen and return to standby mode.

Adjusting earpiece volume

During a phone call, press the volume adjustment key to increase/decrease earpiece volume.

Selecting sound profile

1. Press the Power key  in standby mode. The sound profiles will appear on the screen.
2. Scroll to desired profile and press **Select**.

You can also customize these profiles. See "Customizing a sound profile" on page 58 for details.

Options during a call

During a call, you have the choice to access several in-call options.

To access these options:

1. Press **Options** during a call.
2. Scroll to a desired item in the In Call Option menu that appears.
3. Press **Select** to select it.

Making a new call

To make a new call during a call:

1. Highlight **Dial new call** in the **In Call Option** menu and press **Select**.
2. Enter the phone number of the second call and press  key.

Answering a new incoming call

If you have a new incoming call when you are already on a call, new incoming call message will appear on the screen. Press  key to put current call on hold and answer the new call. Press  key to end (or reject) the new incoming call and you will be connected to the old call automatically.

Transmitting DTMF tones

This feature allows you to send DTMF tones during a call. For example, when you are asked to enter your bank account number during a telephone banking service call.

To transmit DTMF tones:

1. Highlight **Send DTMF** in the **In Call Option** menu and press **Select**.

2. Enter the number you are asked to.

Ending calls

This feature allows you to end current call or end one of the calls on progress on a multi-party call.

To end current call:

Highlight **End Calls** in the **In Call Option** menu and press **Select**.

- To end one call on a multi-party call, highlight the call party you want to end and press **Select**.
- To end all calls, highlight **All** and press **Select**.

Consulting Phone Book

During a call, you can use this function to consult names and numbers in the Phone Book. For details about Phone Book, please refer to "Phone Book" on page 24.

To consult Phone Book during a call:

1. Highlight **Phone Book** in the **In Call Option** menu and press **Select**.
2. You will enter the Phone Book menu. You can search for a name and number or add a new number..., etc.

Accessing Main Menu

During a call, you can use this function to access the Main Menu. For details about Main Menu, please refer to "The Main Menu" on page 35.

To access Main Menu during a call:

1. Highlight **Main Menu** in the **In Call Option** menu and press **Select**.
2. The Main Menu will appear on the screen.

Muting/unmuting the microphone

If you don't want the calling party to hear your voice, you can use this function to mute the microphone.

To mute the microphone during a call:

Highlight **Mute** in the **In Call Option** menu and press **Select**.

To unmute the microphone:

Highlight **unmute** in the **In Call Option** menu and press **Select**.

Holding/unholding a call

If you have multiple calls in progress, you can use this function to hold one of the calls.

To hold a call:

1. Highlight **Hold** in the **In Call Option** menu and press **Select**.
2. Select the call you want to hold in the menu that appears.
3. Press **Select**.

To unhold calls:

1. Highlight **Unhold** in the **In Call Option** menu and press **Select**.
2. Select the call you want to unhold in the menu that appears.
3. Press **Select**.

Listening to your voice mail

When a new voice mail is received, the icon  appears on the screen. To listen to the new voice mail, long press  key in standby mode and connect to your voice mailbox.

Depending on your operator, you may need to configure your voice mailbox before you can use this function. Please refer to "Configuring voice mailbox number" on page 42 for how to setup your voice mailbox.

Reading messages

When a new message is received, new message alert will be generated (depending on your sound profile setting) and the new message prompt will appear on the screen.


To read the new message:

1. Press **Detail** to go to the list of received messages.
2. Scroll to the message you want to read and press **Select**.

Entering Text

The phone provides several input methods that enable you to enter text in Phone Book, write a message..., etc. You can also switch among these input methods easily.


When you add a new entry to your Phone Book (see "Adding a Phone Book entry" on page 25) or write a new message (see page), the following text editor screen appears:

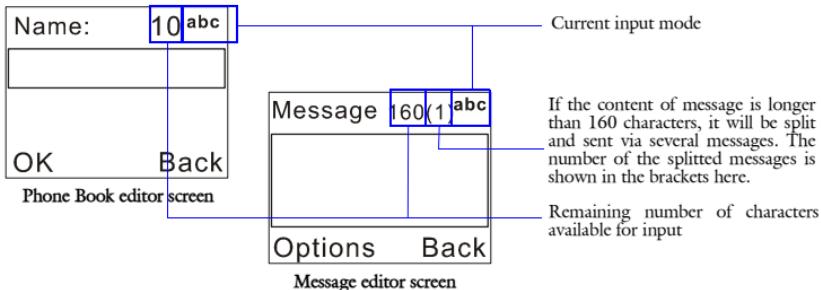


Selecting an input mode

1. Press **#[△]#** key. Available input modes will appear on the screen.
2. Scroll to the desired input method and press **Select**. The selected mode will appear on the upper right corner of the screen.
 - **abc mode:** Allows you to enter lower case letters.
 - **ABC mode:** Allows you to enter upper case letters.
 - **Abc mode:** The first letter entered is automatically capitalized.
 - **123 mode:** Allows you to enter numbers.
 - **T9 English mode:** Use T9 English input method.
 - **Symbol mode:** Enter punctuation marks and symbols.

Entering text

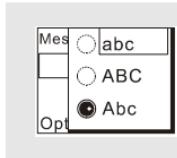

- Press a key and the corresponding letters will appear in a bar on the lower part of the screen.

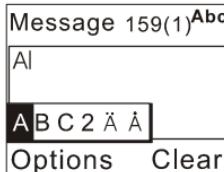

- Press the key several times to highlight the desired letter (or number) and it will be entered when the bar disappears. You can also proceed to enter the next letter when the desired letter (or number) is highlighted. The remaining number of letters you can enter is shown on the upper right corner of the screen.

Entering text using T9 English input method

The T9 English input method is able to detect your key presses and combine them into possible words automatically for you to select. This can dramatically reduce the time you need to select correct characters and words using conventional input method.

To use T9 English input method:

1. Select T9 English as the input mode.
2. Type the word you want to enter using the keypad. For example, if you want to enter the word "phone", press 7_{pho}, 4_{ne}, 6_{pho}, 6_{pho}, 3_{oef}.
3. If the word that appears on the screen is not the desired one, press \blacktriangle or \blacktriangledown to scroll to the word you want.
4. To enter the word, press \blacktriangleright . To enter the word and add a space after the word, press 0_{su}.

Erasing text

If you have entered a wrong character or number, press **Clear** to erase. Pressing and holding **Clear** will clear a whole line.

Press \blacktriangleleft or \blacktriangleright to move the cursor backward/forward.

Using key lock

The key lock helps to prevent unwanted key operations when you carry your phone.

To enable key lock:

In standby mode, press **Menu**, then  key.

To unlock:

Press **Unlock**, and then press  key.

Phone Book



Adding a Phone Book entry

You can add a new entry to Phone Book in the following ways:

Method 1

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Add** and press **Select**.
3. You will be prompted to enter the name of the entry. Enter the name and press **OK**.
4. Enter the phone number and press **OK**.

Method 2

1. In standby mode, enter the number using the alphanumeric keys.
2. Press **Save**. You will be prompted to enter the name of the entry. Enter the name and press **OK**.

Method 3

1. During a call, enter the number using the alphanumeric keys.
2. Press **Save**. You will be prompted to enter the name of the entry. Enter the name and press **OK**.

Searching for a Phone Book entry

To search for a Phone Book entry:

1. Enter Phone Book by pressing **Names** in standby mode.
2. Press **Select**.
3. Enter the name of the Phone Book entry you want to look for. You can also enter only the beginning few letters of the name.
4. The entries that match the name (or contain the letters) you entered will appear on the screen.

Editing a Phone Book entry

Editing name

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the name and press **Options**.
4. Press **Select**.

5. Edit the name and when finished, press **OK**.

Editing number

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the number and press **Options**.
4. Press **Select**.
5. Edit the number and when finished, press **OK**.

Adding new phone number to existing entries

You can record up to 3 different phone numbers under a Phone Book entry.

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the name (or number) and press **Options**.
4. Scroll to **Add Number** and press **Select**.
5. Enter the new number and when finished, press **OK**.
6. You will be prompted to select a type for the new number. Scroll to an appropriate type and press **Select**.

Changing caller group

The Caller group function allows you to separate your Phone Book entries in different groups. For details about the Caller group function, please refer to "Setting up Caller Group" on page 30.

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the name (or number) press **Options**.
4. Scroll to **Change group** and press **Select**.
5. Scroll to a desired caller group and press **Select**.

Sending an entry as business card

With this function, you can send the details of a Phone Book entry to another person as a business card.

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the name (or number) and press **Options**.
4. Scroll to **Send business card** and press **Select**.

5. If you want to include only the default phone number of the entry on the business card, press **Select**. To send a business card that contains all numbers under the entry, scroll to **Send details** and press **Select**.
6. If you want to send the business card as a new message immediately, scroll to **Send as SMS** and press **Select**. Enter the number of the recipient (or pick up a recipient from Phone Book by pressing **Names**) and press **Send**. If you want to edit the business card before sending it, scroll to **Send as text** and press **Select**.

Assigning default phone number

If you have multiple phone numbers under a Phone Book entry, you can assign one of these numbers as default number. This default number is dialed when you make a call from the Phone Book or using the Speed Dial function.

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the number you want to set as default and press **Options**.
4. Scroll to **Set as default** and press **Select**.

Changing the type of number

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the number and press **Options**.
4. Scroll to **Change Type** and press **Select**.
5. Scroll to a desired type for the number and press **OK**.

Sending messages from Phone Book

To send a new message from Phone Book:

1. Scroll to a Phone Book entry.
2. Press **Detail**.
3. Scroll to the number and press **Options**.
4. Scroll to **Send message** and press **Select**.
5. Compose the message. When finished, press **Options** and then **Send** to send the message.

Erasing Phone Book entry

Method 1

1. Enter Phone Book by pressing **Names** in standby mode.

2. Scroll to **Erase** and press **Select**.

To erase Phone Book entries one by one:

1. Press **Select**.

2. Scroll to select the Phone Book entry you want to erase and press **OK**.

3. Press **OK**.

To erase all Phone Book entries:

1. Scroll to **All**.

2. To delete all Phone Book entries stored in phone memory, scroll to **Phone**.

To delete entries on the SIM card, scroll to **SIM**.

3. Press **Select**.

Method 2

1. In Phone Book, scroll to the entry you want to erase and press **Detail**.

2. Scroll to the **name (or number)** and press **Options**.

3. Scroll to **Erase** and press **Select**.

Copying Phone Book entry

Method 1

With the copy function, you can copy Phone Book entries in the phone memory to SIM card memory and vice versa.

1. Enter Phone Book by pressing **Names** in standby mode.

2. Scroll to **Copy** and press **Select**.

To copy Phone Book entries from phone to SIM card:

Press **Select**. You can choose to copy Phone Book entries one by one or all at once.

To copy Phone Book entries from SIM card to phone:

Scroll to **SIM to Phone** and press **Select**. You can choose to copy Phone Book entries one by one or all at once.

Method 2

1. In Phone Book, scroll to the entry you want to copy and press **Detail**.

2. Scroll to the **name (or number)** and press **Options**.

3. Scroll to **Copy** and press **Select**.

4. If you want to keep the original and make a copy to another location (i.e, if your Phone Book is using SIM card memory, it will be copied to the phone memory and vice versa), scroll to **Keep original**. To move the entry to another location, scroll to **Move original**.
5. Press **Select**.

Setting up Speed Dial

Speed Dial is a shortcut that allows you to make a call simply by long pressing alphanumeric keys  .

To set up speed dial:

Method 1

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. Choose an empty speed dial key and press **Select**.
4. Your Phone Book entries will appear on the screen. Pick up a number by pressing **Select**.

Method 2

1. Long press a key that has not been assigned a speed dial number.
2. The screen will prompt you to assign the speed dial key. Press **OK**.
3. Press **Select**.
4. Your Phone Book entries will appear on the screen. Pick up a number by pressing **Select**.

Viewing speed dial number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. On the speed dial list that appears, scroll to choose a number to view.
4. Press **Options** and then **Select**.

Changing speed dial number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. On the speed dial list that appears, scroll to choose a number to change.
4. Press **Options**.

5. Scroll to **Change** and press **Select**.
6. Your Phone Book numbers will appear on the screen. Pick up a new number by pressing **OK**.

Erasing speed dial number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. On the speed dial list that appears, scroll to choose a number to erase.
4. Press **Options**.
5. Scroll to **Erase** and press **Select**.

Setting up Caller Group

You can place your Phone Book entries under different Caller Groups and give each Caller Group different ringtone and screen pictures. When you have an incoming call, you can judge the caller by its specific Caller Group.

Creating a new Caller Group

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Caller Group** and press **Select**.
3. The Caller Group list will appear on the screen. Scroll to a caller group and press **Select**.
4. Scroll to **Ring Tone** and press **Select**. Scroll to a desired ring tone and press **OK**.
5. Scroll to **Graphic** and press **Select**. If you want to choose a screen graphic for the Caller Group, Scroll to **On** and press **OK**. Scroll to **View** and press **Select** to choose a graphic. Otherwise, select **Off**. Press **Back** to return to the previous menu.

Renaming a Caller Group

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Caller Group** and press **Select**.
3. The Caller Group list will appear on the screen. Scroll to the caller group you want to rename and press **Select**.
4. Press **Select**. Enter a new name of the Caller Group.
5. Press **OK**.

Miscellaneous settings

Personal number

You can store your own phone number here. Up to two personal numbers can be saved.

Adding a personal number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Personal Number** and press **Select**.
3. Press **Options** and select **Add**.
4. Enter your name and number.
- 5 Press **OK**.

Editing personal number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Personal Number** and press **Select**.
3. Scroll to the number you want to edit and press **Options**.
4. Scroll to **Edit** and press **Select**.
5. Edit the name and number. When finished, press **OK**.

Erasing personal number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Personal Number** and press **Select**.
3. Scroll to the number you want to erase and press **Options**.
4. Scroll to **Erase** and press **Select**.

Fixed dial number

If your SIM card supports, you can use this function to restrict outgoing calls only to the numbers (or the numbers that begin with the same digit(s)) on the fixed dial list.

Activating Fixed dial

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Press **On**.
4. Enter your PIN 2 code and press **OK**.

Adding new Fixed dial number

You need to activate Fixed dial before adding new Fixed dial number.

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **View** and press **Select**.
4. Press **Options**.
5. Scroll to **Add** and press **Select**.
6. Enter your PIN 2 code and press **OK**.
7. Enter the name of the fixed dial number. Press **OK**.
8. Enter the number. Press **OK**.

Viewing Fixed dial number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **View** and press **Select**.

Editing Fixed dial number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **View** and press **Select**.
4. Scroll to a Fixed dial number and press **Options**.
5. Scroll to **Edit** and press **Select**.
6. Enter your PIN2 code and press **OK**.
7. Edit the name and number. When finished, press **OK**.

Erasing Fix dial number

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **View** and press **Select**.
4. Scroll to a Fixed dial number and press **Options**.
5. Scroll to **Erase** if you want to erase selected Fixed dial number. If you want to erase all fixed dial numbers, scroll to **Erase all**. Press **Select**.
6. Enter your PIN2 code and press **OK**.
7. Press **OK** to confirm.

Your own business card

You can create your own business card and send it to other person.

Creating your own business card

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Edit** and press **Select**.
4. Enter all necessary information. When finished, press **Save**.

Viewing your business card

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Press **Select**.

Sending your business card

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Send My Own Card** and press **Select**.
4. If you want to send the business card as a new message immediately, press **Select**. Enter the number of the recipient (or pick up a recipient from Phone Book by pressing **Names**) and press **Send**.
If you want to edit the business card before sending it, scroll to **Send as text** and press **Select**.

You can also determine the information that will be sent along with the business card.

1. Before sending the business card, scroll to **Info. setting** and press **Select** in step 4 above.
2. Scroll to each item of business card and press **Off** or **On** to uncheck or check it. Only checked items will be included on the business card.
3. Press **Back** and then **Yes**.

Editing your business card

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Edit** and press **Select**.
4. Edit the contents of your business card. When finished, press **Save**.

Erasing your business card

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Erase** and press **Select**.

Phone Book memory setting

Selecting Phone Book memory


You can select the memory to use for your Phone Book.

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Option** and press **Select**.
3. Press **Select**.
4. Scroll to **SIM** if you want to use SIM memory, or **Phone** if you want to use phone memory.
5. Press **OK**.

Checking Phone Book memory status

1. Enter Phone Book by pressing **Names** in standby mode.
2. Scroll to **Option** and press **Select**.
3. Scroll to **Memory status** and press **Select**. The status of memory will appear on the screen.

The Main Menu

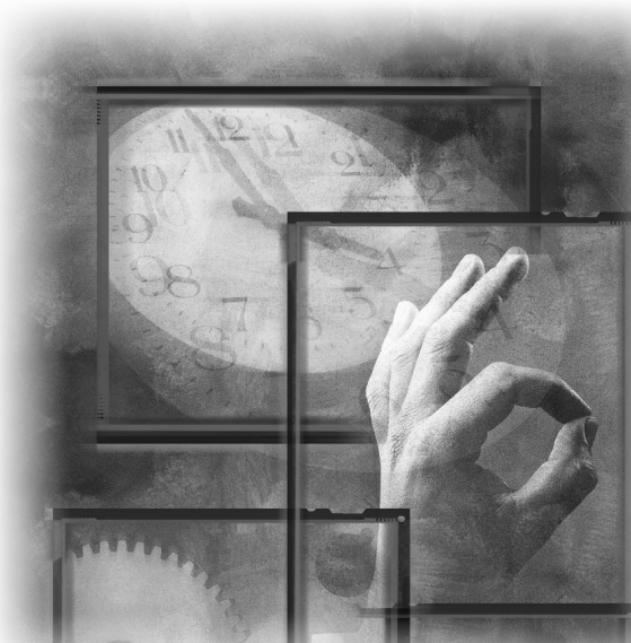

Overview

The main menu of your phone is accessed by pressing **Menu** in standby mode.

To navigate in the Main Menu

Press **▲** or **▼** to scroll the menu.


Press **▶** or **Select** to view the contents of the menu or select an option.

Press **◀** or **Exit** to return to previous menu or abort selection.

You can also navigate using the quick access keys:

1. In standby mode, press **Menu**.

2. Press the quick access keys. For example, to go to **Dialed Calls**, press   . See Appendix for the quick access keys.

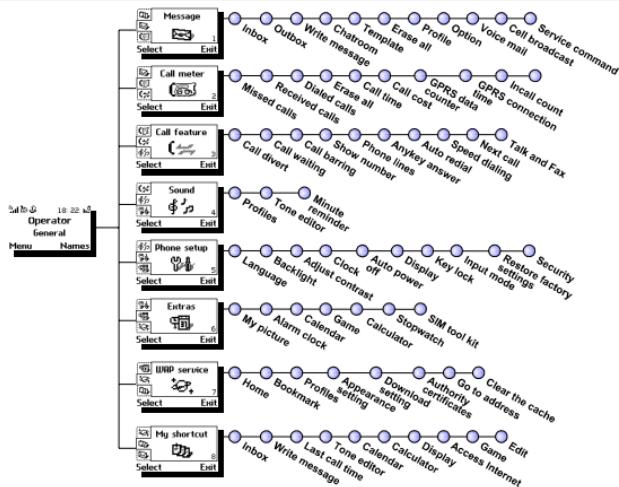

Message

The options in the Message menu allow you to write, send and receive messages and setup message settings.

Note

Before you can use the Message functions, make sure that related message settings has been configured properly (Depending on your operator, the settings may have already been programmed on the SIM card). Refer to "Message settings" on page 42 for details.

Message

Writing and sending new messages

You can write long text messages that contain up to 160 characters (including spaces and symbols). Besides, your phone supports EMS (Enhanced Messaging Service) standard which allows you to insert picture, sound, animation and melodies in a message.

Note

The recipient's phone must also support EMS functionality to receive and view your EMS messages.

To write a new message:

1. In standby mode, press **Menu**, **Select**.
2. Scroll to **Write message** and press **Select**.
3. Enter the content of the message. When finished, press **Options** to access the options below:
 - **Send**: Send the message immediately. If this option is selected, you will be prompted to enter the number of the recipients. You can also pick up the recipients from your Phone Book by pressing **Names**.
The message can be sent to one recipient and copy to up to 9 recipients.
 - **Save**: Save the message as a draft in Outbox.
 - **Insert template**: Insert message templates stored in the phone. You can also customize your own templates. Please refer to "Customizing templates" on page 41 for how to customize message templates.
 - **Insert number**: Insert a phone number from your Phone Book.
 - **Insert name**: Insert a name from your Phone Book.
 - **Insert picture**: Insert a picture into the message. You can also draw your own picture. For details, refer to "My Picture" on page 72.
 - **Insert animation**: Insert an animation into the message.