
Making Your First Call



Making Your First Call

Installing SIM card

What is a SIM card?

The SIM (Subscriber Identification Module) card is a small plastic card with metal contact on it. You get this card after you subscribe to your operator. Your personal subscriber information is stored in the SIM card and you need to use this card in the phone to make/receive calls and access services provided by your operator.

1. Turn the phone face down.
2. Open the back cover.
3. Slide the SIM card into the SIM card socket.

Installing and charging the battery

1. Place the top end of the battery on the back of the phone, then push the bottom end into the phone until you hear a click.
2. Install the battery cover.
3. Insert the battery charger connector into the battery charging socket located at the bottom of the phone, and then plug into the electric power outlet.

Note

- When the battery is being charged, the bars of the charging status icon on phone screen scrolls. When charging is completed, the bars will stop scrolling.
- You can use the phone while charging, however, it will take longer to charge the battery.
- For future use of the battery, it takes approximately 3 hours to complete the recharging process.
- When battery power is low, low battery message will appear on the screen. Charge the battery immediately. If battery power runs out, the power of phone will be turned off automatically.

Making Your First Call

Turning on the phone

1. Press and hold the power key located on the bottom right-hand corner of the phone.
2. A welcome screen appears and you probably will be asked to enter your PIN code. Enter the PIN code and press **OK**. If you accidentally typed a wrong number, press **Clear** to erase it.

Note

For convenience of operation, your phone is equipped with two soft keys. You can press a softkey to execute the function that is indicated on the screen. In this manual, "press **OK**" refers to "press the softkey under **OK** that is displayed on the screen".

3. After the PIN code is verified, you will be prompted to enter current time and date. Enter the information and press **OK**.
4. The phone will start searching for the network to use. If network is available, the operator name, signal strength and some other icons will appear on the screen (see "Icons on the screen" on page 6 for details). This is called the standby mode of the phone.



Dialing the number

Enter the number you want to dial (including the area code) and press  key. If the phone number you entered is wrong, press **Clear** to erase a wrong number, or press and hold **Clear** to clear a whole line.

Ending the call


Making Your First Call

When you want to end the call, press  key (or press **End**). The call will be terminated.

Making Your First Call


Parts of your phone and their names

Front view

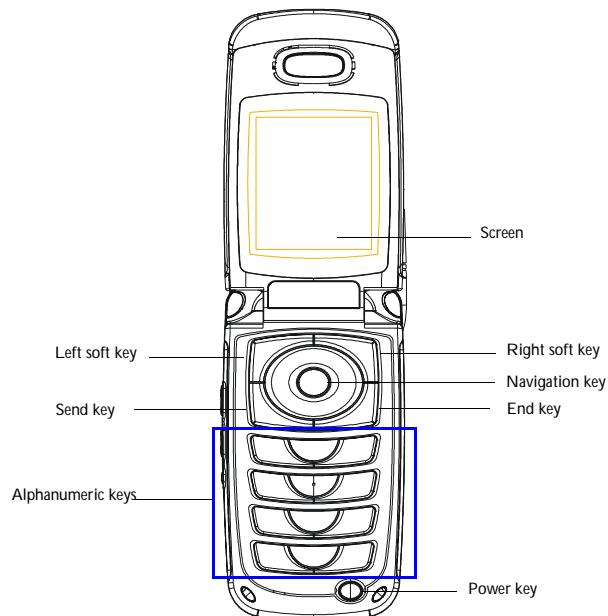

Making Your First Call

Icons on the screen

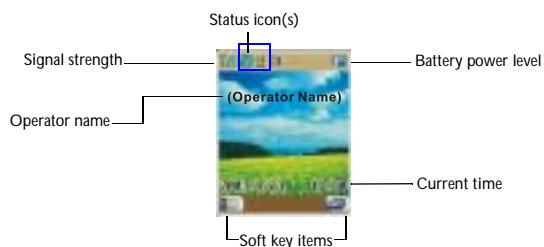

Please refer to the table below for the icons that appear on the screen and their meanings.

Icon	Name	Description
	Signal strength	Shows the condition of signal reception. The more the number of vertical bars, the better the reception of signal (Appearance of 4 bars indicates the best signal reception).
	Battery power level	Shows remaining battery power. The more the number of vertical bars, the more the battery power (Appearance of 4 bars indicates that the battery is full). If battery power is near empty, charge it immediately. When charging, the vertical bars scroll until the battery is fully charged.
	Current time	Shows current time. See "Setting up current time and date" on page 73 for how to set up current time.
	Current date	Shows current date. See "Setting up current time and date" on page 73 for how to set up current time.
	New text message	Appearance of this icon indicates that you have new unread text message(s).
	Message full	This icon appears when the message storage is full. You need to delete some messages.

Introduction to Your Phone



Introduction to Your Phone

Status icons		New voicemail message	Appearance of this icon indicates that you have new voicemail messages.
		Roaming	This icon appears when you are roaming under another network.
		Line 2	If you speak with the second telephone line, this icon will appear. (See "Selecting a phone line to use" on page 65 for details)
		Vibrator on	This icon appears when the vibrator function is turned on.
		Silent	This icon appears when you turn off all sounds of your phone.
		Call divert	This icon shows that the call divert function is turned ON. (See "Call divert" on page 61 for details)
		GPRS mode	When your phone has been connected to the GPRS network, this icon will appear.
		Next call is set as fax call	This icon appears when you have set your phone ready to receive the next incoming call as fax call.
		Next call is set as data call	This icon appears when you have set your phone ready to receive the next incoming call as data call.
		Alarm	If you have activated the Alarm function, this icon will appear.
		Auto power off	If you have activated the Auto Power Off function, this icon will appear.
		New fax message	This icon appears when you have received a new fax message.
		New data message	This icon appears when you have received a new data message.
		New e-mail	This icon appears when you have received a new message in e-mail format.

Introduction to Your Phone

The keys on the phone

Function keys

Key	Name	Description				
	Power key	<ul style="list-style-type: none">• Long press this key to turn phone power on or off.• When phone power is on, press this key to open the Profile Selection menu. (See "Selecting sound profile" on page 14 for details)				
	Call key	<ul style="list-style-type: none">• When there is an incoming call, press this key to answer the call.• After phone number is entered using alphanumeric keys, press this key to dial.• In standby mode, press to view the last dialed calls. Press again to dial.				
	Cancel key	<ul style="list-style-type: none">• Press to return to standby mode from the Main Menu.• If there is an incoming call, press to reject the call.				
	Navigation key	Up	<ul style="list-style-type: none">• In standby mode, press to access Phone Book.• In Main Menu, press to scroll items up.			
		Left	<ul style="list-style-type: none">• In standby mode, press to view missed calls.• In Main Menu, press to return to the previous menu level.• When entering text, press to move the cursor to the left.			
		Right	<ul style="list-style-type: none">• In standby mode, press to view answered calls.• In Main Menu, press to go to the submenus.• When entering text, move the cursor to the right.			
		Down	<ul style="list-style-type: none">• In standby mode, press to access Phone Book.• In Main Menu, press this arrow to scroll items down.			
	Left/Right Soft keys	Press these soft keys to execute corresponding commands that appear above them on the screen.				
	Volume adjustment key	Press the key to adjust earpiece volume.				

Introduction to Your Phone

Turning on the phone

When phone power is off, press and hold the power key to switch it on. If the PIN code protection function has been activated, you will be asked to enter your PIN code. Enter the code and press **OK**. You can also choose to turn off PIN code protection. Please see "Activating/deactivating PIN code" on page 79 for details.

A welcome screen will appear and the phone will start searching for its home network automatically. If the network is found, the operator and phone profile name, battery level icon and signal strength icon (and other icons if available) will appear on the screen (Please see "Icons on the screen" on page 6 for details).

Now the phone enters its standby mode. In this mode, you can:

- Press the right soft key to enter Phone Book.
- Press the left soft key to access Main Menu.
- Press **Up** or **Down** to browse your Phone Book records.
- Press **Left** to view missed call records.
- Press **Right** to view answered call records.
- Long press  key to access your voicemail box.
- Long press  key to access My shortcut.
- Press the power key to access Profile menu.

Turning off the phone

When phone power is on, long press the power key to switch it off.

Making a call

In standby mode, you can make an outgoing call in the following ways:

- Enter phone number using alphanumeric keys and press  key.
- Press  key two times to redial the last dialed call.
- Press  key to view last dialed call records.
Scroll to the one you want to call.
Press  key to dial.
- Press **Left** to view missed call records.
Scroll to the number you want to call.

Introduction to Your Phone

Press  key to dial.

- Press **Right** to view answered call records. Scroll to the number you want to call. Press  key to dial.
- Find a phone number in the Phone Book and press  key to dial.
- Long press alphanumeric keys  ~  to dial the phone number located #2 ~ #9 in the Phone Book. (You must set up Speed Dial and activate such function first. Please see "Setting up Speed Dial" on page 30 and "Speed dialing" on page 66 for details)

Note

Inserting pause

To insert a pause after phone number (used when there is an extension number following the phone number), long press  key until **P** appears.

For example, to call extension number 234 after the number 1234567, enter 1234567 and then long press  key to insert a P, then enter the extension number 234.

Making an international call

To make an international call:

1. Long press  key to insert a + (international dialing prefix).
2. Enter the recipient's country code and area code (omit the starting 0).
3. Enter the recipient's phone number.


During a call, the call time counter will appear on the screen, letting you know the time you spent on the call.

Note

You can only make an emergency call when the home network is not found (the signal strength icon will appear on the screen with no bars).

Introduction to Your Phone

Alphanumeric keys

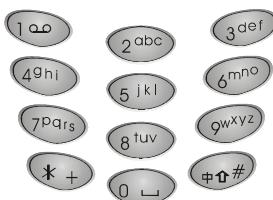

The alphanumeric keys on the phone can be used to enter numbers and letters. To enter phone numbers, press corresponding number keys directly. To enter letters, please see "Entering latin characters and words" on page 21 for details.

Basic Operations



Basic Operations

Making an emergency call

Press    (or any other emergency number specified by your operator) and then  key. Depending on your operator, the emergency call can be made even when there is no SIM card in the phone.

Answering a call

Your phone rings or vibrates (or remains silent, according to the setting of sound profile) when an incoming call is received. Meanwhile, the caller's name (if the caller's name can be found in your Phone Book) or number will appear on the screen. Otherwise, "Unknown" will appear instead. You can:

- Press  key (or any key on the phone except  key, if the AnyKey Answer function has been turned on) to answer the call.
- Press  key to reject the call.

Ending a call

Press  key to end a call. Depending on your setup in Session information (see "Session information" on page 60 for details), the session information may appear on the screen.

Missed call message

If you have missed calls, the number of missed calls will appear on the screen. You can press **Detail** to view detailed missed call records, or **Exit** to clear the screen and return to standby mode.

Adjusting earpiece volume

During a phone call, press the volume adjustment key to increase/decrease earpiece volume.

Selecting sound profile

1. Press the power key in standby mode. The sound profiles menu will appear on the screen.
2. Scroll to desired profile and press **OK**.

Basic Operations

You can also customize these profiles. See "Customizing a sound profile" on page 69 for details.

Options during a call

During a call, you have the choice to access several in-call options.

To access these options:

1. Press **Options** during a call.
2. Scroll to a desired item in the In Call Option menu that appears.
3. Press **Select** to select it.

Making a new call

To make a new call during a call:

1. Highlight **Dial new call** in the **In Call Option** menu and press **Select**.
2. Enter the phone number of the second call and press  key.

Answering a new incoming call

If you have a new incoming call when you are already on a call, new incoming call message will appear on the screen. Press  key to put current call on hold and answer the new call. Press  key to end (or reject) the new incoming call and you will be connected to the old call automatically.

Note

Holding a call need support from your operator, and the Call waiting function has to be activated (See "Call waiting" on page 62).

Holding/unholding a call

If you have multiple calls in progress, you can use this function to hold one of the calls.

To hold a call:

1. Highlight **Hold** in the **In Call Option** menu and press **Select**.
2. Select the call you want to hold in the menu that appears.
3. Press **Select**.

Basic Operations

To unhold calls:

1. Highlight **Unhold** in the **In Call Option** menu and press **Select**.
2. Select the call you want to unhold in the menu that appears.
3. Press **Select**.

Switching calls

If you have two active calls, you can use this function to switch between them.

To switch calls, scroll to **Switch** in the **In Call Option** menu and press **Select**.

Transferring a call

If you have two active calls, this function allows you to transfer one call to the other.

To transfer a call, scroll to **Transfer** in the **In Call Option** menu and press **Select**.

Conference call

If you have multiple active calls, you can use this function to connect all calling parties so they can talk to each other at the same time.

To establish a conference call, scroll to **Conference** in the **In Call Option** menu and press **Select**.

Private call on a conference call

When a conference call is in progress, you can use this function to talk to one of the calling parties privately.

To switch to a private call on a conference call:

1. On a conference call, scroll to **Private** in the **In Call Option** menu and press **Select**.
2. Scroll to a calling party and press **Select**.
3. To return to the conference call, scroll to **Conference** in the **In Call Option** menu and press **Select**.

Ending calls

This feature allows you to end current call or end one of the calls on progress on a multi-party call.

To end current call:

Basic Operations

Highlight **End Calls** in the **In Call Option** menu and press **Select**.

- To end one call on a multi-party call, highlight the call party you want to end and press **Select**.
- To end all calls, highlight **All calls** and press **Select**.

Transmitting DTMF tones

This feature allows you to send DTMF tones during a call. For example, when you are asked to enter your bank account number during a telephone banking service call.

To transmit DTMF tones:

1. Highlight **Send DTMF** in the **In Call Option** menu and press **Select**.
2. Enter the number you are asked to.

Consulting Phone Book

During a call, you can use this function to consult names and numbers in the Phone Book. For details about Phone Book, please refer to "Phone Book" on page 25.

To consult Phone Book during a call:

1. Highlight **Phone Book** in the **In Call Option** menu and press **Select**.
2. You will enter the Phone Book menu. You can search for a name and number or add a new number..., etc.

Accessing Main Menu

During a call, you can use this function to access the Main Menu. For details about Main Menu, please refer to "The Main Menu" on page 38.

To access Main Menu during a call:

1. Highlight **Main Menu** in the **In Call Option** menu and press **Select**.
2. The Main Menu will appear on the screen.

Muting/unmuting the microphone

If you don't want the calling party to hear your voice, you can use this function to mute the microphone.

To mute the microphone during a call:

Highlight **Mute** in the **In Call Option** menu and press **Select**.

To unmute the microphone:

Basic Operations

Highlight **Unmute** in the **In Call Option** menu and press **Select**.

Listening to your voice mail

When a new voice mail is received, the icon  appears on the screen. To listen to the new voice mail, long press  key in standby mode and connect to your voice mailbox.

Depending on your operator, you may need to configure your voice mailbox before you can use this function. Please refer to "3. Scroll to the profile you configured and press Select two times." on page 49 for how to setup your voice mailbox.

Reading messages

When a new message is received, new message alert will be generated (depending on your sound profile setting), the "new message" prompt and the icon  will appear on the screen.

To read the new message:

1. Press **Detail** to go to the list of received messages.
2. Scroll to the message you want to read and press **Select**.

Reading multimedia messages

When a new multimedia message is received, new message alert will be generated (depending on your sound profile setting) and the "new message" prompt  will appear on the screen.

To read the new message:

1. Press **Detail** to go to the list of received messages.
2. Scroll to the message you want to read and press **Select**.

You can turn on the **Auto fetch** function if you want your phone to retrieve the multimedia message immediately. If you select **Ask me**, a notice will be sent to the **Inbox** first (See "Retrieving messages automatically" on page 49).

To read the new multimedia message:

1. Press the left soft key two times in standby mode.
2. Scroll to **Multimedia msgs.** and press **Select**.
3. Scroll to **Inbox** and press **Select**.
4. Scroll to a message with an icon  , press **Select** for the following options:

Basic Operations

- **Fetch this msg.:** Fetch the message immediately.
- **Erase:** Erase the message immediately without fetching it.
- **Detail info.:** View the title, sender's number and memory size of this message.

Note

- If a multimedia message is received during a call, you still have to enter the Inbox and fetch this message by yourself after the phone call is end even if you have turned on the Auto fetch function.
- A maximum of 30KB is allowed for each received multimedia message. The message will not be fetched by your phone if its memory size is over 30KB.
- If there is any inserted multimedia objects in a received multimedia message that can not be displayed by your phone, their names will be shown on the screen.

Receiving and saving business card

When a new business card is received, new business card alert will be generated (depending on your sound profile setting) and the "new business card" prompt will appear on the screen.

To read the new business card:

1. Press **Detail** to go to the list of received business cards.
2. Scroll to the business card you want to read, press **Select** for the following options:
 - Press **Select** to view the business card.
 - Scroll to **Save** and press **Select** to save the new business card as a Phone Book entry.
 - Scroll to **Discard** and press **Select** to abort this business card without saving.

You can also edit and send your own business card (See "Your own business card" on page 33) or send Phone Book data to another person as business cards (See "Sending an entry as business card" on page 28).

Receiving and saving operator logo

Operator logo download is an extra service. You can replace the operator name shown on the screen with the new logo. When the operator logo is received, **New logo** will appear on the screen and your phone alert will also be generated (depending on your sound profile setting). Press **Detail** to access the following options:

Basic Operations

- Press **Select** to view the operator logo.
- Scroll to **Save** and press **Select** to replace the old logo with the new one.
- Scroll to **Save as** and press **Select** to save the new logo as a picture.
- Scroll to **Abort** and press **Select** to abort this logo.

Receiving and saving ring tone


Ring tone download is an extra service. When the ring tone is received, **New ring tone** will appear on the screen and your phone alert will also be generated (depending on your sound profile setting). Press **Detail** to access the following options:

- Scroll to **Play** to play the ring tone.
- Scroll to **Save** and press **Select** to save as a profile.
- Scroll to **Abort** and press **Select** to abort this ring tone.

Entering Text

The phone provides several input methods that enable you to enter text in Phone Book, write a message..., etc. You can also switch among these input methods easily.

When you add a new entry to your Phone Book (see "Adding a Phone Book entry" on page 25) or write a new message (see "Writing and sending new messages" on page 40), the following text editor screen appears:

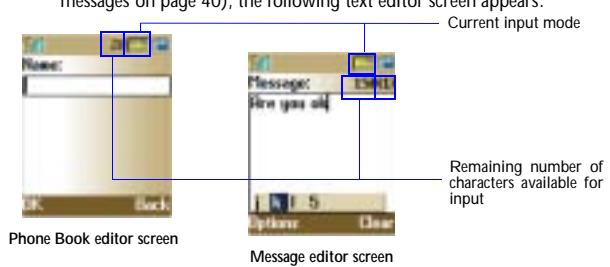

Selecting an input mode

Basic Operations

1. Press  key. Available input modes will appear on the screen.
2. Scroll to the desired input method and press **Select**. The selected mode will appear on the upper right corner of the screen.
 - **abc mode**: Allows you to enter lower case letters.
 - **ABC mode**: Allows you to enter upper case letters.
 - **Abc mode**: The first letter entered is automatically capitalized.
 - **123 mode**: Allows you to enter numbers.
 - **T9 English**: Allows you to enter text using T9 English input method.
 - **BPMF**: Allows you to enter Chinese characters using BPMF.
 - **Stroke**: Allows you to enter Chinese characters using Stroke.
 - **Simp. Stroke**: Allows you to enter simplified Chinese characters.
 - **Pinyin**: Allows you to enter Chinese characters using phonetic alphabet.
 - **Symbol**: Allows you to enter punctuation marks and symbols.

Entering latin characters and words

Entering characters and words using multi-tap input methods

1. Select **abc**, **ABC** or **Abc** mode in the input mode selection menu.
2. Press a key and the corresponding letters will appear in a bar on the lower part of the screen.
3. Press the key several times to highlight the desired letter (or number) and it will be entered when the bar disappears. You can also proceed to enter the next letter when the desired letter (or number) is highlighted. The remaining number of letters you can enter is shown on the upper right corner of the screen.

Long press  key to switch between upper and lower cases.



Basic Operations

The table below shows the mapping of each key and the corresponding letter in different input modes.

Keys	Input Modes		
	ABC	abc	123
0 	(Space) + - * / = > < #		0
1 	. ! ? , @ & : " () ' ð ï % £ \$		1
2 	ABC 2 Ä Å à ã ß Ç	a b c 2 ä å à ¥ ß Ç	2
3 	DEF 3 Ä É è ñ ñ ñ ñ	def 3 Ä É è ñ ñ ñ ñ	3
4 	GHI 4 ñ ñ ñ ñ	g h i 4 ñ ñ ñ ñ	4
5 	JKL 5 ñ ñ ñ ñ	j k l 5 ñ ñ ñ ñ	5
6 	MNO 6 ñ ñ ñ ñ ñ ñ	m n o 6 ñ ñ ñ ñ ñ ñ	6
7 	PQRS 7 ñ ñ ñ ñ ñ ñ	p q r s 7 ñ ñ ñ ñ ñ ñ	7
8 	TUV 8 ñ ñ ñ ñ ñ ñ	t u v 8 ñ ñ ñ ñ ñ ñ	8
9 	WXYZ 9 ñ ñ ñ ñ ñ ñ	w x y z 9 ñ ñ ñ ñ ñ ñ	9

 
Entering text using T9 English input method

The T9 English input method is able to detect your key presses and combine them into possible words automatically for you to select. This can dramatically

Basic Operations

reduce the time you need to select correct characters and words using conventional input method.

To use T9 English input method:

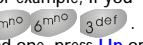1. Select **T9 English** in the input mode selection menu.
2. Type the word you want to enter using the keypad. For example, if you want to enter the word "phone", press  .
3. If the word that appears on the screen is not the desired one, press **Up** or **Down** to scroll to the word you want.
4. To enter the word and add a space after the word, press  .

Long press  key to switch between upper and lower cases.

Entering numbers

1. Select **123** in the input mode selection menu.
2. Enter numbers using the alphanumeric keys.

Entering symbols

1. Select **Symbol** in the input mode selection menu.
2. Scroll to the symbol you want to enter and then press **Select**.

Erasing text

If you have entered a wrong character or number, press **Clear** to erase. Pressing and holding **Clear** will clear a whole line.

Press **Left** or **Right** to move the cursor backward/forward.

Using key lock

The key lock helps to prevent unwanted key operations when you carry your phone.

To enable key lock:

In standby mode, press the left soft key, then  key.

To unlock:

Press **Unlock**, and then press  key.

Phone Book



Phone Book

Adding a Phone Book entry

You can add a new entry to Phone Book in the following ways:

Method 1

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Add** and press **Select**.
3. You will be prompted to enter the name of the entry. Enter the name and press **OK**.
4. Enter the phone number and press **OK**.

Method 2

1. In standby mode, enter the number using the alphanumeric keys.
2. Press **Save**. You will be prompted to enter the name of the entry. Enter the name and press **OK**.

Method 3

1. During a call, enter the number using the alphanumeric keys.
2. Press **Save**. You will be prompted to enter the name of the entry. Enter the name and press **OK**.

Method 4

1. In standby mode, press  to enter the last dialed records.
2. Press **Up** or **Down** to scroll to a number you want to save and press **Options**.
3. Scroll to **Save** and press **Select**.
4. You will be prompted to enter the name of the entry. Enter the name and press **OK**.

Note

When entering the name of a new entry to phone book, it allows you to enter a maximum of 4 chinese characters or 10 latin characters. When entering the phone number, a maximum of 20 numbers(including symbols) is allowed.

Phone Book

Note

Inserting pause

To insert a pause after phone number (used when there is an extension number following the phone number), long press  key until **P** appears.
For example, to call extension number 234 after the number 1234567, enter 1234567 and then long press  key to insert a P, then enter the extension number 234.

Making an International call

To make an international call:
1. Long press  key to insert a + (international dialing prefix).
2. Enter the recipient's country code and area code (omit the starting 0).
3. Enter the recipient's phone number.

Phone Book

Searching for a Phone Book entry

To search for a Phone Book entry:

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Press **Select**.
3. Enter the name of the Phone Book entry you want to look for. You can also enter only the beginning few letters of the name.
4. The entries that match the name (or contain the letters) you entered will appear on the screen.

Editing a Phone Book entry

Editing name

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the name and press **Options**.
3. Press **Select**.
4. Edit the name and when finished, press **OK**.

Editing number

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the number and press **Options**.
3. Scroll to **Edit** in the menu that appears and press **Select**.
4. Edit the number and when finished, press **OK**.

Adding new phone number to existing entries

You can record up to 4 different phone numbers under a Phone Book entry that is stored in the phone memory.

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the name (or number) and press **Options**.
3. Scroll to **Add Number** and press **Select**.
4. Enter the new number and when finished, press **OK**.
5. You will be prompted to select a type for the new number. Scroll to an appropriate type and press **Select**.

Changing caller group

Phone Book

The Caller group function allows you to separate your Phone Book entries in different groups. For details about the Caller group function, please refer to "Setting up Caller Group" on page 31.

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the name (or number) and press **Options**.
3. Scroll to **Change Group** and press **Select**.
4. Scroll to a desired caller group and press **Select**.

Sending an entry as business card

With this function, you can send the details of a Phone Book entry to another person as a business card.

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the name (or number) and press **Options**.
3. Scroll to **Send business card** and press **Select**.
4. Select a format:
 - If you want to send the Phone Book entry as a business card, scroll to **Send as SMS** and press **Select**. Enter the number of the recipient (or pick up a recipient from Phone Book by pressing **Names**) and press **Send**. If the recipient's phone supports the business card format, it can be saved as a new Phone Book entry.
 - If you are not sure whether the recipient's phone supports business card format, scroll to **Send as text** and press **Select**. You can edit the contents before sending it.

Assigning default phone number

If you have multiple phone numbers in a Phone Book entry, you can assign one of these numbers as default number. This default number is dialed when you make a call from the Phone Book or using the Speed Dial function.

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the number you want to set as default and press **Options**.
3. Scroll to **Set as default** and press **Select**.

Changing the type of number

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the number and press **Options**.
3. Scroll to **Change Type** and press **Select**.
4. Scroll to a desired type for the number and press **OK**.

Phone Book

Sending messages from Phone Book

To send a new message from Phone Book:

1. Scroll to a Phone Book entry and press **Detail**.
2. Scroll to the number and press **Options**.
3. Scroll to **Send message** and press **Select**.
4. Compose the message. When finished, press **Options** and then **Send** to send the message.

For how to write a message, please see "Writing and sending new messages" on page 40 for details.

Erasing Phone Book entry

Method 1

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Erase** and press **Select**.
To erase Phone Book entries one by one:
 1. Scroll to **One by one** and press **Select**.
 2. Scroll to select the Phone Book entry you want to erase and press **OK**.
 3. Press **OK**.
To erase all Phone Book entries:
 1. Scroll to **All** and press **Select**.
 2. To delete all Phone Book entries stored in phone memory, scroll to **Phone**.
To delete entries on the SIM card, scroll to **SIM**.
 3. Press **Select,OK**.
 4. Enter your phone code and press **OK**. For more information about phone code, please see "About security codes" on page 79.

Method 2

1. In Phone Book, scroll to the entry you want to erase and press **Detail**.
2. Scroll to the name (or number) and press **Options**.
3. Scroll to **Erase** and press **Select**, then **OK**.

Copying Phone Book entry

With the copy function, you can copy Phone Book entries in the phone memory to SIM card memory and vice versa. Please note that if you copy a Phone Book entry with multiple numbers from phone memory to SIM card, only the first (default) number will remain.

Phone Book

Method 1

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Copy** and press **Select**.

To copy Phone Book entries from phone to SIM card:

- Press **Select**. You can choose to copy Phone Book entries one by one or all at once.
- Select **Keep original** (copy the Phone Book entry to a new location) or **Move original** (move the Phone Book entry to a new location).

To copy Phone Book entries from SIM card to phone:

- Scroll to **SIM to Phone** and press **Select**. You can choose to copy Phone Book entries one by one or all at once.
- Select **Keep original** (copy the Phone Book entry to a new location) or **Move original** (move the Phone Book entry to a new location).

Method 2

1. In Phone Book, scroll to the entry you want to copy and press **Detail**.
2. Scroll to the name (or number) and press **Options**.
3. Scroll to **Copy** and press **Select**.
4. If you want to keep the original and make a copy to another location (i.e, if your Phone Book is using SIM card memory, it will be copied to the phone memory and vice versa), scroll to **Keep original**. To move the entry to another location, scroll to **Move original**.
5. Press **Select**.

Setting up Speed Dial

Speed Dial is a shortcut that allows you to make a call simply by long pressing alphanumeric keys  ~ .

You must activate speed dialing function before you set up speed dialing numbers (please see "Speed dialing" on page 66 for details).

To set up speed dial:

Method 1

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. Choose an empty speed dial key and press **Change**.

Phone Book

4. Your Phone Book entries will appear on the screen. Pick up a number by pressing **OK**.

Method 2

1. Long press a key that has not been assigned a speed dial number.
2. The screen will prompt you to assign the speed dial key. Press **OK**.
3. Press **Change**.
4. Your Phone Book entries will appear on the screen. Pick up a number by pressing **OK**.

Viewing speed dial number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. Scroll to a number you want to view and press **Options**.
4. Scroll to **View** and press **Select**.

Changing speed dial number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. Scroll to a number you want to change and press **Options**.
4. Scroll to **Change** and press **Select**.
5. Your Phone Book numbers will appear on the screen. Pick up a new number by pressing **OK**.

Erasing speed dial number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Speed Dial** and press **Select**.
3. Scroll to a number you want to erase and press **Options**.
4. Scroll to **Erase** and press **Select**.

Setting up Caller Group

You can place your Phone Book entries under different Caller Groups and give each Caller Group different ringtone, backlight and screen graphic. When

Phone Book

you have an incoming call, you can judge the caller by its specific Caller Group.

Note

- For using the Caller Group function, you have to set up Incoming call alert as Group in the Sound profiles and select a corresponding caller group(Please see "Customizing a sound profile" on page 69).
- Each phone book entry can only select a corresponding Caller Group.

Your phone provides 5 pre-configured caller groups. You can also customize the caller group settings.

Changing caller group settings

Changing caller group name

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Caller Group** and press **Select**.
3. The Caller Group list will appear on the screen. Scroll to a caller group and press **Select** two times.
5. Enter a new name of the Caller Group and press **OK**.

Changing caller group ringtone

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Caller Group** and press **Select**.
3. The Caller Group list will appear on the screen. Scroll to a caller group and press **Select**.
4. Scroll to **Ring Tone** and press **Select**.
5. Scroll to a desired ring tone and press **OK**.

Changing caller group graphic

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Caller Group** and press **Select**.
3. The Caller Group list will appear on the screen. Scroll to a caller group and press **Select**.
4. Scroll to **Graphic** and press **Select**.
5. Press **On** (display graphic) or **Off** (do not display graphic).
6. If **On** is selected, scroll to **View** and press **Select** to view available graphics. Scroll to a desired graphic and press **OK**.

Phone Book

Miscellaneous settings

Personal number

If your SIM card supports, your phone number will be recognized and displayed here. Otherwise, you need to specify your phone number manually. You can specify up to 2 numbers.

Adding a personal number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Personal Number** and press **Select**.
3. Press **Options** and then **Select**.
4. Enter your name and press **OK**.
5. Enter your phone number and press **OK**.

Editing personal number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Personal Number** and press **Select**.
3. Scroll to the number you want to edit and press **Options**.
4. Scroll to **Edit** and press **Select**.
5. Edit the name and number. When finished, press **OK**.

Erasing personal number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Personal Number** and press **Select**.
3. Scroll to the number you want to erase and press **Options**.
4. Scroll to **Erase** and press **Select**.
5. Press **OK**.

Your own business card

With the business card function, you can edit your personal information and send it to other person via a short message.

Creating your own business card

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Edit** and press **Select**.
4. Enter your personal information. When finished, press **Save**.

Phone Book

Viewing your business card

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Press **Select**.

Sending your business card

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Send My Own Card** and press **Select**.
4. Select a format:
 - If you want to send the Phone Book entry as a business card, scroll to **Send as SMS** and press **Select**. Enter the number of the recipient (or pick up a recipient from Phone Book by pressing **Names**) and press **Send**. If the recipient's phone supports the business card format, it can be saved as a new Phone Book entry.
 - If you are not sure whether the recipient's phone supports business card format, scroll to **Send as text** and press **Select**. You can edit the contents before sending it.

Before sending a business card, you can specify the contents of the information.

1. Scroll to **Info. setting** and press **Select**.
2. Scroll to an item and press **Off** or **On**. Only checked items will be included in the business card.

Editing your business card

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Edit** and press **Select**.
4. Edit the contents of your business card. When finished, press **Save**.

Erasing your business card

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **My Own Card** and press **Select**.
3. Scroll to **Erase** and press **Select**.
4. Press **OK**.

Fixed dial number

Phone Book

If your SIM card supports, you can use this function to restrict outgoing calls only to the numbers (or the numbers that begin with the same digit(s)) on the fixed dial list.

Note

You need PIN2 code to active this function.

Activating Fixed dial

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Press **On**.
4. Enter your PIN 2 code and press **OK**.

Adding new Fixed dial number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **Number list** and press **Select**.
4. Press **Select**.
5. Enter your PIN 2 code and press **OK**.
6. Enter the name of the fixed dial number and press **OK**.
7. Enter the number and press **OK**.

Viewing Fixed dial number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **Number list** and press **Select**.

Editing Fixed dial number

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **Number list** and press **Select**.
4. Scroll to a Fixed dial number and press **Options**.
5. Scroll to **Edit** and press **Select**.
6. Enter your PIN2 code and press **OK**.
7. Edit the name and number. When finished, press **OK**.

Erasing Fix dial number

Phone Book

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Fixed dial number** and press **Select**.
3. Scroll to **Number list** and press **Select**.
4. Scroll to a Fixed dial number and press **Options**.
5. Scroll to **Erase** if you want to erase selected Fixed dial number. If you want to erase all fixed dial numbers, scroll to **Erase all**. Press **Select**.
6. Enter your PIN2 code and press **OK**.
7. Press **OK** to confirm.

Phone Book memory setting

Selecting Phone Book memory

You can select the memory to use for your Phone Book.

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Option** and press **Select**.
3. Press **Select**.
4. Scroll to **SIM** and press **OK** if you want to use SIM memory, or scroll to **Phone** and press **OK** if you want to use phone memory.

Checking Phone Book memory status

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Option** and press **Select**.
3. Scroll to **Memory status** and press **Select**.



Searching for a dialing number

Phone Book

If you activate this function, your phone will search for possible corresponding phone numbers from the Phone Book and display them on the bottom of the screen when you are entering phone number by pressing alphanumeric keys.

1. Enter Phone Book by pressing the right soft key in standby mode.
2. Scroll to **Option** and press **Select**.
3. Scroll to **Dialing number lookup** and press **On**.



The Main Menu

The Main Menu

Overview

The main menu of your phone is accessed by pressing the left soft key in standby mode.

To navigate in the Main Menu

Press **Up** or **Down** to scroll the menu.

Press **Right** or **Select** to view the contents of the menu or select an option.

Press **Left** or **Exit** to return to previous menu or abort selection.

You can also navigate using the quick access keys:

1. In standby mode, press the left soft key.
2. Press the quick access keys. For example, to go to **Dialed Calls**, press  .

The Main Menu

Message

The options in the Message menu allow you to write, send and receive messages and setup message settings.

Note

Before you can use Message functions, make sure that related message settings are configured properly. (Depending on your operator, the settings may have already been programmed on the SIM card). Refer to "Message settings" on page 48 for details.

Writing and sending new messages

You can write and send text messages. Your phone supports EMS (Enhanced Messaging Service) standard which allows you to insert picture, sound, animation and melodies..., etc. in a message.

Note

The recipient's phone must also support EMS functionality to receive and view your EMS messages.

To write a new message:

1. In standby mode, press the left soft key, **Select**.
2. Press **Select** two times.
3. Enter the contents of the message. When writing, you can press **Options** to access the options below:
 - **Send**: Send the message immediately. If this option is selected, you will be prompted to enter the number of the recipients. You can also pick up recipients from your Phone Book by pressing **Names**.
The message can be sent to one recipient and copy to up to 9 recipients.
 - **Save**: Save the message as a draft in Outbox. You have to enter the recipient's phone number before you save.
 - **Insert template**: Insert preset messages template. You can also customize your own templates. Please refer to "Customizing preset message templates" on page 43 for how to customize message templates.
 - **Insert personal details**: Insert a name or phone number from your Phone Book. You can also insert your own business card into the message.
 - **Insert picture**: Insert a picture into the message. You can also draw your own picture. For details, refer to "Alarm clock" on page 86.
 - **Insert animation**: Insert an animation into the message.

The Main Menu

- **Insert sound:** Insert sound effect into the message. The icon  will appear on the screen.
- **Insert melody:** Insert a ring tone melody into the message. The icon  will appear on the screen.
- 4. If the message is sent, copy will be stored in your Outbox.

You can also send a message from message templates. Please refer to "Sending a message from templates" on page 43 for details.

Message

Viewing sent messages

The draft and sent messages are automatically stored in the Outbox. To open the Outbox and check these messages:

1. In standby mode, press the left soft key, **Select**.
2. Press **Select**.
3. Scroll to **Outbox** and press **Select**. A list of draft and sent messages will appear on the screen. The icon that appears in front of a message indicates the status of the message.

Icon	Status of message
	Unsent message
	Sent message

4. Scroll to a message and press **Select**. The message will be opened.
5. Press **Options** and you can also choose to perform the following operations to selected message.
 - **Erase:** Erase current message.
 - **Send:** Send this message to other recipients.
 - **Edit:** Edit current message. You can send the message after you finish editing.
 - **Use number:** Capture the numbers in the message. The numbers captured will appear on the screen. Scroll to a number and press **Select**. You can call the number directly or save it in Phone Book.

Viewing received messages

When a new message is received, the new message prompt and the icon  will appear on the screen.

The Main Menu

Press **Detail**. The list of received messages will appear on the screen.

Viewing received messages in the Inbox

The messages you received are stored in the Inbox.

To open Inbox and view received messages:

1. In standby mode, press the left soft key, **Select**.
2. Press **Select**.
3. Scroll to **Inbox** and press **Select**. A list of received messages will appear on the screen. The icon that appears in front of a message indicates the status and type of it.

Icon	Status of message
	Unread message
	Read message
	Unread e-mail message
	Read e-mail message
	Unread Fax message
	Read Fax message
	Unread paging message
	Read paging message
	Unread message in any other format
	Read message in any other format

4. Scroll to a message you want to read and press **Select**. The contents of the message will be opened to the screen.
5. You can press **Options** to perform the following operations:
 - **Erase**: Erase current message.
 - **Reply**: Reply to current message.
 - **Forward**: Send this message to other recipients.
 - **Edit**: Edit current message. You can send the message after you finish editing.

The Main Menu

- **Use number:** Capture the numbers in the message. The numbers captured will appear on the screen. Scroll to a number and press **Select**. You can call the number directly or save it in Phone Book.
- **Callback:** Make a call to the sender of current message.
- **Open Chatroom:** Open a new chatroom session with the sender of current message. You can also add other members to the chatroom.

Customizing preset message templates

Templates are frequently used phrases preset in phone memory. When writing a message, you can insert them into your message directly. You can also customize your own templates.

Message

Customizing message template

1. In standby mode, press the left soft key, **Select**.
2. Press **Select**.
3. Scroll to **Template** and press **Select**.
4. Scroll to an empty template and press **Select**.
5. Scroll to **Edit template** and press **Select**.
6. Write the contents of the template. When done, press **Save**.

Erasing customized message template

1. In standby mode, press the left soft key, **Select**.
2. Press **Select**.
3. Scroll to **Template** and press **Select**.
4. Scroll to a customized template and press **Select**.
5. Scroll to **Erase template** and press **Select**.

Sending a message from templates

1. In standby mode, press the left soft key, **Select**.
2. Press **Select**.
3. Scroll to **Template** and press **Select**.
4. Scroll to a template you want to send and press **Select**.
5. Press **Select**.
6. Enter the recipients number or pick one from Phone Book by pressing **Names**.
7. Press **Send** and the message will be sent.

The Main Menu

Erasing all messages

This function allows you to erase all messages in Inbox and Outbox.

1. In standby mode, press the left soft key, **Select**.
2. Press **Select**.
3. Scroll to **Erase all** and press **Select**.
4. Press **Erase**.

Multimedia messages

You can write and send multimedia messages. Your phone supports MMS (Multimedia Messaging Service) standard which allows you to insert color picture, sound, animation and melodies..., etc. in a message and to send the message to an e-mail address.

Note

- You have to subscribe to your operator for the Multimedia msgs. service. Please consult your operator for more information.
- The recipient's phone must also support MMS functionality to receive and view your MMS messages.

Writing and sending multimedia messages

To write a new message:

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Multimedia msgs.** and press **Select** two times.
3. Enter the contents of the message. When writing, you can press **Options** to access the options below:
 - **Send**: Send the message immediately. You will be prompted to enter the number of the recipients. You can also press **Options**, scroll to **Add recipient** and press **Select**. Scroll to **Number** and press **Select** to pick up one recipient from your Phone Book by pressing **Names**. Scroll to **e-mail address** and press **Select** to enter the recipient's e-mail address.
 - **Status report**: Turn on/off a message delivery status report.
 - **Validity period**: Select a validity period.
 - **Save to Outbox**: Save the message as a draft in Outbox.
 - **Insert object**: Insert multimedia objects, preset messages template and phone number. The inserted object is represented by an icon that appears on

The Main Menu

the upper right corner of the screen( represents an inserted image,  represents an inserted sound).

- **Add new page:** Add a new page for writing messages.
- **Delete page:** Delete current page.
- **Go to...:** Move to one of the pages you are writing.
- **Preview:** Preview the message you are writing. All inserted objects(including picture, animation, sound...etc.) will be displayed.
- **Remove Object:** Remove the inserted multimedia objects of the message.
- **View Object:** View all inserted multimedia objects of the message.
- **Set title:** Set a title for the multimedia message. The title will appear when the message is received by recipient.
- **Detail info.:** View the title, recipients, memory of the message.

Note

- Each multimedia message size can not be over 30KB.
- Each page of the multimedia message allows a maximum of 1,000 Latin characters or Chinese characters(including space and symbols).
- You can add up to 5 pages into a multimedia message.
- Your phone support the following multimedia objects formats:
Picture: JPEG, GIF87, GIF89, WBMP, PNG.
Sound: iMelody, MDI, SP-MIDI.
- Each page can only be inserted one multimedia object(picture, sound, etc.) if the memory is available.
- The number of recipients of each message can be up to 10 persons.

Message

Viewing sent multimedia messages

The draft and sent multimedia messages are automatically stored in the Outbox. To open the Outbox and check these messages:

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Multimedia msgs.** and press **Select**.
3. Scroll to **Outbox** and press **Select**. A list of draft and sent messages will appear on the screen. The icon that appears in front of a message indicates the status of the message.

Icon	Status of message
	Unsent message

The Main Menu

	Sent message
---	--------------

4. Scroll to a message and press **Select**. The message will be opened.
 5. Press **Options** and you can also choose to perform the following operations to selected message.

- **Send**: Send the message immediately. You will be prompted to enter the number of the recipients. You can also press **Options**, scroll to **Add recipient** and press **Select**. Scroll to **Number** and press **Select** to pick up one recipient from your Phone Book by pressing **Names**. Scroll to **e-mail address** and press **Select** to enter the recipient's e-mail address.
- Scroll to **Sending options** and press **Select** to access the options below:
Status report: Turn on/off a message delivery status report.
Validity period: The valid period determines the duration of time the message is stored in the Outbox.
- **Erase**: Erase current message.
- **Edit**: Edit current message.
- **Objects**: All inserted multimedia objects of the message will be listed here. Press **Select**, scroll to a desired object and press **Select**, you can view the object, save the object to the multimedia center or view the detail info. of the object.
- **Use address**: Capture the address(numbers) in the message. The address (numbers) captured will appear on the screen. Scroll to an address (number) and press **Select**. You can call the number directly or save it in Phone Book.
- **Detail info.**: View the detail info. of the message.

Viewing received multimedia messages

The messages you received are stored in the **Inbox**.
 To open **Inbox** and view received messages:
 1. In standby mode, press the left soft key, **Select**.
 2. Scroll to **Multimedia msgs.** and press **Select**.
 3. Scroll to **Inbox** and press **Select**.
 4. Scroll to a message you want to read and press **Select**. The contents of the message will be opened to the screen.
 5. You can press **Options** to perform the following operations:

- **Reply**: Reply to current message. Press **Select** to choose to reply to the sender of the message or to other recipients.
- **Forward**: Send this message to other recipients.
- **Erase**: Erase current message.
- **Edit**: Edit current message.

46

The Main Menu

- **Objects:** All inserted multimedia objects of the message will be listed here. Press **Select**, scroll to a desired object and press **Select**, you can view the object, save the object to the multimedia center or view the detail info. of the object.
- **Use address:** Capture the address(number) of the message. The address (number) captured will appear on the screen. Scroll to the address(number) and press **Select**. You can call the number directly or save it in Phone Book.
- **Detail info.:** View the detail info. of the message.

Note

Inbox, Outbox and Multimedia center share memory of total 315KB. It will be allocated automatically by your phone. Therefore, the number of the multimedia messages that can be stored in Inbox and Outbox will depend on the memory size of the multimedia messages you received(sent) and the remaining space of the Inbox/Outbox. When the memory is full, the icon  will appear on the screen to remind you to delete some multimedia messages.

Message

Erasing all multimedia messages

This function allows you to erase all messages in **Inbox** and **Outbox**.

1. In standby mode, press the left soft key **Select**.
2. Scroll to **Multimedia msgs.** and press **Select**.
3. Scroll to **Erase all** and press **Select**.
4. Scroll to **All Inbox msgs.** to erase all messages in Inbox. Scroll to **All Onbox msgs.** to erase all messages in Onbox. Scroll to **All msgs.** to erase all messages in Inbox and Outbox.

Chatroom

The Chatroom function allows you to chat on-line with multiple members via text messages. In a chat session, you can invite up to 4 members to your chatroom and talk to each other simultaneously.

Accepting an invitation to join a chatroom

If someone else invites you to join his/her chatroom, you will be notified by a chat message.

1. Press **Detail**, **Select** to enter the chatroom.
2. Press **Options**, scroll to **Open Chatroom**, press **Select**, press **OK**.
2. Enter your nickname and press **OK**.



The Main Menu

3. Enter your message and press **Options**, **Select**. On the screen, your chat messages follows the ">" symbol and your nickname, and the chat messages from other chat members follow the "<" symbol and their nicknames.

Opening a new chat session

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Chatroom** and press **Select**.
3. Enter the number of chat member, or pick a member from your Phone Book by pressing **Names**. Repeat this step if you want to invite multiple members to your chatroom.
4. Press **OK**.
5. Enter your nickname and press **OK**.

The chat members you invited will receive a message from you. If they accept your invitation, their nicknames will appear on your screen.

In a chat session, the chat members' message will appear on the screen following the symbol "<" and their nicknames. You can enter your message and send it by pressing **Options**, **Select**. Your message will appear on the screen following the symbol ">" and your nickname.

Options during a chat session

Press **Options** during a chat session. Scroll to an option and press **Select** to select it.

- **Send**: Send the message you entered.
- **Insert template**: Insert message templates into your chat message. You can also customize your own message templates. See "Customizing message template" on page 43 for details.
- **Insert Smiley**: Insert smiley symbols into your chat message.
- **Nickname**: change your nickname during a chat session. Enter your new nickname and press **OK**.
- **Chat numbers**: Invite new members to your chatroom. Enter the number of chat member, or pick a member from your Phone Book by pressing **Names**.
- **View History**: View the history of current chat session.

Message settings

Configuring text message setting profiles

The Main Menu

The message settings can be configured in different profiles. Usually you use the profile of your operator on the SIM card. If your SIM card does not contain such profile, you need to set up a profile in your phone.

Using the profile on your SIM card

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Press **Select** three times.

Configuring a new profile

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select** two times.
3. Scroll to an empty profile and press **Select**.
4. Scroll to **Customize** and press **Select**.
5. Complete following settings:
 - **Name**: Enter a name for this profile.
 - **Center number**: Enter the message center number. This number is supplied by your operator.
 - **Send As**: Defines the type of message. Your system operator may be able to convert your message to the type you select here. Press **Left** or **Right** to select a type.
 - **Valid Period**: The valid period determines the duration of time the message is stored in the message center if it can not be successfully received by the recipient. Press **Left** or **Right** to select a duration.
6. Press **Save**.

Using a self-configured profile

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select** two times.
3. Scroll to the profile you configured and press **Select** two times.

Multimedia message settings

You can configure multimedia message services with the following functions.

Retrieving messages automatically

If other people send you a multimedia message, you will receive a notice first and the message will be saved in your operator's server temporarily. With

Message



The Main Menu

this function, you can decide to retrieve the multimedia message automatically or not while receiving the new multimedia message notice.

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Press **Select** to access the following functions and then press **OK**.

- **On**: Retrieve the multimedia messages automatically from the server.
- **Off**: Retrieve the multimedia messages by yourself from the Inbox.

- **Ask me**: You will be prompted if retrieve the messages immediately or not.

Retrieving messages while roaming

With this function, you can decide to retrieve the multimedia messages immediately or not while you are roaming.

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **While roaming** and press **Select**, you can select the following functions by pressing **OK**.

- **Immediate retrieval**: Retrieve the multimedia messages immediately from the server.

- **Delayed retrieval**: Retrieve the multimedia messages by yourself from the Inbox.

- **Ask me**: You will be prompted if retrieve the messages immediately or not.

Connection settings

The connection settings must be configured before you can use the multimedia message services. The profiles will be provided after you subscribe the multimedia message services to your operator, or may have been programmed on your SIM card and you can use them right away.

Using the profiles on your SIM card

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **Connection settings** and press **Select**.
5. Scroll to a desired profile and press **Select**.

Configuring a new connection profile manually

The Main Menu

You can configure up to 5 sets of connection profiles. Please consult your operator for related information.

Information you need in case you have to set up a connection profile manually

Before setting up a connection profile, please be sure to obtain the following parameters from your operator:

Homepage: _____

Session mode: Temporary Permanent

Connection security: On Off

Data bearer: GSM Data (Dial-up number _____, Data call type Analogue ISDN, Data call speed Automatic 9600 14400)
 GPRS (GPRS access point _____)

IP address: _____

Authentication type: Normal Secure

Username: _____

Password: _____

Message

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **Connection settings** and press **Select**.
5. Scroll to an empty profile and press **Select**.
6. Scroll to **Edit** and press **Select**.
7. According to the parameters supplied by your operator, configure the following:
 - **Homepage:** Enter the address of the homepage.
 - **Session mode:** **Temporary** or **Permanent**.
 - **Connection Security:** **On** or **Off**.
 - **Data bearer:** **GSM Data** or **GPRS**. If **GSM Data** is selected, you need to setup **Dial-up number**, **Data call type** and **Data call speed**. If **GPRS** is selected, you need to setup **GPRS access point**.
 - **IP address:** Enter the IP address.
 - **Authentication type:** **Normal** or **Secure**.
 - **Username:** Enter the username.
 - **Password:** Enter the password.

Editing profiles

The Main Menu

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **Connection settings** and press **Select**.
5. Scroll to a desired profile and press **Select**.
6. Scroll to **Edit** and press **Select**.
7. Edit the contents of the profile and press **Back**.

Renaming profiles

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **Connection settings** and press **Select**.
5. Scroll to a desired profile and press **Select**.
6. Scroll to **Rename** and press **Select**.
7. Enter the new profile name and press **OK**.

Allow adverts.

You can select to receive or reject adverts. with this function.

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **Allow adverts.** and press **On/Off**.

Sending options

If this function is activated, your operator will send you a message delivery report, letting you know if your multimedia message is sent successfully.

Status report

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **Sending options** and press **Select**.
5. Press **On** or **Off**.

Validity period

The Main Menu

With this function, you can set the duration of time for which the received multimedia messages are stored in your operator's server. The messages will be deleted by the server automatically if you don't fetch them in a valid time.

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Scroll to **Sending options** and press **Select**.
5. Scroll to **Validity period** and press **Select**.
6. Scroll to a desired period and press **OK**.

Message

Message options

Message status report

If this function is turned on, your operator will send you a message delivery report, letting you know if your message is sent successfully.

To turn on/off the message status report:

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Misc. setting** and press **Select**.
4. Press **On** (or **Off**).

Reply path

The Reply Path function allows the recipient of your message to send you a reply message via your message center.

To turn on/off the reply path:

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Misc. setting** and press **Select**.
4. Scroll to **Reply Path** and press **On** (or **Off**).

Send by GSM or GPRS

Depending on your selection here, your message can be sent either by GSM or by GPRS.

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Misc. setting** and press **Select**.
4. Scroll to **Send by** and press **Select**.
5. Scroll one of the following items and press **OK**.

The Main Menu

- **GSM first:** Send messages via GSM network first. If GSM network is not available, send messages via GPRS.
- **GPRS first:** Send messages via GPRS first. If GSM network is not available, send messages via GSM network.
- **GSM only:** Send messages via GSM network only.
- **GPRS only:** Send messages via GPRS only.

Checking message memory status

The messages you received and the copy of your sent messages are stored in the memory in your phone and on the SIM card. You can check the status of the memory here.

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Settings** and press **Select**.
3. Scroll to **Misc. setting** and press **Select**.
4. Scroll to **Memory status** and press **Select**.

Configuring voice mailbox number

Depending on your operator, the voice mailbox number may have already been programmed on the SIM card and your phone can detect it automatically. Otherwise, you have to enter it following the steps below:

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Voice mail** and press **Select**.
3. Enter the voice mailbox number and press **Save**.

Cell broadcast options

Cell broadcast refers to the text messages that your operator sends to all subscribers. For example, on-line traffic report or notification from the system operator. For details about cell broadcast services and contents, please contact your operator.

Turning on or off cell broadcast

You can choose to turn on or off the cell broadcast.

1. In standby mode, press the left soft key, **Select**.
2. Scroll to **Cell broadcast** and press **Select**.
3. Press **On** (or **Off**).

Setting up cell broadcast topics

The Main Menu

You can edit cell broadcast topics in the topics list.

1. In standby mode, press the left soft key **Select**.
2. Scroll to **Cell broadcast** and press **Select**.
3. Scroll to **Topic** and press **Select**.
4. Scroll to the topic you want to edit.
5. Edit the topic. When done, press **Save**.

Sending history

After you send a message, the related data will be registered to the sending history for you to check later.

1. In standby mode, press the left soft key **Select**.
2. Scroll to **Sending history** and press **Select**.
3. The list of history records will appear on the screen. Scroll to a record and press **Select** to view its details.

Message

Sending message service commands

With this function you can edit and send certain service commands to your operator to perform certain operations.

For details on service commands and how to use them, please consult your operator.

1. In standby mode, press the left soft key **Select**.
2. Scroll to **Service command** and press **Select**.
3. Enter the command and press **Send**.

The Main Menu

Call Meter

The options in the Call Meter menu allow you to easily manage your phone call records.

Viewing missed call records

This function can list the latest 10 missed call records.

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Press **Select**. The list of missed calls will appear on the screen. Each call record is represented by the name of the caller. If the caller can not be found in your Phone Book, or the number is unknown, **No Number** will appear.
4. You can press **Options** to access the following options:
 - **View**: View date and time record of the missed call.
 - **Erase**: Erase this call record. Press **OK** to erase it.

Viewing received call records

This function can list the latest 10 received call records.

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Received calls** and press **Select**. The list of received calls will appear on the screen. Each call record is represented by the name of the caller. If the caller can not be found in your Phone Book, or the number is unknown, **No Number** will appear.
4. You can press **Options** to access the following options:
 - **View**: View date and time record of the missed call.
 - **Erase**: Erase this call record. Press **OK** to erase it.
 - **Call**: Make a call to the caller immediately..
 - **Save**: Save this record to Phone Book.

Viewing dialed call records

This function can list the latest 10 dialed call records.

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Dialed calls** and press **Select**. The list of dialed calls will appear on the screen. Each call record is represented by the name of the recipient. If

The Main Menu

the recipient can not be found in your Phone Book, only the number you dialed will appear.

4. You can press **Options** to access the following options:
 - **View**: View date and time record of the missed call.
 - **Erase**: Erase this call record. Press **Select** to erase it.
 - **Call**: Make a call to the recipient immediately.
 - **Save**: Save this record to Phone Book.

Erasing all call records

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Erase all** and press **Select**.
4. Press **OK**.

Viewing call time information

You can check the duration of your phone calls with this function. The information includes the duration of the last call, all calls, received calls and dialed calls.

To view call time information:

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Call Time** and press **Select**.
4. Scroll to the type of information you want to view and press **Select**.

Clearing call timer

The call time can be cleared by resetting the call timer.

1. In standby mode, press **the left soft key**.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Call Time** and press **Select**.
4. Scroll **Clear timer** and press **Select**.

Viewing call cost information

If your operator supports, you can check the cost of your last call and all calls with this function. Note that the call cost shown here may not exactly reflect

The Main Menu

the amount of your phone bill, since there may be different discount rates offered by your system operator in different time periods.

Note

You need PIN2 code to access certain call cost functions.

Viewing call cost

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Call Cost** and press **Select**.
4. Scroll to **Last call** or **All calls** and press **Select**.

Clearing call cost

1. In standby mode, press the **left soft key**.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Call Cost** and press **Select**.
4. Scroll to **Clear cost** and press **Select**.
5. Enter your PIN2 code and press **OK**.

Viewing remaining call cost credit

Call cost credit is used to limit the cost of your call. If your call cost exceeds such credit, you will not be able to make phone calls. However, you can still make emergency calls.

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Call Cost** and press **Select**.
4. Scroll to **Credit remaining** and press **Select**.

Configuring call cost settings

Note

You will be prompted to enter your PIN2 code when modifying call cost settings.

Before you can obtain call cost information, you need to configure call cost settings following the steps below:

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.

The Main Menu

3. Scroll to **Call Cost** and press **Select**.
4. Scroll to **Setting** and press **Select**.
5. Scroll to an item and press **Select** to configure.
 - **Cost limit**: Enter a cost limit. This limit is also your call cost credit.
 - **Currency**: Enter the currency that will be used to calculate your call cost.
 - **Price unit**: Enter the unit of price that will be used to calculate your call cost.
6. When done, press **OK**.

Call Meter

Viewing GPRS related information

GPRS data

GPRS data counter

The GPRS data counter provides information about the size of data you sent/received via GPRS.

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **GPRS data counter** and press **Select**.
4. Scroll to an item below and press **Select** to view corresponding information:
 - **Last sent**: Display the total size of data you last sent.
 - **Last received**: Display the total size of data you last received.
 - **Total sent**: Display the total size of data you sent.
 - **Total received**: Display the total size of data you received.

Clearing GPRS data counter

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **GPRS data counter** and press **Select**.
4. Scroll to **Clear counter** and press **Select**.

GPRS connection time

GPRS timer

The GPRS time counter provides information about the duration you spent on GPRS connection.

1. In standby mode, press the left soft key.



The Main Menu

2. Scroll to **Call meter** and press **Select**.
3. Scroll to **GPRS connection time** and press **Select**.
4. Scroll to an item below and press **Select** to view corresponding information:
 - **Last connection**: Display the duration of your last GPRS connection.
 - **Total connection**: Display accumulated duration of all GPRS connection.

Clearing GPRS timer

1. In standby mode, press the **left soft key**.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **GPRS connection time** and press **Select**.
4. Scroll to **Clear timer** and press **Select**.

In-call count

The In-call count function automatically counts the time or cost and displays such information on the screen when you are on a call.

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **In-call count** and press **Select**.
4. Scroll to **Call time** (display call time during a call) or **Call cost** (display call cost during a call) and press **OK**.

Session information

If this function is activated, the time and cost information of the phone call will appear on the screen after you end a call.

1. In standby mode, press the left soft key.
2. Scroll to **Call meter** and press **Select**.
3. Scroll to **Session information** and press **On** (to activate it) or **Off** (to deactivate it).

The Main Menu

Call Feature

The options in the Call Feature menu allows you to access advanced call features.

Note

Some of the call features described in this section are operator dependent. Please consult your operator for availability.

Call divert

If for any reason you can not answer a call, you can activate the call divert function to direct incoming calls to a specific phone number. If Call divert function is activated, the icon  will appear on the screen.

Diverting voice calls

To activate call divert function for voice calls:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Press **Select**.
4. Press **Select**.
5. Scroll to a desired condition:
 - **When busy**: divert all voice calls when you are on a call.
 - **No reply**: divert all voice calls when they are not answered.
 - **Not reachable**: divert all voice calls when you are outside your operator's network service area.
 - **Not available**: divert all voice calls whenever you are not available for answering a call.
 - **All calls**: divert all incoming voice calls.
6. Press **Select** two times.
7. Enter the number you want to divert to or press **Names** to pick up the number from your Phone Book and press **OK**.

Deactivating voice call divert function

To cancel specific call divert function, scroll to **Off** and press **Select** in step 6 above.

Call Feature

The Main Menu

Inquiring status

To inquire the service status of specific call divert function, scroll to **Status** and press **Select** in step 6 above.

Diverting data or fax calls

To activate call divert function for voice calls:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Press **Select**.
4. Scroll to **Fax calls** (to divert Fax calls) or **Data calls** (to divert data calls) and press **Select** two times.
5. Enter the number you want to divert to or press **Names** to pick up the number from your Phone Book and press **OK**.

Deactivating data or fax call divert function

Scroll to **Off** and press **Select** in step 5 above.

Inquiring status

Scroll to **Status** and press **Select** in step 5 above.

Deactivating all call divert functions

You can deactivate all call divert functions (including voice, Fax and data calls) at once.

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select** two times.
3. Scroll to **Cancel all** and press **Select**.

Call waiting

If activated, the Call waiting function allows you to answer the second incoming call when you are on a call. See "Answering a new incoming call" on page 15 for details.

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Call waiting** and press **Select**.
4. Scroll to **On** and press **Select**.

The Main Menu

Deactivating call waiting

To cancel call waiting, scroll to **Off** and press **Select** in step 4 above.

Inquiring status

To inquire the service status of call waiting function, scroll to **Status** and press **Select** in step 4 above.

Call barring

With Call barring function, you can bar (restrict) incoming and outgoing calls under certain conditions.

Note

You need network code to activate/deactivate call barring function. Such code is available from your operator.

Call Feature

Barring outgoing calls

To bar outgoing calls:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Call barring** and press **Select**.
4. Press **Select**.
5. Scroll to a desired barring condition:
 - **Int'l calls**: bar all outgoing international calls.
 - **Int'l calls except home**: bar all outgoing international calls except the calls made to your home country.
 - **All calls**: bar all outgoing calls.
6. Press **Select**.
7. Press **Select**.
8. Enter your network code and press **OK**. The phone will contact the system and activate selected call barring function.

Cancel barring of outgoing calls

To deactivate barring of outgoing calls, scroll to **Off** and press **Select** in step 7 above.

Inquiring status

The Main Menu

To inquire the service status of call barring function, scroll to **Status** and press **Select** in step 7 above.

Barring incoming calls

To bar incoming calls:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Call barring** and press **Select**.
4. Scroll to **Incoming calls** and press **Select**.
5. Scroll to a desired barring condition:
 - **When roaming**: bar all incoming calls when roaming.
 - **All calls**: bar all incoming calls.
6. Press **Select**.
7. Press **Select**.
8. Enter your network code and press **OK**. The phone will contact the system and activate selected call barring function.

Cancel barring of incoming calls

To deactivate barring of outgoing calls, scroll to **Off** and press **Select** in step 7 above.

Inquiring status

To inquire the service status of call barring function, scroll to **Status** and press **Select** in step 7 above.

Cancel all call barring functions

You can deactivate all call barring functions (including barring of incoming and outgoing calls) here.

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Call barring** and press **Select**.
4. Scroll to **Cancel all** and press **Select**.
5. Enter your network code and press **OK**.

Changing network code

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.

The Main Menu

3. Scroll to **Call barring** and press **Select**.
4. Scroll to **Change password** and press **Select**.
5. Enter your network code and press **OK**.
6. Enter new network code and press **OK**.
7. Enter new network code again to confirm. Press **OK**.

Showing/hiding your number

Depending on your operator, you may choose to show or hide your number when making a call. If your number is hidden, it will not be shown to the person who receives your call.

To show/hide your number:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Show number** and press **Select**.
4. Scroll to one of the following:
 - **Preset**: use your operator setting. Your operator decides whether to show your number or not.
 - **On**: show your number.
 - **Off**: hide your number.
5. Press **OK**.

Selecting a phone line to use

Depending on your subscription to the operator, you may use two different phone lines (numbers) to receive and make voice calls. You can select a phone line to use here.

To select a phone line:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Phone lines** and press **Select**.
4. Scroll to **Line 1** (to use phone line 1) or **Line 2** (to use phone line 2).
5. Press **OK**.

If phone line 2 is selected, the icon  will appear on the screen.

Anykey answer

The anykey answer function allows you to answer a call by pressing any key (except **End** and  key). You can activate/deactivate such function here.

Call Feature

The Main Menu

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Anykey answer** and press **On** (to activate it) or **Off** (to deactivate it).

Flip answer

If the flip answer function is activated, when phone flip is closed, simply open the flip to answer the call. Otherwise, you have to open the flip and press  key or any key(except **End** and  key) to answer the call.

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Flip answer** and press **On** (to activate it) or **Off** (to deactivate it).

Auto redial

If this function is activated, your phone redials the number automatically when your attempt to make a call fails.

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Auto redial** and press **On** (to activate it) or **Off** (to deactivate it).

Speed dialing

You can activate/deactivate speed dialing function here. You must activate speed dialing before you setup speed dialing numbers.

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Speed dialing** and press **On** (to activate it) or **Off** (to deactivate it).

Receiving a fax or data call

Depending on your subscription to the operator, your may be able to receive fax and data calls. However, if you do not have separate data and voice lines, you need to setup the type of phone call to answer.

To receive a fax or data call:

1. Before receiving the call, connect the phone to a computer using one of the methods below:

The Main Menu

- Place the phone near the computer and align the infrared port of the phone to the one on the computer.
- Connect the phone to the computer using the data cable (available separately).
- 2. In standby mode, press the left soft key.
- 3. Scroll to **Call feature** and press **Select**.
- 4. Scroll to **Next call** and press **Select**.
- 5. Depending on the type of call to receive, scroll to **Fax** or **Data** and press **OK**.
- 6. Open the software program on the computer and answer the call.

The icon  (the next call is set as Fax call) or  (the next call is set as data call) will appear on the screen.

To receive voice calls after the data or fax call:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Next call** and press **Select**.
4. Scroll to **Voice** and press **OK**.

Call Feature

Talk and Fax

If you have subscribed the fax service to your operator and you have activated this function, you can send or receive fax after making a voice call.

To activate/deactivate the talk and fax function:

1. In standby mode, press the left soft key.
2. Scroll to **Call feature** and press **Select**.
3. Scroll to **Talk and Fax** and press **On** (to activate it) or **Off** (to deactivate it).

The Main Menu

Sound

The options in the Sound menu allows you to setup the sound settings of your phone.

Sound profiles

A sound profile is a combination of sound settings. Your phone provides 6 pre-configured sound profiles and you can select one that fits your circumstances to use. For example, in a meeting, you can select to use the Meeting profile. You can also configure these profiles according to your preferences.

Note

The **Headset** profiles won't work unless a handsfree kit or headset is plugged into your phone.

Default profile settings									
	Ringing volume	Ringing tone	Incoming call alert	Vibrating	Message alert tone	Key tone volume	Key tone type	Game and warning tones	Startup music
General	Volume 5	Tone 1	Continue ringing	On	Tone 1	Level 3	Key tone 1	On	On
Meeting	Volume 1	Tone 3	Ring once	Off	Tone 2	Level 1	Off	Off	Off
Outdoor	Volume 5	Tone 4	Continue ringing	On	Tone 3	Level 4	Key tone 1	On	On
Pager	Volume 5	Tone 4	Continue ringing	On	Tone 3	Level 4	Key tone 1	On	On
Headset	Volume 4	Tone 1	Continue ringing	Off	Tone 4	Level 2	Key tone 1	On	On

Selecting a sound profile

To select a sound profile to use:

1. In standby mode, press the left soft key.
2. Scroll to **Sound** and press **Select**.
3. Press **Select**.

The Main Menu

4. Scroll to desired sound profile and press **Select**.
5. Press **Select**.

Or:

1. Press the power key in standby mode. The sound profiles will appear on the screen.
2. Scroll to desired profile and press **OK**.

The name of selected sound profile will appear on the screen in standby mode.

Customizing a sound profile

To customize a sound profile:

1. In standby mode, press the left soft key.
2. Scroll to **Sound** and press **Select**.
3. Press **Select**.
4. Scroll to the sound profile you want to customize and press **Select**.
5. Scroll to **Customize** and press **Select**.
6. Use the following options to customize settings. Scroll to each option and press **Select** to customize.
 - **Ringing volume**: Scroll to a desired ringing volume and press **OK**. 5 volume levels are available.
 - **Ringing tone**: Scroll to a desired ringing tone and press **OK**. There are 40 built-in ringing tones and 5 ringing tones you can compose by yourself (see "Composing your ringing tones" on page 70 for how to compose a ringing tone).
 - **Incoming call alert**: Here you can select the ringing mode of incoming calls. Available modes are: **Off** (no ringing tone), **Continue Ringing**, **Ring Once**, **Ascending**, **Group** (the phone rings only when calls from selected caller groups are received). If **Group** is selected, you will be prompted to select a caller group.
 - **Vibrating**: Press **On** to activate vibration, or **Off** to deactivate it.
 - **Message alert tone**: Select the sound that is played upon receiving a message. There are 4 tones available for selection. If **Off** is selected, the message alert tone will be turned off.
 - **Key tone volume**: Scroll to a desired key tone volume and press **OK**. 4 volume levels are available.
 - **Key tone type**: Scroll to a desired key tone type and press **OK**. 4 key tones are available. If **Off** is selected, the keypad tone will be turned off.
 - **Warning tones**: Warning tone is played when phone battery is low, or there is an error in operation. Press **On** to activate warning tone, or **Off** to deactivate it.

Sound

The Main Menu

- **Startup music:** Press **On**, your phone will play music when the phone power is turned on/off. Press **Off** to deactivate it.

Renaming a sound profile

1. In standby mode, press the left soft key.
2. Scroll to **Sound** and press **Select**.
3. Press **Select**.
4. Scroll to the sound profile you want to rename and press **Select**.
5. Scroll to **Rename** and press **Select**.
6. Enter the new name and press **OK**.

Note

The **Headset** profiles can't be renamed.

Composing your ringing tones

With the Tone editor function, you can create your unique ringing tone or compose a ringing tone according to your favorite songs. You can create up to 5 ringing tones.

1. In standby mode, press the left soft key.
2. Scroll to **Sound** and press **Select**.
3. Scroll to **Tone editor** and press **Select**.
4. The ringing tone editor screen appears. Press an appropriate key to insert symbols. Please see the table below for the mapping of keys and symbols.

Press this key...	To...
1	Insert a C sharp note.
2	Insert a D sharp note.
3	Insert an E sharp note.
4	Insert an F sharp note.
5	Insert a G sharp note.

The Main Menu

	Insert an A sharp note.	
	Insert a B sharp note.	
	Increase the length of selected note/rest.	
	Move the note one octave up.	
	Decrease the length of selected note/rest.	
	Move the note one octave down.	
	Insert a rest.	
	Up	Move selected symbol up on the staff.
	Down	Move selected symbol down on the staff.
	Left	Select previous symbol.
	Right	Select next symbol.

Sound

When selecting a note, inserting a note, moving selected note up/down or changing the length of the note, corresponding tone is played.

Note

You can insert up to 126 symbols in one ringing tone.

For example, to get the melody on the left:



1st symbol	Press	to get an F sharp note.
2nd symbol	Press	to get a G sharp note.

Press three times to increase length.

The Main Menu

3rd symbol	Press  to get a D sharp note. Press  four times to decrease length.
4th symbol	Press  to insert a rest.

5. Press **Options** to select from the following:
 - Open**: Press **Select** to view exist ringing tones.
 - Play**: Press **Select** to play the ringing tone you just created.
 - Save**: Press **Select** to save the ringing tone you just created.
 - Instruments**: Press **Select** to choose an instrument that is used to play the ring tone.
 - Tempo**: Press **Select** to change the speed of tempo. Scroll to a tempo and press **OK**. The larger the number, the slower the tempo.
 - Clear Screen**: Press **Select** to delete all symbols.
 - Erase**: Press **Select** to erase this ring tone.

Quick silence

If you want your phone not to emit any sound under all circumstances, you can activate the quick silence function. The phone will not issue any sound no matter what sound profile is used.

1. In standby mode, press the left soft key.
2. Scroll to **Sound** and press **Select**.
3. Scroll to **Silence** and press **On** (to activate it) or **Off** (to deactivate it).

Minute reminder

If this function is activated, your phone will generate a beep tone every 50 seconds when you are on a call to remind you of the call time.

1. In standby mode, press the left soft key.
2. Scroll to **Sound** and press **Select**.
3. Scroll to **Minute reminder** and press **On** (to activate it) or **Off** (to deactivate it).

The Main Menu

Phone setup

The options in the Phone Setup menu allows you to setup the phone according to your preferences.

Phone setup

Changing menu language

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Press **Select**.
4. Scroll to preferred language and press **OK**.

Adjusting backlight duration

This option allows you to change the duration of backlight in standby mode. Note that longer backlight consumes more battery power. You can also choose to turn it off.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Backlight** and press **Select**.
4. Scroll to desired duration and press **OK**. If **Off** is selected, the backlight will be turned off.

Adjusting screen contrast

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Adjust contrast** and press **Select**.
4. Press Left or Right to select an appropriate contrast level and press **OK**.

Clock

Showing/hiding clock on the screen

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Clock** and press **Select**.
4. Press **On** (to show clock) or **Off** (to hide clock).

Setting up current time and date

The Main Menu

Before you can use the clock of your phone, you need to setup current time and date first.

Selecting time zone

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Clock** and press **Select**.
4. Scroll to **Local time zone** and press **Select**.
5. Press **Left** or **Right** to scroll to the time zone where you are located and press **Save**.

Setting up current date

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Clock** and press **Select**.
4. Scroll to **Set the date** and press **Select**.
5. Enter current date using alphanumeric keys and press **Save**.

Setting up current time

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Clock** and press **Select**.
4. Scroll to **Set the time** and press **Select**.
5. Enter current time using the alphanumeric keys and press **Save**.

Setting up date format

Here you can select a preferred date format.

1. In standby mode, press the **left soft key**.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Clock** and press **Select**.
4. Scroll to **Date Format** and press **Select**.
5. Scroll to desired format and press **OK**.

World clock

The world clock function allows you to view current time of major cities in the world.

1. In standby mode, press the left soft key.

The Main Menu

2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Clock** and press **Select**.
4. Scroll to **World Clock** and press **Select**.
5. Press **Left** or **Right** to scroll to a desired city, and the current time will appear on the screen. You can also press **Detail** to view detailed time information of selected city.

Auto power off

If this function is activated, your phone can be switched off automatically at the specified time.

Phone setup

Activating Auto power off

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Auto power off** and press **Select**.
4. Scroll to **On** and press **OK**.
5. Enter the power off time using alphanumeric keys. When done, press **Down**.
6. Press **Left** or **Right** to select desired repeat type.
7. Press **Save**.

Deactivating Auto power off

To deactivate Auto power off function, scroll to **Off** and press **OK** in step 4 above.

Display settings

Changing color scheme

Your phone provides several color schemes and you can change it whenever you like.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Display** and press **Select** two times.
4. Scroll to a desired color scheme and press **OK**.

Changing wallpaper

The Main Menu

Wallpaper is the background image that is displayed under standby mode. You can change it whenever you like.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Display** and press **Select**.
4. Scroll to **Wall paper** and press **Select**.
5. Scroll to a desired wallpaper and press **OK**. If **Off** is selected, the wallpaper image will not be displayed.

Activating screen saver

If the function is activated, screen saver will appear on phone screen when there is no user operation for a period of time in standby mode. If you press any key or there is an incoming call, the screen display will go back to the normal status.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Display** and press **Select**.
4. Scroll to **Screen saver** and press **Select**.
5. Scroll to **Digital clock** and press **OK**. A digital clock will appear on the screen when the phone is idle for a period of time in standby mode.
6. Scroll to **Off** and press **OK** to deactivate screen saver.

Changing standby logo

With this function, you can select a preset picture or picture you draw with My Picture function(see "My Picture" on page 84 for details) as the logo that will be displayed on the screen in standby mode.

The name of your operator on the screen will be replaced by the standby logo.

Showing/hiding standby logo

1. In standby mode, press **Menu**.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Display** and press **Select**.
4. Scroll to **Standby logo** and press **Select**.
5. Press **On** (to show logo) or **Off** (to hide logo).

Selecting standby logo

1. In standby mode, press **Menu**.

The Main Menu

2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Display** and press **Select**.
4. Scroll to **Standby logo** and press **Select**.
5. Scroll to **Update logo** and press **Select**.
6. Scroll to a desired category and press **Select**.
7. Scroll to a desired picture and press **Select**.

Phone setup

Key lock

Activating Key lock

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Key lock** and press **Select**.
4. Scroll to **Auto** (the phone activates key lock automatically if there is no key operation in 20 seconds) and press **OK** or **Lock now** (activate Key lock immediately) and press **Select**.

In standby mode, you can activate key lock by pressing the left soft key and then *** +** key. To temporarily unlock, press **Unlock**, *** +** key.

Deactivating Key lock

To deactivate Key lock function, scroll to **Off** and press **OK** in step 4 above.

Note

You can still make emergency calls when keypad is locked.

Selecting default input mode

Here you can select a default input mode to use.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Input mode** and press **Select**.
4. Scroll to the input mode you want to set as default, and press **OK**.

The Main Menu

Changing right softkey function

With this option, you can change the function of the right soft key as a shortcut to a desired feature under standby mode.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Right key** and press **Select**.
4. Scroll to a function item and press **OK**.

Restoring factory settings

With this function, you can reset most of the menu settings to their original factory values at once.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Restore factory settings** and press **Select**.
4. Enter your phone code and press **OK**.

The Main Menu

Phone security settings

The security settings deal with security codes of your phone. With these codes, you can protect your phone from being accidentally used by another person.

About security codes

Network Code: The code for accessing your operator's network. You can get such code from your operator.

Phone code: The code for preventing unauthorized use of your phone. If Phone code is enabled, you have to enter it each time you turn on your phone. The default Phone code of your phone is **12345678**.

SIM lock code: The SIM lock function prevents your phone from being used with unknown SIM cards and vice versa. If the SIM lock is activated, unknown SIM cards can not be used with your phone. The default SIM lock code of your phone is **12345678**.

PIN code: A 4~8 digit code that is supplied by your operator upon subscription.

PIN2 code: The second set of PIN code that is supplied by your operator to control over certain services (such as call cost calculation). This code is supplied by your operator.

PUK code: The code for unblocking your SIM card. You can get such code from your operator.

PUK 2 code: The code for unblocking your PIN2 code. You can get such code from your operator.

Phone setup

Activating/deactivating security codes

Activating/deactivating PIN code

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Security** and press **Select**.
4. Press **Select**.
5. Press **On** (to activate it) or **Off** (to deactivate it).
6. Enter your PIN code and press **OK**.

Activating/deactivating phone code

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.

The Main Menu

3. Scroll to **Security** and press **Select**.
4. Press **Select**.
5. Scroll to **Phone code** and press **On** (to activate it) or **Off** (to deactivate it).
6. Enter your phone code (the default phone code is **12345678**) and press **OK**.

Activating/deactivating SIM lock

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Security** and press **Select**.
4. Press **Select**.
5. Scroll to **SIM lock** and press **On** (to activate it) or **Off** (to deactivate it).
6. Enter your SIM lock code (the default SIM lock code is **12345678**) and press **OK**.

Changing security codes

Note

Before changing these codes, you must activate them first.

Changing PIN code

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Security** and press **Select**.
4. Scroll to **Change code** and press **Select**.
5. Press **Select**.
6. Enter the old PIN code and press **OK**.
7. Enter the new PIN code and press **OK**.
8. Enter the new PIN code again and press **OK**.

Changing PIN2 code

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Security** and press **Select**.
4. Scroll to **Change code** and press **Select**.
5. Scroll to **PIN2** and press **Select**.
6. Enter the old PIN2 code and press **OK**.
7. Enter the new PIN2 code and press **OK**.

The Main Menu

8. Enter the new PIN2 code again and press **OK**.

Changing phone code

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Security** and press **Select**.
4. Scroll to **Change code** and press **Select**.
5. Scroll to **Phone code** and press **Select**.
6. Enter the old Phone code and press **OK**.
7. Enter the new Phone code and press **OK**.
8. Enter the new Phone code again and press **OK**.

Phone setup

Changing SIM lock code

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Security** and press **Select**.
4. Scroll to **Change code** and press **Select**.
5. Scroll to **SIM lock** and press **Select**.
6. Enter the old SIM lock code and press **OK**.
7. Enter the new SIM lock code and press **OK**.
8. Enter the new SIM lock code again and press **OK**.

Closed user group

Closed user group is an operator dependent function. If you have subscribed this feature, you can specify the group of people who can call you and receive your call.

To activate closed user group:

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Security** and press **Select**.
4. Scroll to **Closed user group** and press **Select**.
5. Scroll to one of the following and press **OK**.
 - **Preset**: activate the closed user group function and use preset closed user group.
 - **On**: activate the closed user group function and specify a closed user group. You will be prompted to enter the number of the closed user group. The number is available from your system operator.
 - **Off**: deactivate the closed user group function.

The Main Menu

Network settings

Network selection

Your phone provides 2 network selection modes: Automatic and Manual. Your phone automatically selects the network of your operator in Automatic mode. In Manual mode, your phone scans the networks available and allows you to select a network to use. For example, if you are roaming under other networks, you can manually select the network that has roaming agreement with your home network.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Network** and press **Select**.
4. Scroll to **Automatic** or **Manual** and press **Select**. If **Manual** is selected, the phone scans the network and a network operator list appears. Scroll to desired operator and press **Select**.

Band selection

Normally, your phone selects an appropriate band of the network automatically. However, you can also select it manually when you are using your phone in different countries.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Network** and press **Select**.
4. Scroll to **Band** and press **Select**.
5. Scroll to **Auto**, **900/1800 MHz** or **1900MHz** and press **OK**.

GPRS attach

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Network** and press **Select**.
4. Scroll to **GPRS attach** and press **Select**.
5. Scroll to **Power on**(Your phone will register to a GPRS network automatically when the power is turned on) or **Application**(GPRS connection is activated when an application using GPRS needs it and closed when you end the application) and press **OK**.

The Main Menu

Connection indicator

If this function is activated, you can be notified by the screen prompt of the phone when your outgoing call is connected.

To activate/deactivate connection indicator:

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Connection indicator** and select the following type of connection indicator:
 - **Vibrating alert**: To activate/deactivate the vibration.
 - **Tone**: To activate/deactivate the sound.
 - **Off**: To deactivate this function.

Service light

You can change the color of service light with this function.

1. In standby mode, press the left soft key.
2. Scroll to **Phone setup** and press **Select**.
3. Scroll to **Service light** and press **Select**.
4. Scroll to a favorite color and press **OK**.

Phone setup

The Main Menu


Extras

My Picture

My Picture allows you to draw your own pictures. You can use them as standby logo and insert them into your messages.

Creating My Picture

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Press **Select**, **Options**.
4. Scroll to **Picture size** and press **Select**.
5. Press **Left** or **Right** to determine the width of the picture (in pixels), and press **Down**.
6. Press **Left** or **Right** to determine the height of the picture. Press **Save**.
7. Now you can start drawing your picture:
 - Press  key to switch among line mode (to draw lines), dot mode (to make dots) or erased mode (to erase lines and dots).
 - Press  key to change the thickness of line (when drawing lines) or size of dot (when making dots).
 - Press  key to change the color of pen.
 - You can also change drawing modes by pressing **Options**, scrolling to **Pen mode**, **Pen color**, **Pen size** and **Pen step** and pressing **OK**.
 - Press **Options**, scroll to **Zoom in** (or **Zoom out**) and press **Select** to zoom in (or out) on the picture.
 - Press **Options**; scroll to **Clear screen** to clear the screen.
 - Press the navigation key to draw a line in desired direction (in line mode), or move the cursor to desired position (in dot mode) and press . You can also use the alphanumeric keys on the keypad to control the direction.

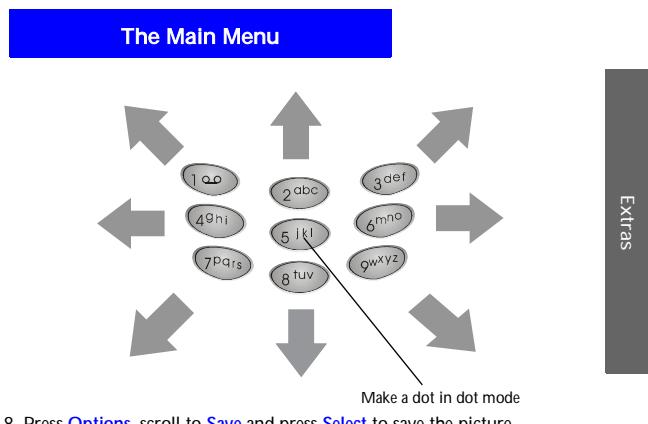

8. Press **Options**, scroll to **Save** and press **Select** to save the picture.

Editing My Picture

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Press **Select**.
4. Press **Options**, **Select**, scroll to the picture you want to edit and press **Open**.
5. Now you can start editing the picture.

Erasing My Picture

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Press **Select**.
4. Press **Options**, **Select**, scroll to the picture you want to erase and press **Open**.
5. Press **Options**, scroll to **Clear screen** and press **Select**.

Sending My Picture

With this function, you can send My Picture via message.
 1. In standby mode, press the left soft key.



The Main Menu

2. Scroll to **Extras** and press **Select**.
3. Press **Select**.
4. Press **Options**, **Select**, scroll to the picture you want to send and press **Open**.
5. Press **Options**, scroll to **Send** and press **Select**.
6. Enter recipient's number, or press **Names** to pick up a recipient from your Phone Book.
7. Press **Send**.

Alarm clock

Activating alarm clock

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Alarm clock** and press **Select**.
4. Scroll to **On** and press **OK**.
5. Enter alarm time using alphanumeric keys. Press **Down**.
6. Press **Left** or **Right** to select a repeat type. Press **Down**.
7. Press **Left** or **Right** to select an alarm tone. Press **Down**.
8. Press **Mark** or **Unmark** to turn on/off vibration.
9. Press **Save**.

When alarm is activated, the icon  will appear on the screen.

When alarm rings, press **Stop** to stop the alarm, or **Snooze** to activate the Snooze function. If the Snooze function is activated, The alarm will ring again in 5 minutes.

Deactivating alarm clock

Scroll to **Off** and press **OK** in step 4 above.

Calendar

With the Calendar function, you can easily write down notes and check appointments on each date to keep you organized.

Writing note

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.

The Main Menu

3. Scroll to **Calendar** and press **Select**.
- To write a note for today, press **Select** two times.
- To write a note for a specific date, scroll to **Go to date** and press **Select**. Enter the date using alphanumeric keys and press **OK**. Press **Select** two times.
4. Specify the following:
 - **Time**: enter the time of the event using alphanumeric keys. Press **Down**.
 - **Note type**: Press **Left** or **Right** to select a type for this note. Press **Down**.
 - **Content**: enter the description of the event. Press **Down**.
 - **Name**: If you want to make a call to someone, enter a name here, or press **Options** and select **From phone book** to pick up a name from Phone Book.
 - **Phone number**: Same as above. You can enter a phone number here or pick up a phone number in Phone Book by pressing **Options** and select **From phone book**.
 - **Circulation type**: Press **Left** or **Right** to select the repeat type of this event. If this event occurs only once, select **None**.
 - **Alarm**: Press **Left** or **Right** to select the time of the alarm to be activated before the event. If **Off** is selected, the alarm will be deactivated.
 - **Alarm vibrating**: Press **Mark** or **Unmark** to turn on/off the vibration when alarm is activated.
 - **Alarm tone**: Press **Left** or **Right** to select an alarm tone.
5. Press **Save**.

Extras

Viewing note

Viewing today's note

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Press **Select**.
5. Scroll to a note and press **Select**.

Viewing notes on a specific date

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **Go to date** and press **Select**.
5. Enter the date using alphanumeric keys and press **OK**.
6. Press **Select**.



The Main Menu

7. Scroll to a note and press **Select** to view the details of selected note.

View all notes

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **View all notes** and press **Select**.
5. Scroll to a note and press **Select** to view the details of selected note.

Viewing calendar in month mode

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **Month mode** and press **Select**.
5. Use the navigation key to go to desired day.

The days that have notes are bold. You can highlight them and press **Select** to view notes.

Jumping to a specific day

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **Go to date** and press **Select**.
5. Enter the date using alphanumeric keys and press **OK**.

Editing note

1. Scroll to the note you want to edit and press **Select**.
2. Press **Options**.
3. Scroll to **Edit** and press **Select**.
4. Edit the note. When done, press **Save**.

Erasing note

Method 1

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.

The Main Menu

4. Scroll to **Erase notes** and press **Select**.
 - To erase notes one by one, press **Select**.
Scroll to the note you want to erase and press **Erase**.
 - To erase notes on a specific date, scroll to **On chosen day** and press **Select**.
Enter the date using alphanumeric keys and press **OK**.
Press **Erase**.
 - To erase all notes at once, scroll to **All at once** and press **Select**.
Press **Yes**.
 - To let the phone erase notes automatically, scroll to **Auto erase** and press **Select**.
Scroll to a desired time period and press **OK**.

Exit

Method 2

1. Scroll to the note you want to erase and press **Select**.
2. Press **Options**.
3. Scroll to **Erase** and press **Select**.
4. Press **Yes**.

Moving a note to another date

1. Scroll to the note you want to move and press **Select**.
2. Press **Options**.
3. Scroll to **Move** and press **Select**.
4. Enter the date using alphanumeric keys.
5. Press **OK**.

Copying a note to another date

1. Scroll to the note you want to move and press **Select**.
2. Press **Options**.
3. Scroll to **Copy** and press **Select**.
4. Enter the date using alphanumeric keys.
5. Press **OK**.

Sending a note

You can send your calendar note to other person as a message.

1. Scroll to the note you want to send and press **Select**.
2. Press **Options**.
3. Scroll to **Send note** and press **Select**.
4. You can send the note in two types:

The Main Menu

- Scroll to **Send as SMS** to send the note as a short message. The recipient who uses compatible phone will receive the message as a calendar note. Press **Select**. Enter the recipient's number, or pick up a recipient from your Phone Book by pressing **Names**. Press **Send**.
- Scroll to **Send as text** to send the note as text. You can edit the contents before sending. Press **Options**, **Select**. Enter the recipient's number, or pick up a recipient from your Phone Book by pressing **Names**. Press **Send**.

Sending a message

If the calendar note contains a name in your Phone Book, you can use this function to send a message to that name directly.

1. Scroll to the note you want to send and press **Select**.
2. Press **Options**.
3. Scroll to **Send message** and press **Select**.
4. Enter the contents and press **Options**.
5. Scroll to **Send** and press **Select**.
6. Press **Send**.

Account book

The Account book of your phone helps you to track your income and expenses records easily. You can also get a balance result of all your accounting records or records in a specific month.

Creating an accounting record

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **Account book** and press **Select**.
5. Press **Select**.
6. Complete the following:
 - **Date**: Enter the date of the accounting record using alphanumeric keys. When done, press **Down**.

The Main Menu

- **Amount:** Enter the amount of the accounting record using alphanumeric keys. When done, press **Down**.
- **Item:** Enter the description of the accounting record. When done, press **Down**.
- **In/Out:** Press **Left** or **Right** to select the type of the accounting record.

7. Press **Save**.

Viewing accounting records

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **Account book** and press **Select**.
5. Scroll to **Accounts list** and press **Select**.
6. You can choose to view accounting records of a specific month or view all records.
 - To view accounting records of a specific month, press **Select**. Enter the year and month using alphanumeric keys and press **OK**. Scroll to a record and press **Select**.
 - To view all accounting records, scroll to **All accounts** and press **Select**. All accounting records will appear on the screen. Scroll to a record and press **Select**.

Viewing results of accounting records

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **Account book** and press **Select**.
5. Scroll to **Total count** and press **Select**.
6. You can choose to view result of accounting records of a specific month or view result of all records.
 - To view result of accounting records of a specific month, press **Select**. Enter the year and month using alphanumeric keys and press **OK**. Scroll to **In** (sum of all income amount), **Out** (sum of all expense amount) or **Balance** (balance of income and expense) and press **Select**. Corresponding information will appear on the screen.
 - To view result of all accounting records, scroll to **All accounts** and press **Select**. Scroll to **In** (sum of all income amount), **Out** (sum of all expense amount) or **Balance** (balance of income and expense) and press **Select**.

Extras

The Main Menu

Corresponding information will appear on the screen.

Editing accounting record

1. Scroll to the accounting record you want to edit and press **Select**.
2. Press **Options**, scroll to **Edit** and press **Select**.
3. Edit the accounting record. When done, press **Save**.

Erasing accounting record

Method 1

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calendar** and press **Select**.
4. Scroll to **Account book** and press **Select**.
5. Scroll to **Erase accounts** and press **Select**.
 - To erase accounting records one by one, press **Select**. Scroll to the record you want to erase and press **Erase**.
 - To erase records of a specific month, scroll to **Of chosen month** and press **Select**. Enter the year and month using alphanumeric keys and press **OK**.
 - To erase all records at once, scroll to **All at once** and press **Select**. Press **Yes**.
 - To let the phone erase accounting records automatically, scroll to **Auto erase** and press **Select**. Scroll to a desired time period and press **OK**.

Method 2

1. Scroll to the account record you want to erase and press **Select**.
2. Press **Options**, scroll to **Erase** and press **Select**.
3. Press **Yes**.

Playing Games

Your phone provides 4 interesting games.

To play a game:

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.

The Main Menu

3. Scroll to **Game** and press **Select**.
3. Scroll to a game you want to play and press **Select**.
4. Scroll to one of the following:
 - **New Game**: Start a new game.
 - **Continue**:
 - **Level**: Press **Up** or **Down** to select the level of the game and press **OK**.
 - **Top Score**: View top score.
 - **Instruction**: View instructions of the game.

During a game, you can press  key to pause and access the options above.

Extra

Five Ball

A board with 9x9 squares and several balls in different colors will appear on the screen. The objective of this game is to put 5 balls with the same color in adjacent straight vertical, diagonal or horizontal lines. Once done, the balls will disappear and you will get 2 points for each ball. If you move a ball without being able to make other balls disappear, 3 more new balls will appear on the pad.

Press  key to select a ball and then the navigation key or alphanumeric keys to move the cursor on the pad. Press  again to put the ball on a selected square.

Flying

Move the aircraft away from the attack of enemy fire (the yellow moving dots). The longer you survive, the higher your score. The game is over when you get hit by enemy fire.

Press  key to start the game. Press the navigation key or alphanumeric keys to move the cursor on the pad.

Popo car

Drive your car and get as many flags as you can. While you are driving, you will be chased by enemy cars. Try to get away from them. When necessary, you can emit a popo to confuse them temporarily. The yellow bar on the right of the screen indicates your fuel level. If the fuel is low, you need to get a fuel-



Genie

box to refuel. The game is over when you run out of your fuel or when the enemy car gets you.

Press  key to start the game. Drive your car using the navigation key or alphanumeric keys.

Press  key to emit a popo to confuse enemy cars. The more flags you get, the higher your score.

Guide the genie to eat the white dots on the path and keep it away from the enemies. If the genie eats the pink dots located at the corners, the enemies will become weak temporarily and you can guide the genie to eat them. The more dots and enemies the genie eats, the higher your score.

Press  key to start the game. Guide the genie using the navigation key or alphanumeric keys.

The game is over once the enemy gets the genie.

Calculator

You can use this function to perform simple calculations and convert currencies.

Using calculator

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calculator** and press **Select**.
4. Enter numbers using alphanumeric keys.
5. Press the navigation key to perform operations.

Navigation key	Operation
Up	+
Down	-
Left	*
Right	/

The Main Menu

Press  key to get the result of calculation.

Extras
Start

Converting currencies

Setting up exchange rate

Exchange rate must be setup before using the currency exchange function.

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calculator** and press **Select**.
4. Press **Options**.
5. Scroll to **Exchange rate** and press **Select**.
6. Press **Select**.
6. Enter the exchange rate of foreign unit expressed in domestic unit using alphanumeric keys and press **OK**.
7. Scroll to **Domestic unit expressed in foreign unit** and press **Select**.
8. Enter the exchange rate of domestic unit expressed in foreign unit using alphanumeric keys and press **OK**.

Performing currency exchange

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Calculator** and press **Select**.
4. Enter the amount of currency and press **Options**.
4. Scroll to **In foreign** or **In domestic** and press **Select**.

Stopwatch

Split timing

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Stopwatch** and press **Select**.
4. Press **Select**.
5. Press **Start** to start timing.
6. Press **Split** to get a split timing. You can get up to 10 split timings.
7. Press **Stop** to stop timing.
8. Press **Options** and you can do the following:
 - Press **Select** to start the timer again.



The Main Menu

- Save the timing record. Scroll to **Save**. Enter the name of the record and press **OK**.
- Scroll to **Reset** and press **Select** to reset timer.

Lap timing

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Stopwatch** and press **Select**.
4. Scroll to **Lap timing** and press **Select**.
5. Press **Start** to start timing.
6. Press **Lap** to get a lap timing. You can get up to 10 lap timings.
7. Press **Stop** to stop timing.
8. Press **Options** and you can do the following:
 - Press **Select** to start the timer again.
 - Save the timing record. Scroll to **Save**. Enter the name of the record and press **OK**.
 - Scroll to **Reset** and press **Select** to reset timer.

Showing the last timing record

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Stopwatch** and press **Select**.
4. Scroll to **Show last** and press **Select**.

Viewing timing records

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Stopwatch** and press **Select**.
4. Scroll to **View times** and press **Select**.
5. Scroll to the timing record you want to view and press **Select**.

Erasing timing records

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Stopwatch** and press **Select**.
4. Scroll to **Erase times** and press **Select**.
5. You can erase timing records one by one or all at once:

The Main Menu

- To erase timing records one by one, press **Select**.
Scroll to the timing record to erase and press **Select**.
Press **Yes**.
- To erase all timing records at once, scroll to **All at once** and press **Select**.
Press **Yes**.

Infrared

You can set up your phone to receive data through its Infrared(IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant. You can send or receive data to or from a compatible phone or data device via the IR port of your phone.

1. In standby mode, press the left soft key.
2. Scroll to **Extras** and press **Select**.
3. Scroll to **Infrared** and press **Select** to activate this function.

Extras

The Main Menu

WAP Service

The WAP Service allows you to access mobile Internet information via your operator using the WAP (Wireless Application Protocol) technology. For example, you can browse weather reports, parking information and on-line banking services.

If you are using the GPRS network to access WAP services, the icon  will appear on the screen.

The WAP settings must be configured before you can use the WAP service. See "Configuring WAP profiles" on page 101 for details.

Browsing the Internet

Going to your homepage

1. In standby mode, press the left soft key.
2. Scroll to **WAP service** and press **Select**.
3. Press **Select**.
4. Your phone will start connecting to the mobile Internet. If connection is successful, the homepage will appear on the screen.

Going to your bookmarked pages

1. In standby mode, press the left soft key.
2. Scroll to **WAP service** and press **Select**.
3. Scroll to **Bookmark** and press **Select**.
4. Scroll to a desired bookmark and press **Select**.
5. Press **Select**.
6. Your phone will start connecting to the mobile Internet. If connection is successful, the page will appear on the screen.

Navigating the Internet using the options menu

When browsing the mobile Internet, you can press **Options** to access the following options:

- **Home**: Scroll to this option and press **Select** to return to the homepage.
- **Bookmark**: Scroll to this option and press **Select** to open the bookmark list. To go to bookmarked pages, scroll to a bookmark and press **Select** two times.

The Main Menu

Media center

You can sort out and save the multimedia objects you received via multimedia messages in the Media center. You can also select desired multimedia objects from the Media center and insert them into the multimedia message that you are writing or editing.

Media center

Viewing the contents of the Media center

1. In standby mode, press the left soft key.
2. Scroll to **Media center** and press **Select**.
3. Scroll to a multimedia folder you want to open and press **Select**.
4. Scroll to a multimedia object you want to view and press **Select**.
5. If you select an image, it will appear on the screen. If you select a melody or voice, it will be displayed by your phone.
6. Press **Options** to access the following:
 - **Detail**: View detail information of the file.
 - **Rename**: Change the file name.
 - **Delete**: Delete the file.
 - **Memory info**: Display the memory status of the Media center.

Inserting multimedia objects in multimedia msgs.

1. In standby mode, press the left soft key.
2. Press **Select**.
3. Scroll to **Multimedia msgs.** and press **Select**.
4. Press **Select** and start to write/edit messages.
5. Press **Options**, scroll to **Insert object** and press **Select** two times.
6. Scroll to a desired multimedia folder and press **Select**.
7. Scroll to a desired multimedia object and press **Select**.
8. Press **Options**, **Select**.

The Main Menu

To edit a bookmark, scroll to a bookmark and press **Select**, then scroll to **Edit** and press **Select**. Enter the name and address of the book mark and then press **OK**.

To erase a bookmark, scroll to a bookmark and press **Select**, then scroll to **Erase** and press **Select**, then press **OK**.

- **Open link** (appears when you selected a link in the browser): Scroll to this option and press **Select** to open selected link.
- **Add bookmark**: Scroll to this option and press **Select** to bookmark current page.
- **Go to Address**: Go to another page by entering the address. Scroll to this option and press **Select**. Enter the address and press **OK**.
- **Appearance Settings**: This option allows you to configure the appearance of information when browsing the mobile Internet. Scroll to this option and press **Select**. You will be presented with the following sub-options:
 - Text wrapping**: Scroll to this sub-option and press **On** (or **Off**) to turn on or off the text wrapping function.
 - Show image**: Scroll to this sub-option and press **On** (or **Off**) to show or not to show the image.
 - Show title**: Scroll to this sub-option and press **On** (or **Off**) to show or not to show the title of page.
- **Download Settings**: You can decide whether to accept the cookies or not when browsing. Scroll to this option and press **Select** two times. Scroll to **Allow** (to accept cookies) or **Reject** (to reject all cookies) and press **OK**.
- **Reload**: Scroll to this option and press **Select** to reload current page.
- **Clear the Cache**: Scroll to this option and press **Select** to delete all cache files in phone memory.
- **Service Inbox**: Your operator may send you some service messages that contains WAP links and other information. If such message is received by your phone under standby mode, you can open and read it immediately. Otherwise it will be store in the service inbox. Here you can check the service messages.
- **Exit**: Scroll to this option and press **Select** to disconnect from the Internet and exit browser.

The Main Menu

Configuring WAP profiles

You can configure up to 5 sets of WAP settings. Each set of WAP settings is called a WAP profile. The WAP profile may have already been programmed on your SIM card after you subscribe the WAP service to your system so you can access mobile Internet immediately. Otherwise, you need to configure the settings manually. Please contact your system operator for details.

Information you need in case you have to set up a WAP profile manually

Before setting up a WAP profile, please be sure to obtain the following parameters from your operator:

Homepage: _____

Session mode: Temporary Permanent

Connection security: On Off

Data bearer: GSM Data (Dial-up number, Data call type, Data call speed)

GPRS (GPRS access point) _____

IP address: _____ . _____ . _____ . _____

Authentication type: Normal Secure

Login type: Manual Automatic

Username: _____

Password: _____

Media center

Setting up a WAP profile

1. In standby mode, press the left soft key.
2. Scroll to **WAP service** and press **Select**.
3. Scroll to **Profiles** and press **Select**.
4. Scroll to an empty profile and press **Select**.
5. Scroll to **Edit** and press **Select**.
6. According to the parameters supplied by your operator, configure the following:
Homepage: Enter the address of the homepage.
Session mode: **Temporary** or **Permanent**.
Connection Security: **On** or **Off**.
Data bearer: **GSM Data** or **GPRS**. If **GSM** is selected, you need to setup the **Dial-up number**, **Data call type** and **Data call speed**. If **GPRS** is

The Main Menu

selected, you need to setup **GPRS connection type** and **access point**.

IP address: Enter the IP address.

Authentication type: **Normal** or **Secure**.

Login type: Manual or Automatic.

Username: Enter the username.

Password: Enter the password.

The setup is complete. Now you are ready to access the mobile Internet.

Selecting and activating a WAP profile

If you have multiple WAP profiles for different operators, you can use this function to select one to use.

1. In standby mode, press the left soft key.
2. Scroll to **WAP service** and press **Select**.
3. Scroll to **Profiles** and press **Select**.
4. Scroll to a desired profile and press **Select**.

Editing a WAP profile

1. In standby mode, press the left soft key.
2. Scroll to **WAP service** and press **Select**.
3. Scroll to **Profiles** and press **Select**.
4. Scroll to the profile you want to edit and press **Select**.
5. Scroll to **Edit** and press **Select**.
6. Edit the contents of the profile.

Renaming a WAP profile

1. In standby mode, press the left soft key.
2. Scroll to **WAP service** and press **Select**.
3. Scroll to **Profiles** and press **Select**.
4. Scroll to the profile you want to rename and press **Select**.
5. Scroll to **Rename** and press **Select**.
6. Enter the new profile name and press **OK**.

The Main Menu

My shortcut

You can put 9 most frequently used functions in My Shortcut so you can access them quickly and easily.

Using My shortcut

9 frequently used functions are already pre-programmed in My shortcut and you can use them directly.

To use My shortcut:

1. Long press  key under standby mode and the shortcut menu will appear.
2. Scroll to an item and press **Select**.

Customizing My shortcut

To customize My Shortcut:

1. In standby mode, press the left soft key.
2. Scroll to **My shortcut** and press **Select**.
3. Scroll to **Edit** and press **Select**.
4. Scroll to a desired item and press **Select**.
5. Specify the position of the item in My shortcut and press **Save**.

My
shortcut

The Main Menu

Operator services

If you have subscribed STK (SIM Tool Kit) or other operator services to your operator, there will be an additional item here. The contents of service and how to use them depends on your subscription. Please consult your operator for details.

Operator services

Troubleshooting & FAQ



Troubleshooting & FAQ

If problems occur when you use your phone, please refer to the table below to find out possible solutions. If your problem is not in the table, or the problem still persists after you try these solutions, please seek your original dealer for help.

When you encounter these problems...	Please check...
Can not turn on the phone	<ul style="list-style-type: none">• Is the battery empty?• Is the battery properly installed?• Are the contacts on battery and phone clean? If the contacts appear to be soiled, contact your dealer to clean them.
Unable to make calls.	<ul style="list-style-type: none">• Is the reception of network signal in good condition? Move to an open space, or a place closer to window.• Is network selection setting setup properly? If necessary, try to select your network manually.• Have you already activated the fixed dialing and call barring functions? If yes, deactivate them temporarily.• Has the call cost exceeded your cost credit? Check your remaining cost credit and reset the call cost if necessary.• Are you using your phone with other SIM cards when SIM lock protection function has been activated? Deactivate the function if necessary.
Unable to receive calls.	<ul style="list-style-type: none">• Is the reception of network signal in good condition? Move to an open space, or a place closer to window.• Have you already activated call divert or call barring functions? Deactivate them if necessary.
Your voice can not be heard.	Have you already turned on the in-call mute function? Turn it off if necessary.
Can not use certain call functions.	To use certain advanced call functions (such as call divert and call barring), you may need to subscribe these services to your operator first.
There are noises during a phone call.	Avoid using the phone near a microwave oven, speaker or TV. Their interference has adverse effect to call quality.
Can not connect to the Internet	<ul style="list-style-type: none">• Have you subscribed the Internet (WAP) service to your operator?• Did you enter correct setting parameters (such as APN and IP addresses) in WAP profile setup?

Troubleshooting & FAQ

The screen shows "Insert SIM".	<ul style="list-style-type: none">• Is your SIM card correctly inserted into the phone?• Are the metal contacts on SIM card clean? If they appear to be soiled, please contact your dealer to clean them.
The battery can not be charged.	<ul style="list-style-type: none">• Is the battery charger correctly plugged into the battery charger socket on the phone?• Is the power cord of the charger damaged?• Is the battery very old? Replace with a new battery and try again.
The standby and talk time is apparently shorter than ever.	<ul style="list-style-type: none">• Your phone consumes more power when signal reception is poor. Try to move to a better location when you use the phone.• Are you using a new battery? It takes several charge discharge cycles for the battery to reach its original capacity.• Is the battery very old? Replace it with a new one.• Are you using the phone in very high or low temperature environment? The efficiency of a battery can be effected by ambient temperature.
Can not deactivate call barring or call divert functions.	Is the reception of network signal in good condition? Move to an open space, or a place closer to window.

Care and Maintenance



Care and Maintenance

It is recommended that you observe the cautions below to prevent possible damage to your phone and to keep your phone in good condition.

When using your phone

- Avoid using your phone in dusty, extremely high or low temperature environments.
- Your phone does not provide water-proof capability. Do not spill water onto the phone or use it in the water or rain.
- Avoid removing the battery without turning off the phone in advance. If you want to remove the battery, turn phone power off first.
- Do not apply strong force or shock to the phone.
- Keep the phone and its accessories away from small children.
- Do not insert metal objects into the battery charger socket of the phone. This can short-circuit the battery and result in danger.
- Back up your Phone Book data regularly onto the SIM card.

When cleaning your phone

- Use soft, clean and slightly moistened cloth to clean your phone. Do not let water come into any openings (such as earpiece and microphone) or remain on metal surface (such as the metal contacts).
- Do not wipe your phone with any corrosive liquid or coarse objects. This can damage the outer case of your phone.

When carrying/storing your phone

- Do not leave your phone in hot enclosed places (such as in a car under direct sunlight).
- Avoid pressing and shaking the phone when you carry it.
- Remove the battery from phone if it is not going to be used for a long period of time. Keep the phone and battery in a cool and dry place.

When using the accessories

- Use only approved batteries and accessories. Use of non-approved accessories can cause damage to your phone or yourself.
- Do not use the battery and charger for other purposes.

When using your phone in public areas

Use the phone with manner. Turn it off or make it silent when you are asked to.

When the phone appears to be broken

Care and Maintenance

Do not attempt to disassemble/fix the phone by yourself. Seek your original dealer for help.

The Regulatory Statement for the mobile phone

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 86-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5 cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5 cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential

exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.