

1 | 제품사양

제품명 : 일영용 공식응원봉
크기 : 107 X 76 X 253 (mm)
무게 : 약 262g
재질 : ABS, PC
구성품 : 응원봉, 스트랩, 사용자설명서
간전지 : 알카리인 AAA 간전지 3개
작동시간 : 약 4시간
KCC인증 : R-R-REI-DREAMUS-HERO01
FCC ID : QDM-HERO-OLS01
기획 및 판매 : (주)드림어스컴퍼니
제조사 : (주)드림어스컴퍼니
제조국가 : 대한민국

2 | 주의사항 △

- 강한 충격이나 물이 닿으면 고장의 원인이 됩니다.
- 임의로 분해 및 조립하지 마십시오.
- 정품 알카리인 AAA 간전지를 사용하십시오.
- 사용하지 않을 시에는 건전지를 제거해 주십시오.
- 건전자는 영/유아의 손이 닿지 않는 곳에 보관하십시오.
- 수영이 다 된 건전지는 지정된 폐기 장소에 폐기하십시오.
- 반드시 건전지의 +, - 극성을 잘 확인하여 물바른 극성 방향으로 장착하십시오.
- 잘못된 장착은 제품 고장의 원인이 되며 화재 및 화상의 위험이 있습니다.
- 본 제품은 무선 운용 중 충전의 가능성이 있습니다.

3 | 사용 모드 설명

모드설정

- 전원 켜기/끄기 (버튼 길게 누르기)
버튼을 3초 정도 길게 누르면 전원이 커지고 꺼지게 됩니다.
- 일반모드 (버튼 짧게 누르기)
전원이 켜진 상태에서 버튼을 짧게 한번씩 누르면 6가지 컬러 모드로 변경 됩니다.

4 | 건전지 삽입 및 교체

※ 건전지가 저전압일 경우 전원이 자동으로 차단되오니 새건전지로 교체 바랍니다.

△ 건전지 주의사항

- (-)극부터 (+)극 순으로 바르게 넣으십시오.
역 삽입 시 발열로 인한 파열 및 누액의 위험이 있습니다.
- 건전지 부분이 깁자기 뜨거워졌을 때에는 바로 건전지 부분을 분리해 주세요.
(화상의 위험이 있으니 손으로 잡지 마세요)
- 정품 알카리인 AAA 간전지를 사용해 주시기 바랍니다.
(정품이 아닐 경우 제품에 손상이 있을 수 있습니다. 꼭 정품 건전지를 사용해 주세요.)
- 충전, 분해, 단락, 가열하지 마십시오. 폭발 또는 누액으로 인해 상해를 입을 위험이 있습니다.
- 누액의 가능성이 있으니 사용이 끝난 간전지는 즉시 기기에서 끼어십시오.
- 매회 공연 시 새로운 건전지를 사용해 주시기 바랍니다.
- 새 건전지와 사용한 건전지, 그리고 서로 다른 건전지와 혼용하지 마십시오.
- 전지의 포장을 벗긴 채로 주머니나 핸드백 등에 보관하지 마십시오.

5 | A/S 처리 규정

- 제품 구매 후 확인되는 불량/교환은 판매처에 문의 바랍니다.
- 무상 보증 기간은 구입한 날로부터 3개월이며, 보증 기간 이내라도 고객 과실 및 파손에 의한 유상 A/S 대상으로 판단되는 경우 별도 수리비가 청구되오니 이점 반드시 숙지해 주시키 바랍니다.

- 제품 A/S 접수비(왕복 배송비)는 제조사 부담 후 유상 수리 대상일 시 고객 부담입니다.
- 매일로 신고수 및 상담된 내용에 한해서 A/S 서비스가 가능합니다.
- 매일 발송 시, 구매 영수증(구매 달짜 포함) 필수로 자세한 불량 증빙 내역을 포함하여 발송 바랍니다.
- 상담 및 접수 기기 원로본 후 택배 발송하여 주시기 바랍니다.
- 무상 보증 기간(3개월) 이내에 아래의 원인으로 발생할 시제품 교환 서비스를 받을 수 있으나 제품 A/S 접수비(왕복 배송비)는 제조사 부담 후 유상 수리 대상일 시 고객 부담입니다.

※ 제품 교환 대상
- LED 동작 불량 - 전원 버튼 작동에 따른 동작 불량 - 동봉된 배터리 소켓 불량
- 페키지 손상은 불량 및 교환 사용기자 않습니다.

- 유상 A/S : 유상 A/S 기간은 구입 후 최대 1년 이내입니다. 무상 보증 내용에 해당하지 않는 제품 이상의 경우 유상으로 A/S 받을 수 있으며, 제품 A/S 접수비(왕복 배송비)는 고객 부담입니다.

※ 유상 A/S 대상
- 제품 구입한 날로부터 3개월이 경과한 경우
- 사용 중 고장 과실에 의한 기구나 및 회로물의 파손
- 일의 개선을 위한 제품 조립을 강제 파손하는 경우
- 비인정 배터리 사용으로 인한 회로부의 파손
- 전원을 넣은 상태에서 침수, 우천 시 사용 등에 따라 회로부의 파손 및 내부 침수

6 | A/S 신청 접수처

제품 문의 및 고객상담
(주)드림어스컴퍼니
TEL : 1577 - 5557 WEB : www.iriver.co.kr / iriver@iriver.co.kr
품질보증기간 : 구매일로부터 3개월

A/S 접수방법
정상적으로 사용한 제품의 경우 전화/이메일을 통한 고객상담 후, 제품 수리 및 교환 절차를 안내드립니다.
고객 과실의 경우 고객 상담 시, 수리 비용과 택배 비용을 포함하여 안내드립니다.

HERO

**LIM YOUNG WOONG
OFFICIAL LIGHT STICK**

1 | Specification

PRODUCT : LIM YOUNG WOONG OFFICIAL LIGHT STICK
SIZE : 107 X 76 X 253 (mm)
WEIGHT : About 262g
MATERIALS : ABS, PC
COMPONENTS : Light stick, Strap, User manual
BATTERY : AAA BATTERY 3EA
OPERATING : about 4hours
CERTIFICATION : R-R-REI-DREAMUS-HERO01
FCC ID : QDM-HERO-OLS01
PLANNING : DREAMUS COMPANY
MANUFACTURE : DREAMUS COMPANY
COUNTRY OF MANUFACTURE : KOREA

2 | Caution △

- If a strong or exposure to water will cause damage.
- Do not disassemble or assemble on your own.
- Keep batteries in a safe place, out of children reach.
- Do segregate your product and used batteries from household waste for recycling, where possible, according to local laws.
- There's a possibility of radio frequency interference during wireless operation.

3 | How to use

MODE SETTING

- POWER ON/OFF (LONG CLICK BUTTON)
Press and hold the button for about 3 seconds to turn the power on/off.
- NORMAL MODE (ONE CLICK BUTTON)
Once press the button briefly with power on, the mode will changes to the 6 color modes.

4 | Replacing Batteries

※ If the battery is low voltage, the power is automatically power off, so please replace it with a new battery.

△ BATTERY CAUTION

- Add the correct order from (-) to (+) pole.
There is a risk of ruptures and leaks due to heat in reverse injection.
- Remove the battery part immediately when the battery part suddenly heats up.
(Don't hold it with your hands as there is a risk of burns.)
- Please use genuine alkaline AAA batteries.
(If not genuine, there may be damage to the product. Be sure to use a genuine battery.)
- Do not charge, disassemble, short circuit, heat. Risk of injury due to explosion or leakage.
- Remove the battery from the machine immediately after use as it may cause leakage.
- Please use a new battery for each performance.
- Do not mix new batteries with used batteries and other batteries.
- Do not store batteries in a pocket or bag with the battery unpackaged.

5 | Warranty Period and Repair Service

- Any defect, replacement, or refund of the product, please contact your dealer.
- Free warranty period is three months from the date of purchase. Even within the free warranty period, if the defects of the product occurred by the customer's fault, repair cost will be charged.

- The product A/S application fee (round trip shipping fee) shall be paid by the customer if it is subject to paid repair after the manufacturer pays.
- Repair service is only provided after requesting the service through an email.
- Please send the product after application and consultation is completed.
- Replacement Service: If the following phenomenon occurs within the warranty period (3 months), the product exchange service can be provided, but the product A/S application fee (round trip shipping fee) will be paid by the manufacturer: If it's subject to paid repair, it's a customer's burden.

※ Paid A/S

- Defects of operation of LED and Wireless.
- Malfunction of the power button.
- Bad battery socket. - Package damage is not eligible for a refund or replacement.
- Paid Repair Service: The paid warranty period is up to 1 year after purchase.

In case of products that are not covered by free warranty, you can get warranty at a cost, and the product A/S application fee (round trip shipping fee) is borne by the customer.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S

- After the free warranty, (three months after the date of purchase)
- Damages on the product or the circuit caused by customer's fault.
- Disassemble the product for any modification.
- Damages on the circuit by using non-certified battery.
- Damage to circuits and internal flooding due to inundation or rain.

※ Paid A/S</p