


## 6. SETUP PHOTOS

### 6.1. STANDARD CONFIGURATION

#### DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP

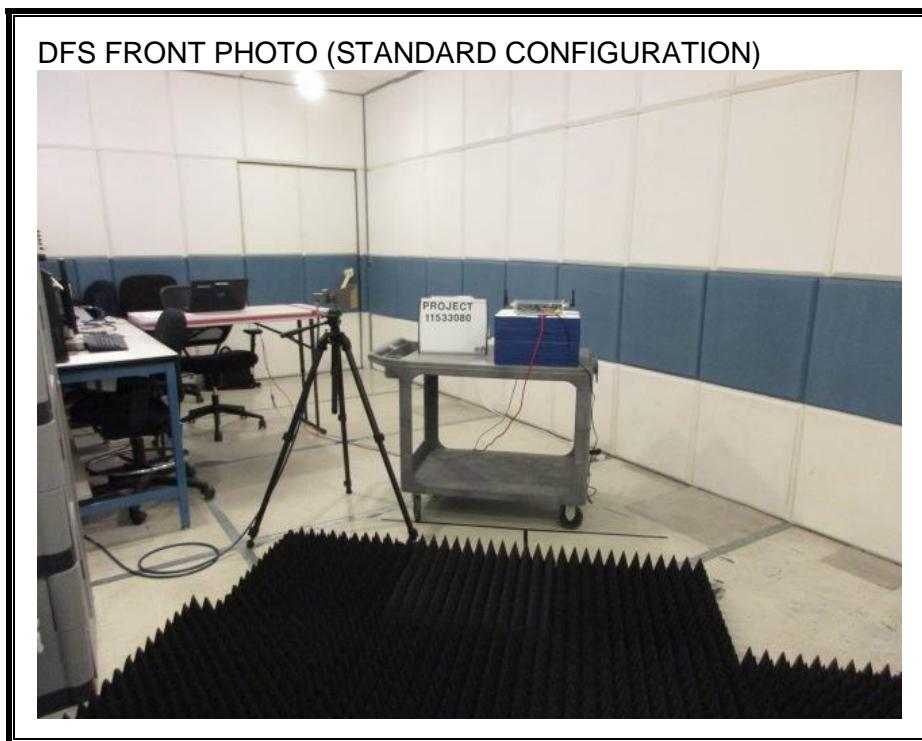


DFS BACK PHOTO (STANDARD CONFIGURATION)



## 6.2. BRIDGE MODE CONFIGURATION

### DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP

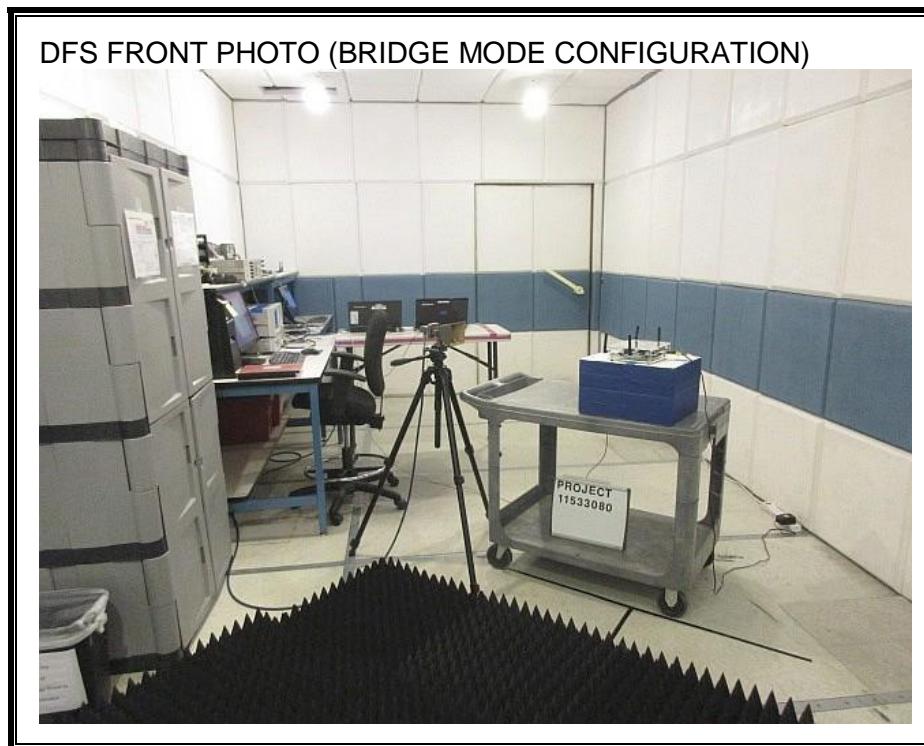

DFS BACK PHOTO (BRIDGE MODE CONFIGURATION)



**END OF REPORT**