

Operation Description

The Go Go Auto is powered by 3 X 1.5V AA size battery and it has a internal antenna. When it received a “Forward” signal, it will go forward. When it received a “Turn” signal, it will turn backward.

Refer to the transmitter circuit design, the circuit description is listed as below:

- ❑ Q1 and associate circuit act as receiver.
- ❑ U1 and associate circuit act as decoder.
- ❑ Q2 ~ Q7 and associate circuit act as motor driver.