



 
SCOOP 'N' SHOOT R/C BASKETBALL

Contents

- 2 Sneakers, one blue & one red.
- 2 Basketball styled controllers.
- 2 Backboards with nets.
- 3 Basketballs.

Remote Control

1. Unscrew the battery cover on the bottom of the remote with a Phillips screw driver.
2. Install 9V batteries with polarities as shown inside the battery compartment.

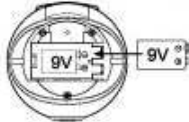


3. Replace the battery cover and screw shut.

4. Choose 1 or 2 position on the remote. **(MAKE SURE THE SWITCH ON THE CONTROLLER IS SET AT THE SAME NUMBER AS THE CAR'S.)**


Sneaker

 1. Unscrew the battery cover on the bottom of the sneaker with a Phillips screw driver.
2. Install 4 AAA batteries with polarities as shown inside the battery compartment.

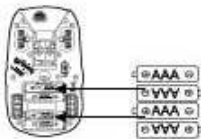


3. Replace the battery cover and screw shut.

 
4. Turn switch to the 1 or 2 positions **(MAKE SURE THE SWITCH ON THE CAR IS SET AT THE SAME NUMBER AS THE CONTROLLER'S.)**

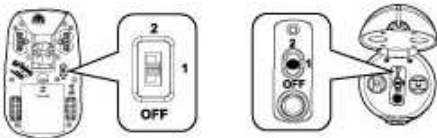

How to operate

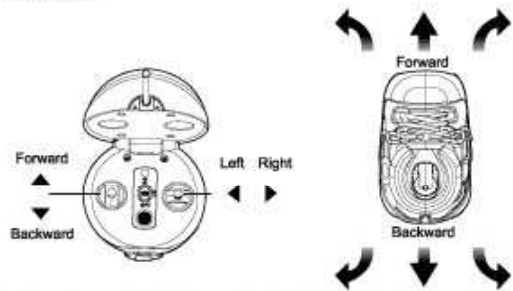 

 1. Drive the sneaker over the ball. Conveyor belt inside the sneaker will scoop the ball up to the top while sneaker is moving.

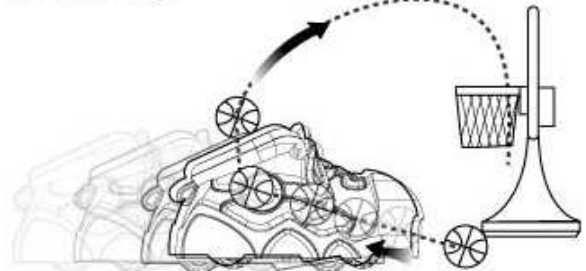

2. Press the red button on the controller to shoot the ball. Do Not shoot the ball until the ball has been moved to the top.



Warning:

- Do not use any projectiles other than those advised by the manufacturer.



- Do not aim at eyes & face when launching the ball. Make sure to separate yourself and the product when launching the ball.



- Do not put your finger into the gaps around the wheels any time.



Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Below is the safety warning for handling batteries.

- Battery insertion must be done by an adult.
- Do not short circuit battery contacts.
- Do not mix old and new batteries.
- Do not mix Alkaline and standard (heavy-duty or carbon-zinc) batteries.
- Dispose of batteries safely and correctly.
- Do not attempt to burn batteries. Remove exhausted batteries.
- Remove batteries if the product will not be used for a long period.

Note:

You can operate all sneakers vehicles simultaneously, make sure you have the remote and vehicle on the same number (1 or 2) when operating.

The radio circuitry in your car and remote controller is sensitive. Radio interference can affect the control of the vehicle. You may have to choose another location to operate your vehicle.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Toll Free Kid Galaxy Hot Line: 800-816-1135

Kid Galaxy

Copyright © 2007 Kid Galaxy, Inc.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.