

Walkie Talkie Pens

Ball Point Pen Operations
Twist grip to advance ball point cartridge.
Twist in opposite direction to retract the point.
To replace ink cartridge, unscrew tip while holding grip. After removing tip, advance cartridge and pull away from pen. Replace with standard D-1 mini refill. Reinstall tip: tighten until snug. Do not over tighten.

Lifetime Warranty
We fully guarantee this writing instrument against mechanical failure. Should service become necessary, the writing instrument will be repaired or replaced (at our option). Only parts are included from this warranty, as well as parts damaged from negligent misuse. If your writing instrument needs service, wrap with protective materials and seal securely in a box. Send via insured and registered mail to:

Stylus Service Corporation
26500 Sherwood
Warren, MI 48091-4150

Please enclose a brief note about the problem; include your name and address printed clearly. Enclose either a money order for \$4.95, payable to Stylus Writing Instrument Company or your credit card number (with exp. date), to cover the cost of return postage and handling. This warranty gives you specific legal rights; you may have other rights, varying from state to state.




MADE IN CHINA

CAUTION:

- Your walkie talkie pen set has been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than to replace batteries.
- When signal becomes weak, it is time to change the battery.
- After use, always turn the VOLUME control to the OFF position.

HOW TO OPERATE:

- Open battery cover and snap in a 9-volt (DLR01) battery.
- Turn the VOLUME control to the ON position. Your walkie talkie pen is now ready to operate.
- Turn the volume control knob to adjust the sound level.
- Press the PUSH TO TALK button to transmit.
- Release the PUSH TO TALK button to receive.
- When transmitting, speak in a clear voice with the microphone about three inches from your mouth.
- Best transmission and reception is achieved when the antenna is held in a vertical position.

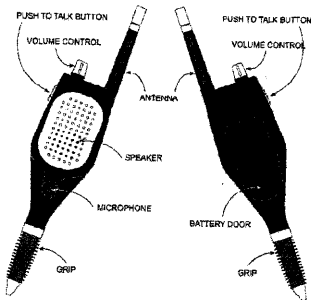

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



12016G