



FOR AGES 6 AND UP

BATTERY OPERATED

WALKIE TALKIES

WALKIE TALKIES FEATURES

- 9-Volt battery operated
- ON/OFF volume control to normal listening
- Push-To-Talk, release to listen button switch
- Powerful signal (4-transistors)
- Flexible antenna for best transmission & reception
- Morse code signal switch
- Communication distance approx. up to 35 foot
- Belt-Clip for ease of carrying

HOW TO OPERATE

1. Turn the "ON/OFF" switch to "ON", and adjust the volume control to normal listening level.
2. Press the "PUSH-TO-TALK" button for transmitting, and speak in a normal voice level into the speaker/microphone grille.
3. Release the "PUSH-TO-TALK" button for receiving
4. Best transmission and reception are obtained when the FLEXIBLE ANTENNA is held in vertical position.
5. To send MORSE CODE signals, pushing the "PUSH-TO-TALK" button, press the signal code key and quickly release to send a-(dot), or hold key longer to send a-(dash).

"PUSH-TO-TALK" BUTTON

"Modifications not authorized by the manufacturer may void users authority to operate this device"

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1. Your walkies talkies have been fully adjusted prior to shipment.
2. When the sound becomes weak, it is time to change the battery.
3. After use, always turn the ON/OFF/VOLUME CONTROL switch to the "OFF" position.
4. Keep your set in dry place.
5. Take out batteries when walkie talkie are not in use.

- 4 TRANSISTOR
- SAFE FLEXIBLE ANTENNA
- MORSE CODE
- REQUIRES "9V" BATTERY PER UNIT (NOT INCLUDED)

FLEXIBLE ANTENNA

SPEAKER / MIC GRILLE

POWER ON/OFF

MORSE CODE KEY



BATTERY INSTALLATION

- REMOVE BATTERY COVER INSTALL ONE 9V BATTERY EACH UNIT (NOT INCLUDED)
- DO NOT USE RECHARGEABLE BATTERY
- BATTERY TO BE INSERT WITH CORRECT POLARITY



1279 CHAMPION CIRCLE
CARROLLTON, TX 75006, USA

662

MADE IN CHINA

