

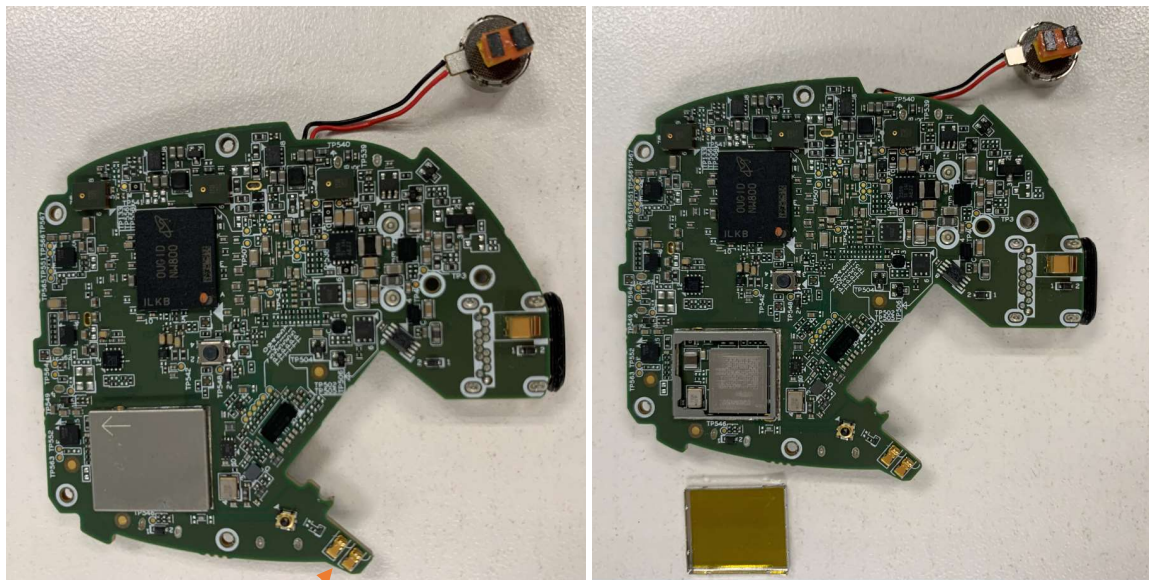



Antenna is located on the side of speaker. Spring feed is located on the other side of PCB

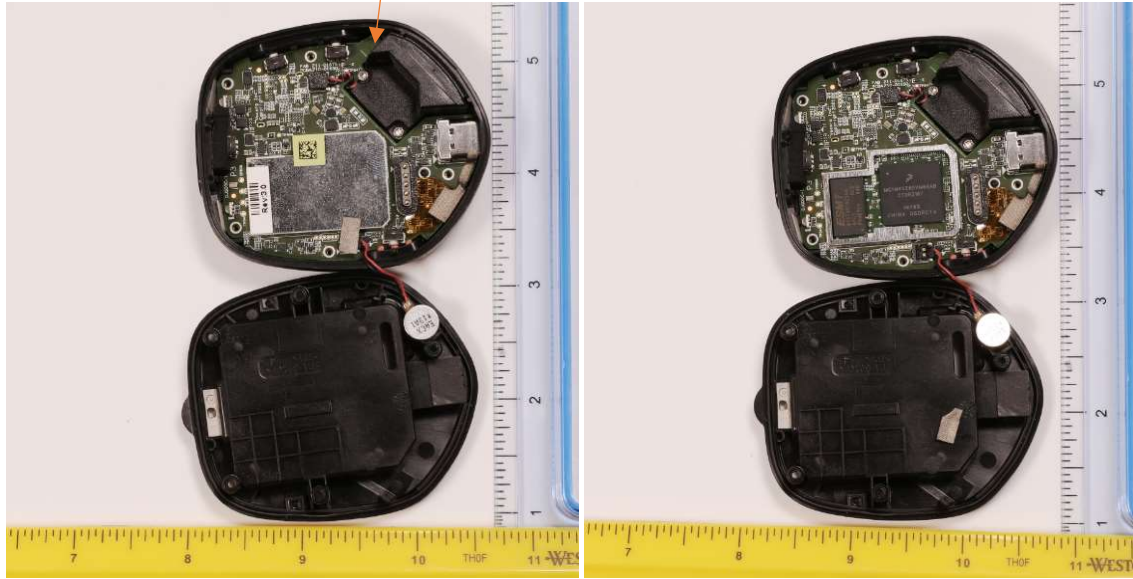

Spring feed

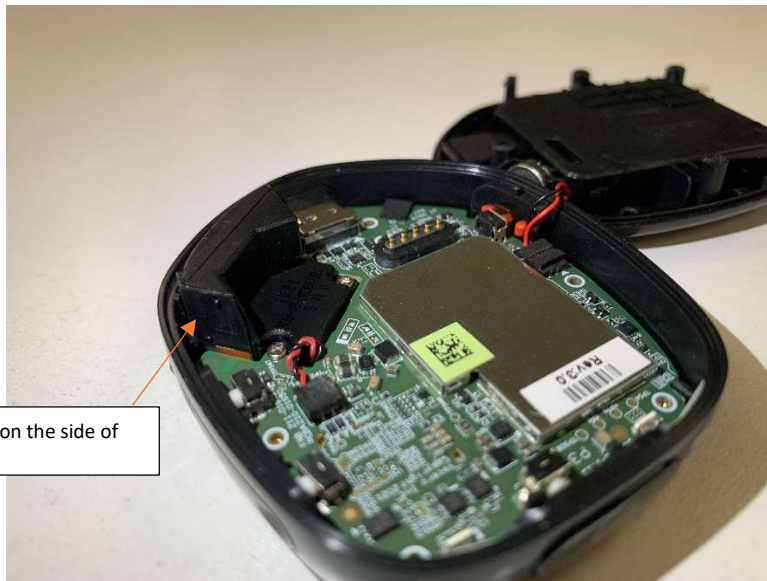

Antenna is located on the side of speaker.

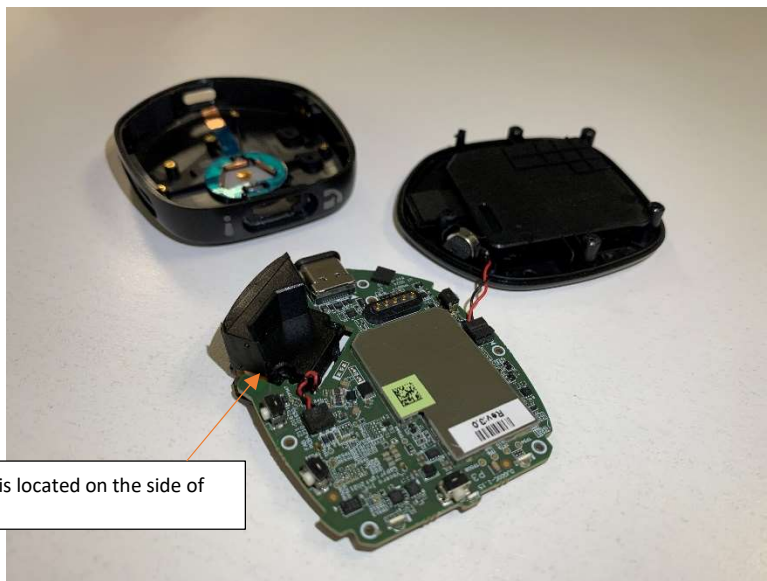

Antenna is located on the side of speaker.