

OSD(On Screen Display) BUTTONS



: Opens and closes the OSD window.



 
 
 
 
 
: Changes audio volume without OSD.
Select a menu on OSD mode.



: Selects a channel on TV MODE without OSD.
Moves to a menu on OSD mode.





MAIN MENU

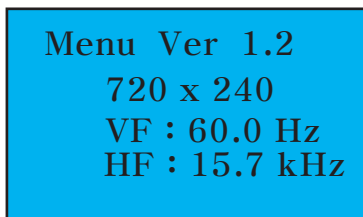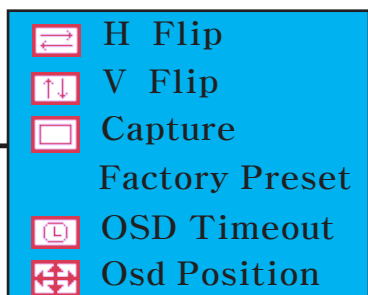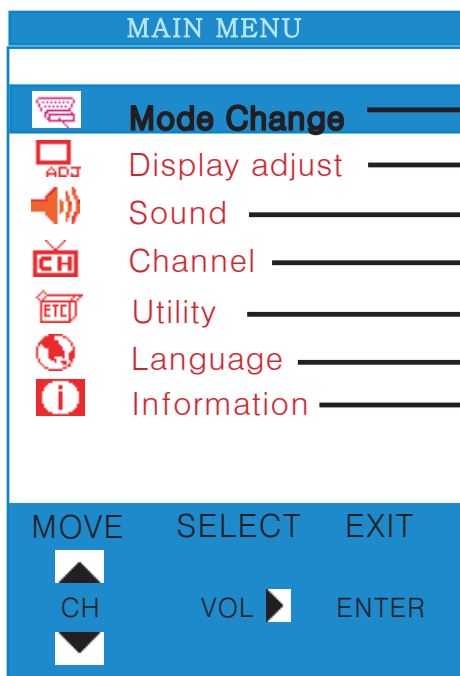

OSD ADJUSTMENT (TV / Video / S-Video MODE)

 
 
Select TV

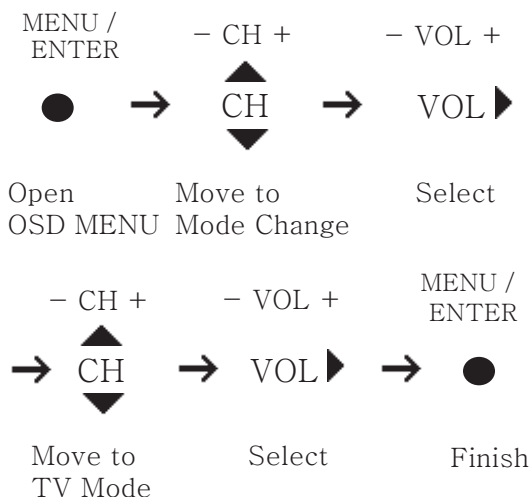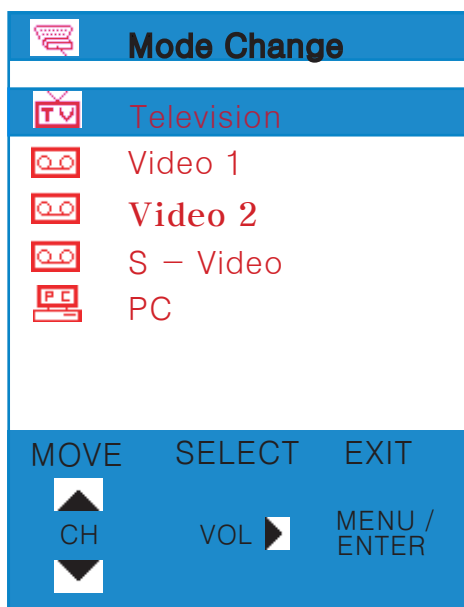



– Move and Select TV or Video or S-Video

Display Adjustment

 
 
– Brightness Adjustment

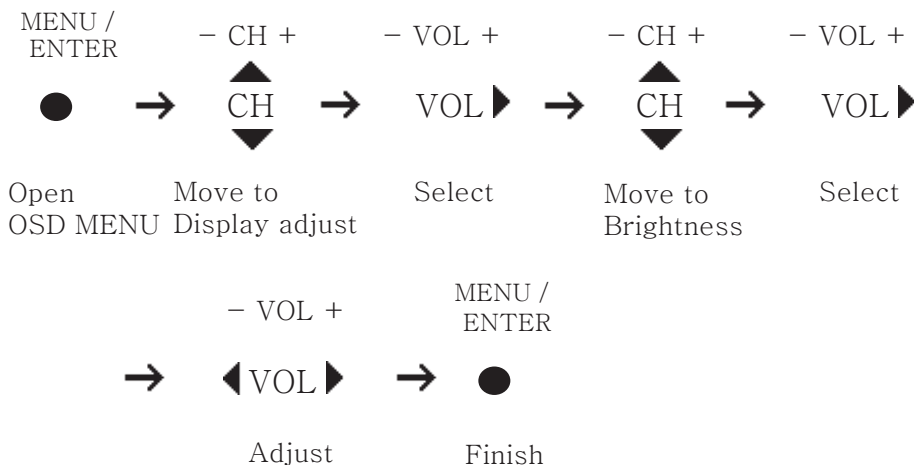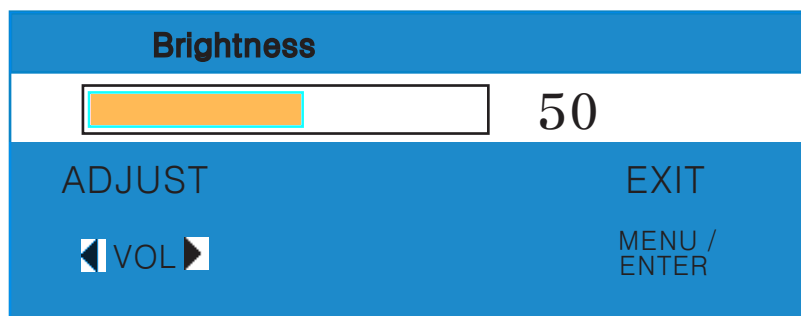



– Contrast Adjustment

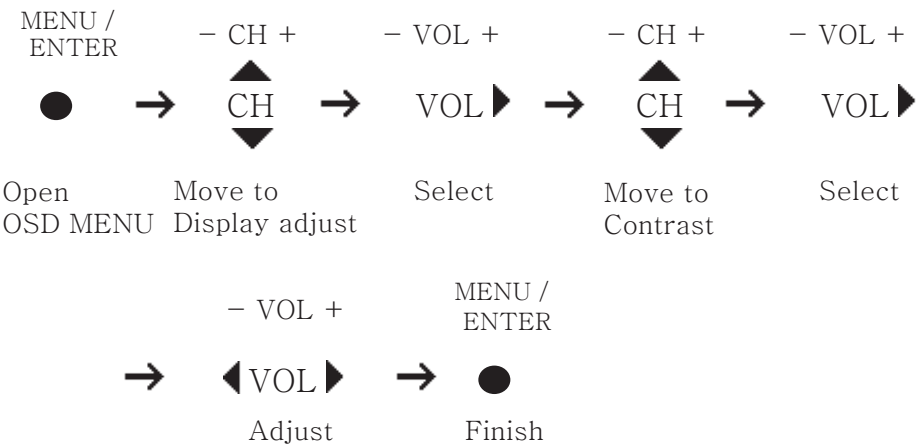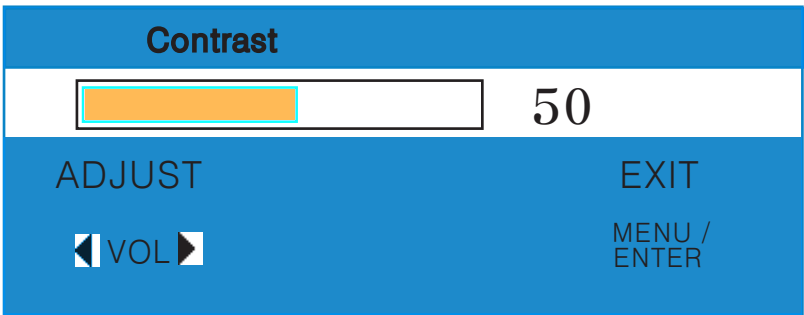  

– Saturation Adjustment

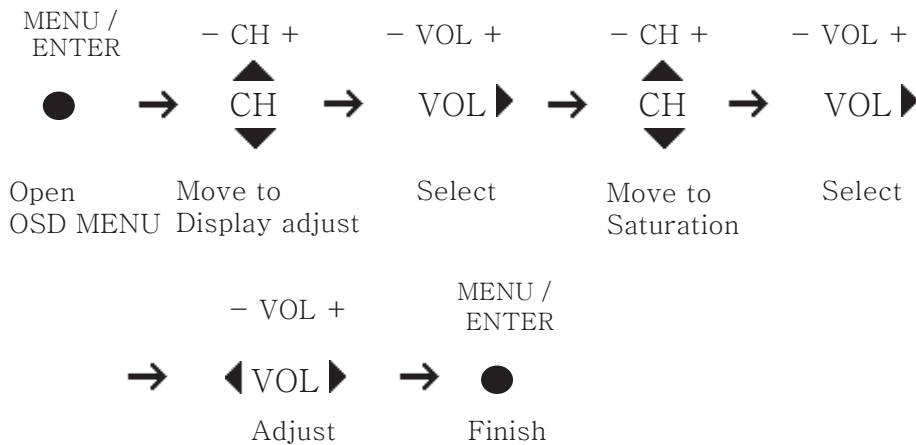 
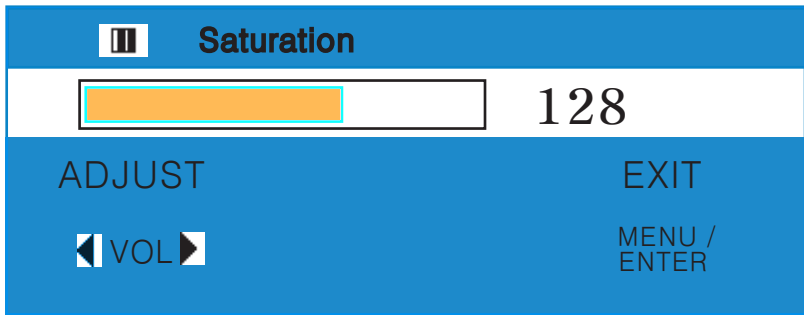 


– Hue Adjustmnet

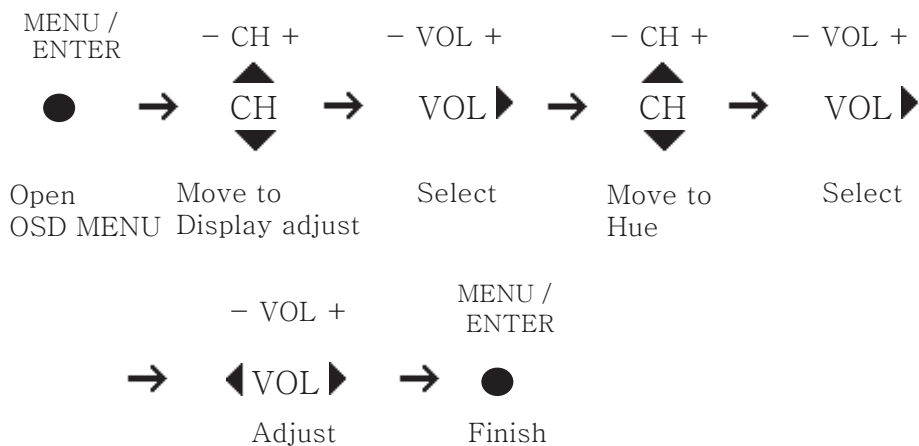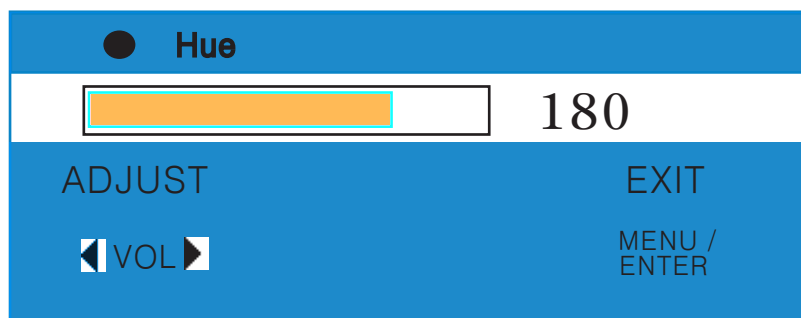  


■ Sound Adjustment

  - Volume Adjustment

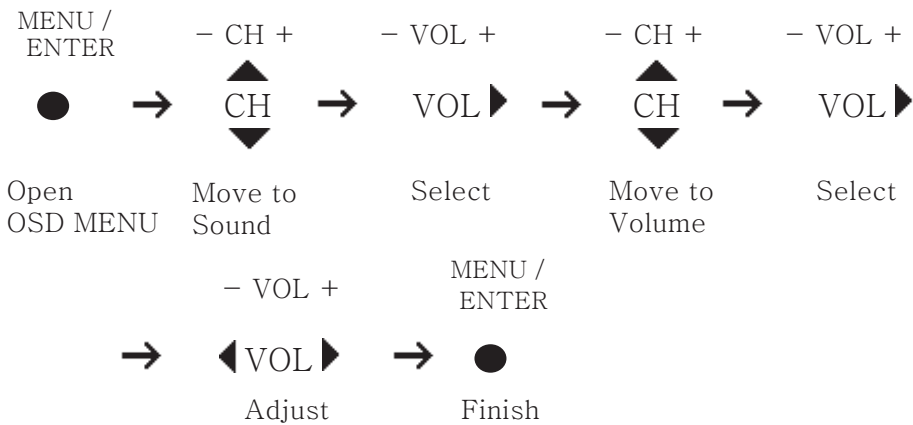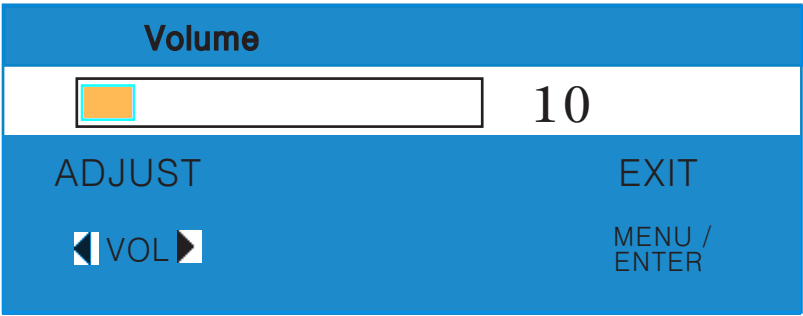


- Mute

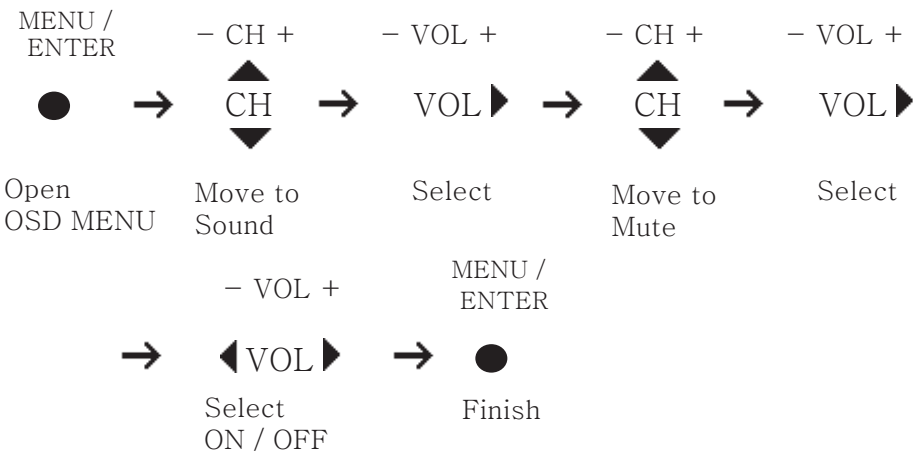 


■ Select Channels

 – Channel Add/Delete

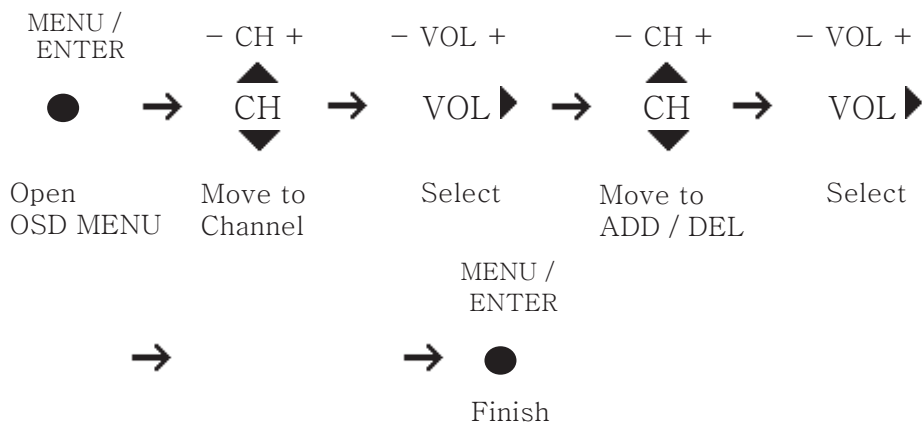

– Auto Search

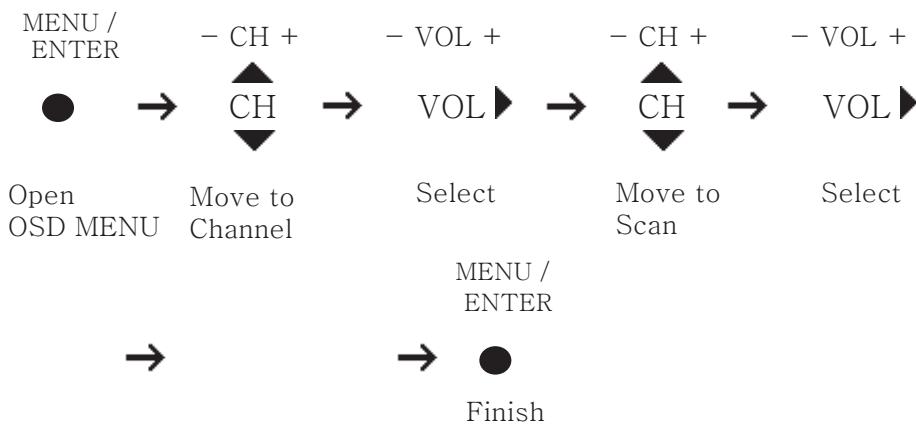 

- TV System

US-Air
US-Cable
Japan-Air
Japan-Cable

MOVE

 
▲
CH
▼

SELECT

VOL ▶

EXIT

MENU /
ENTER

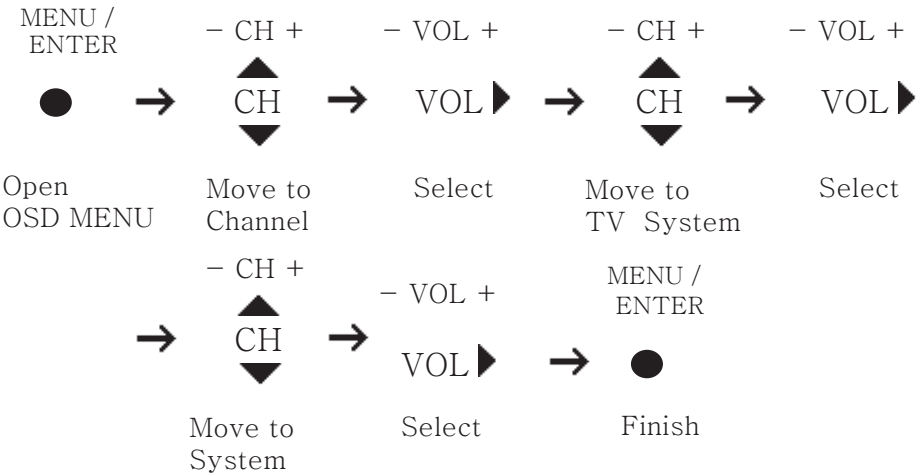


- Fine Adjustment

Fine Adjust

ADJUST


◀ VOL ▶

 EXIT

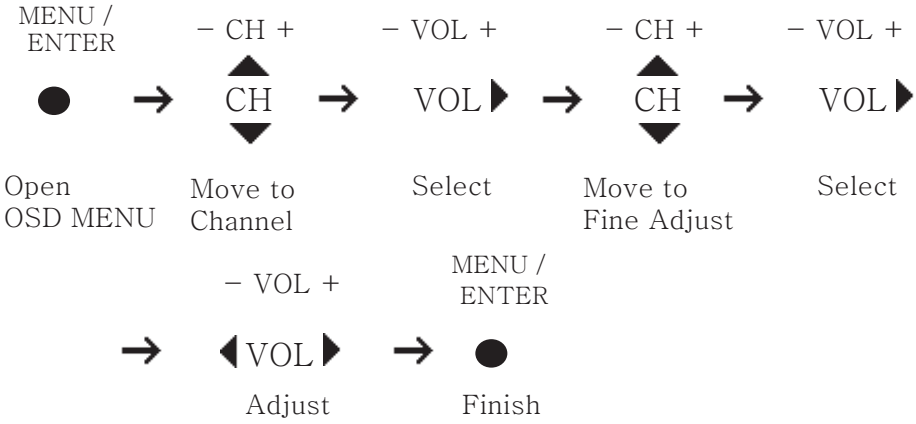


– Capture



Capture		
Yes No		
MOVE	SELECT	EXIT
▲ CH ▼	VOL ▶	MENU / ENTER

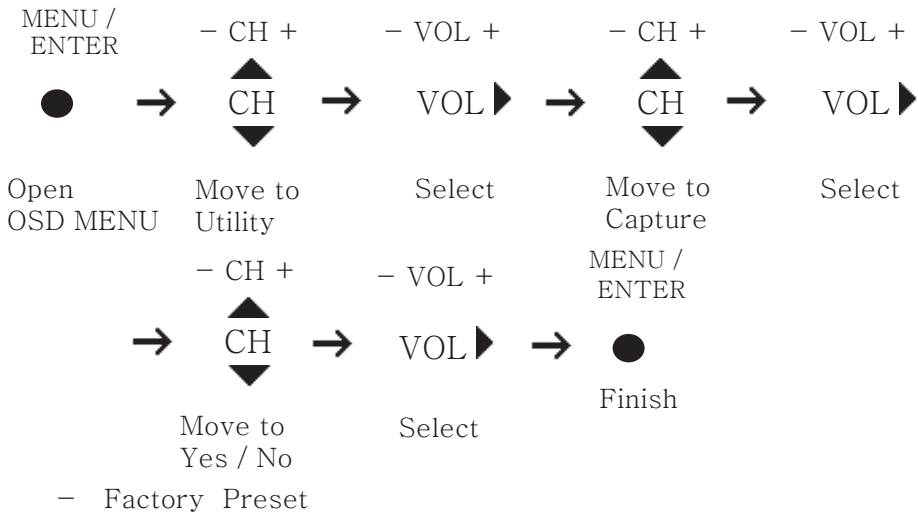 

Factory Preset		
Yes No		
MOVE	SELECT	EXIT
▲ CH ▼	VOL ▶	MENU / ENTER

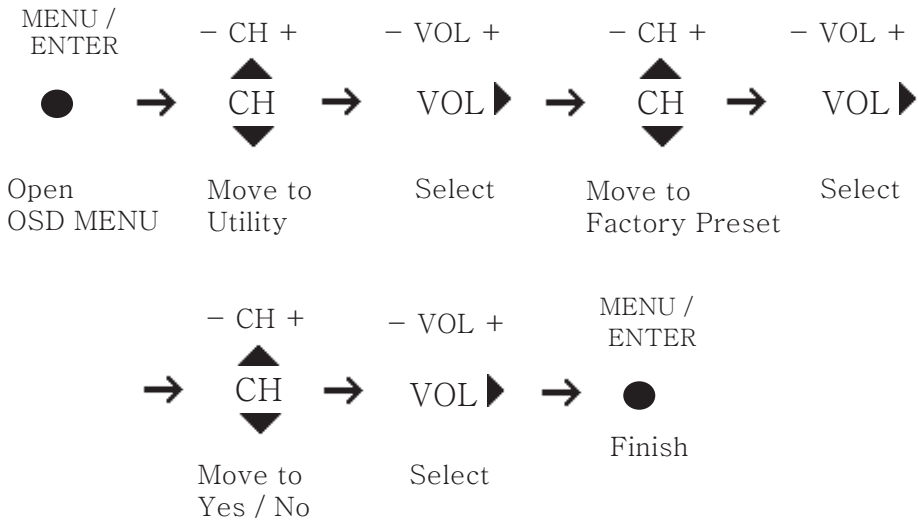 

- OSD Timeout

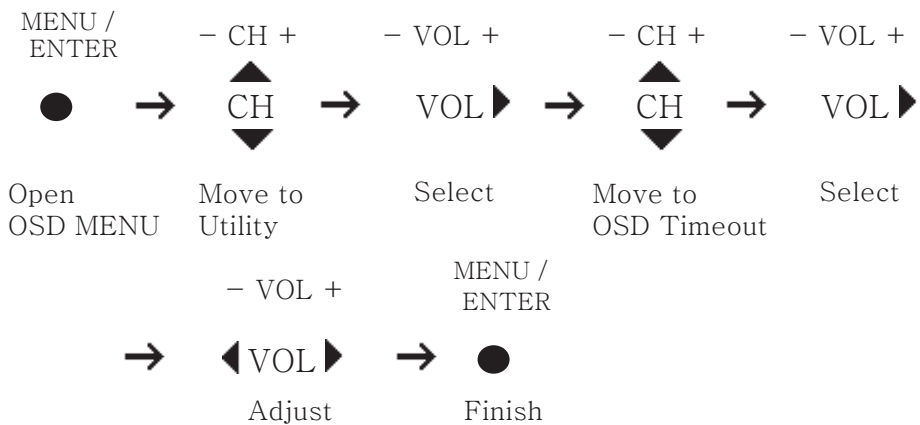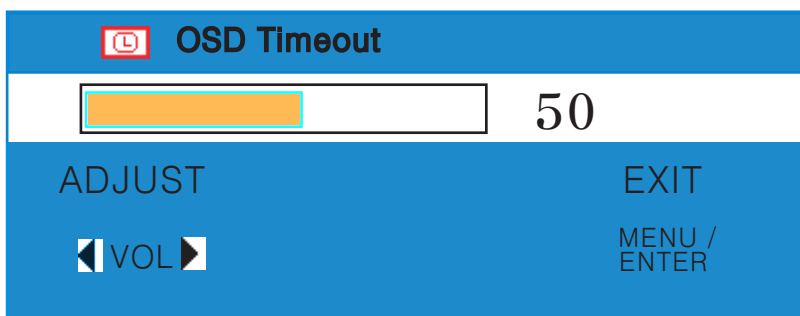  

- ### Horizontal Position Adjustment

Category	Value
Orange	10
White	40
Total	50

EXIT

 
 
MENU /
ENTER

50

EXIT

MENU /
ENTER

– Language Selection

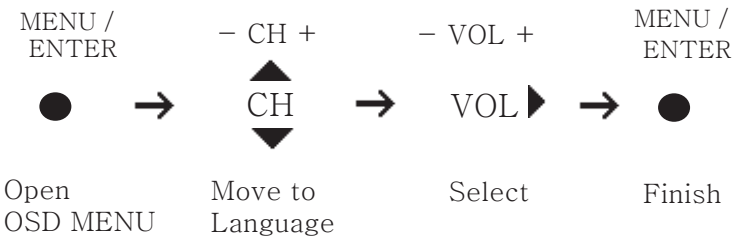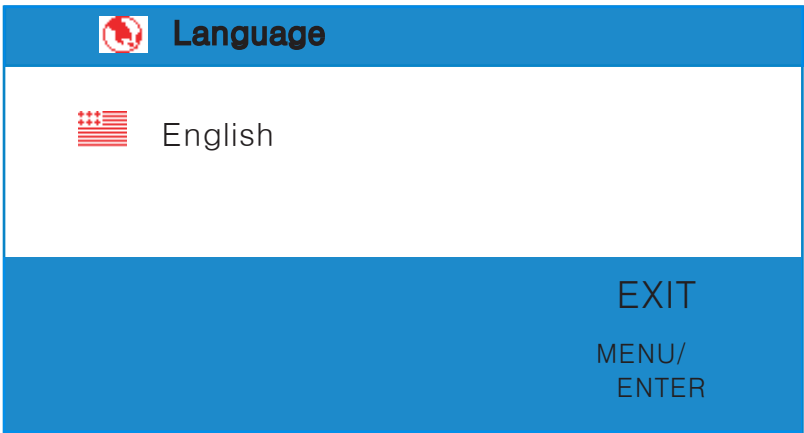

– Information

