

OSD(On Screen Display) BUTTONS



: Opens and closes the OSD window.



: Changes audio volume without OSD.



Selects a menu on OSD mode.

 


: Selects a channel on TV mode without OSD.




Moves to a menu on OSD mode.

MAIN MENU

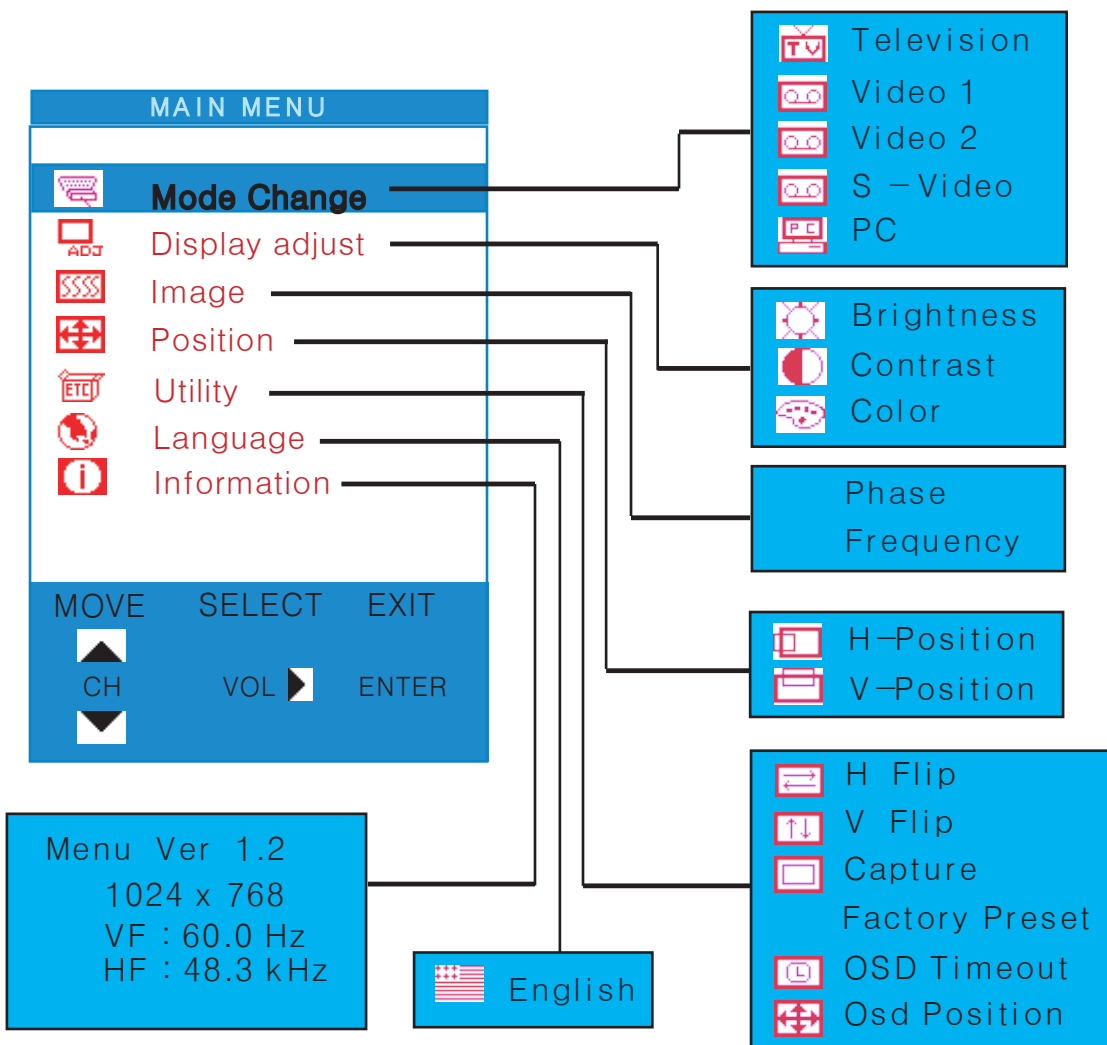



OSD ADJUSTMENT (PC MODE)

 Select PC Monitor


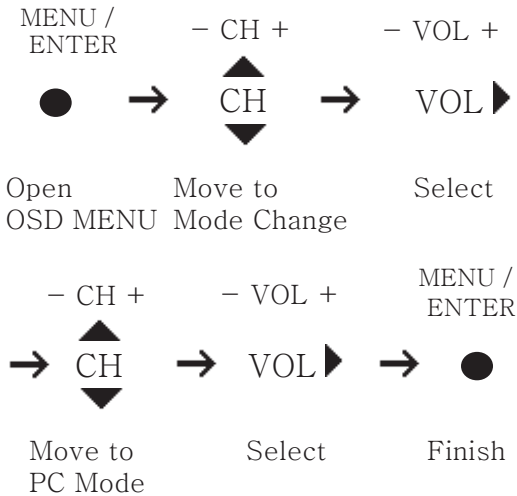


Display Adjustment

 
 
- Brightness Adjustment

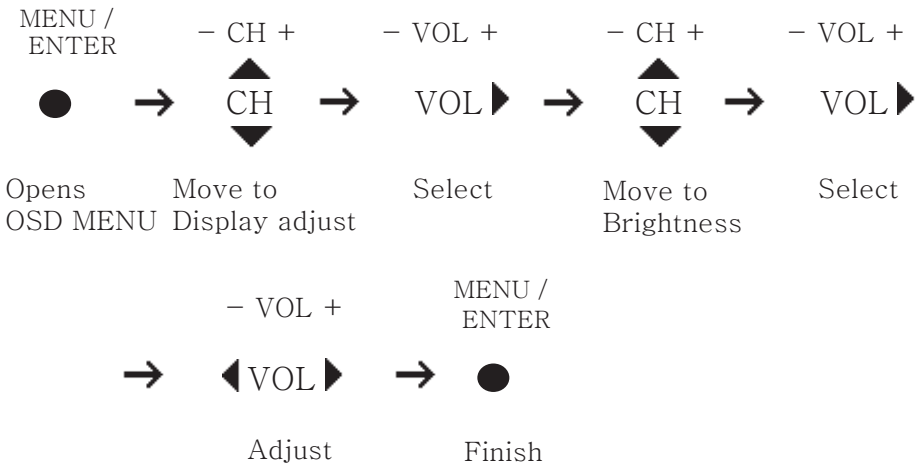
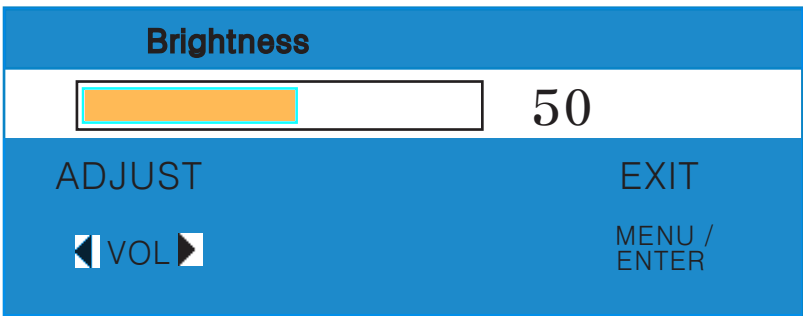


– Contrast Adjustment

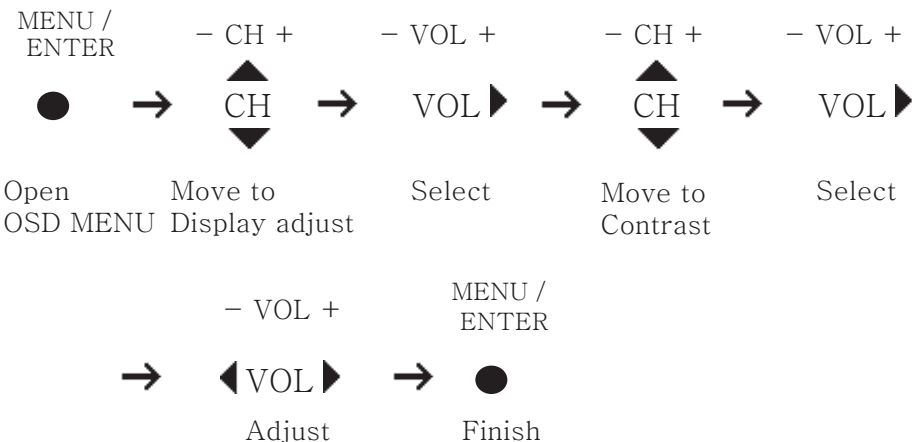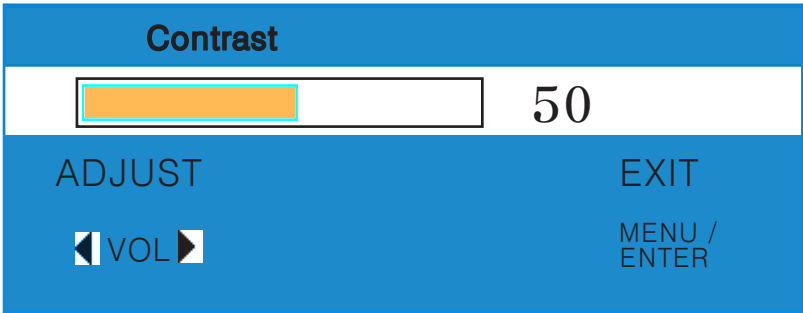  

– Color Adjustment

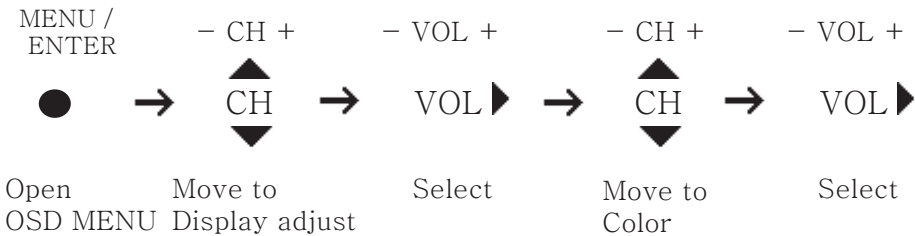 
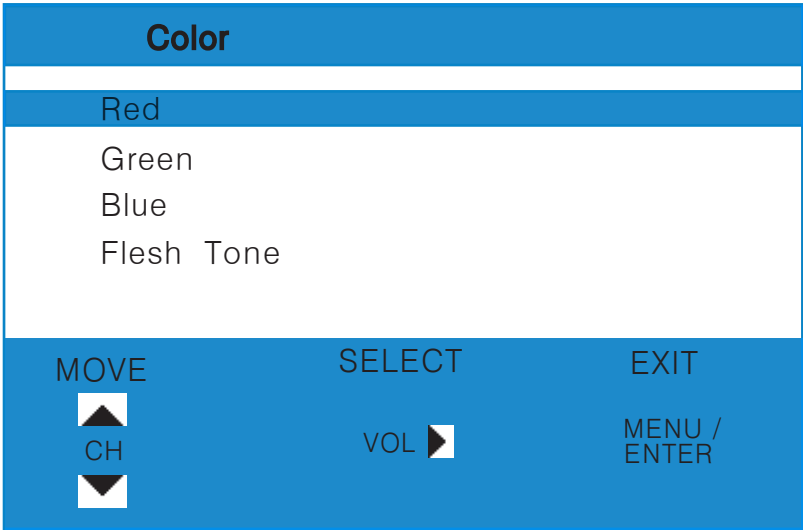 


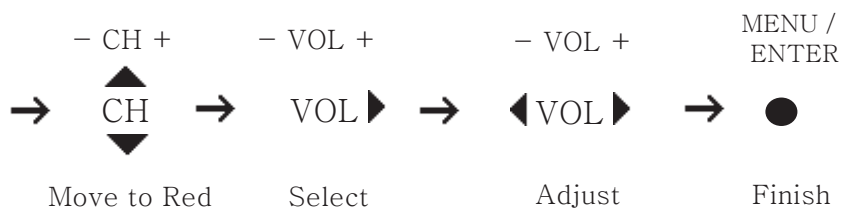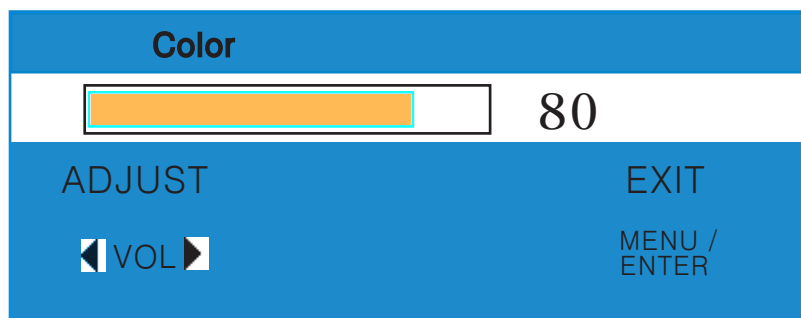  



■ Same way for Green, Blue, Flesh Tone adjustment

■ Screen Image Adjustment

  - Phase (Noise) Adjustment

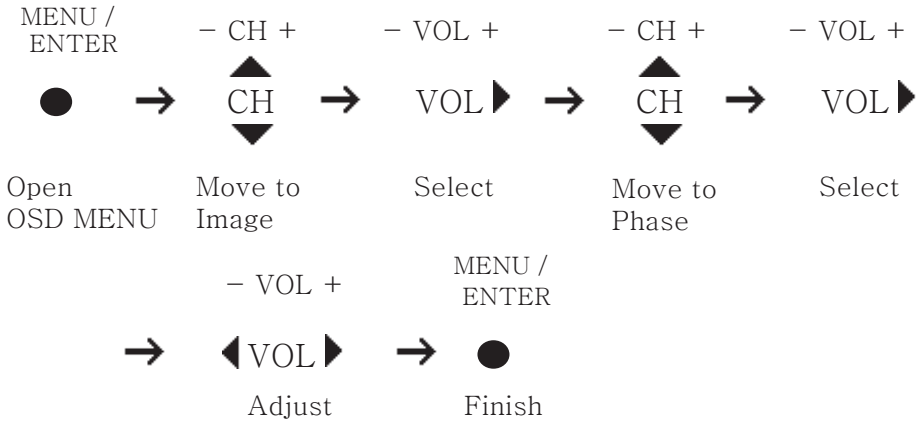
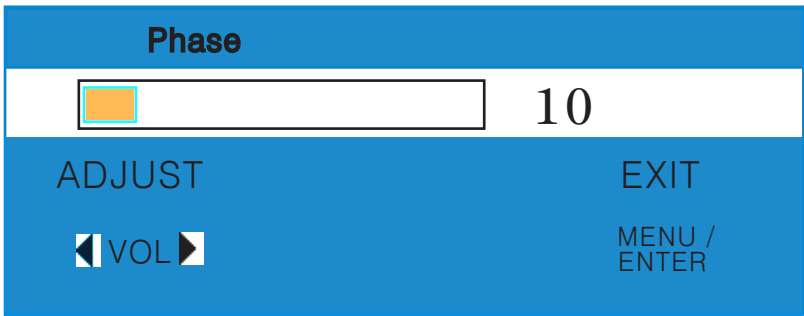


- Frequency Adjustment

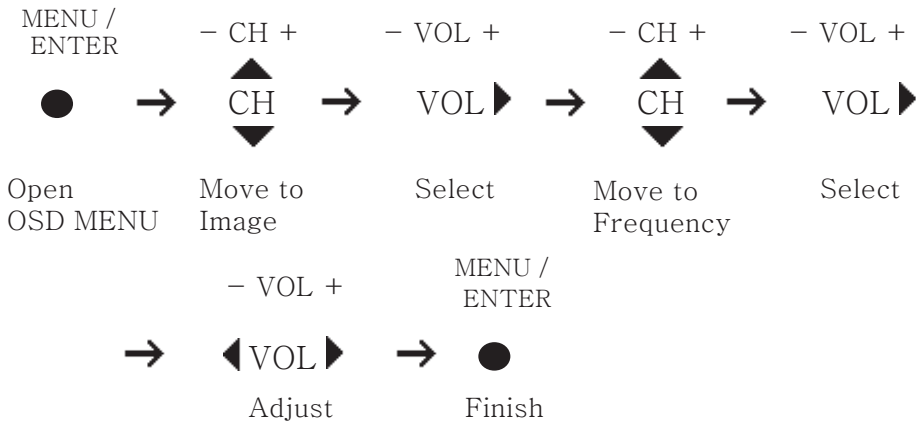 
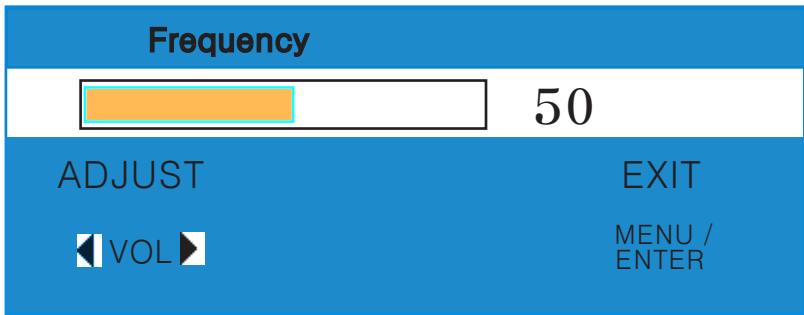 


■ Screen Position Adjustment

  – Horizontal Position

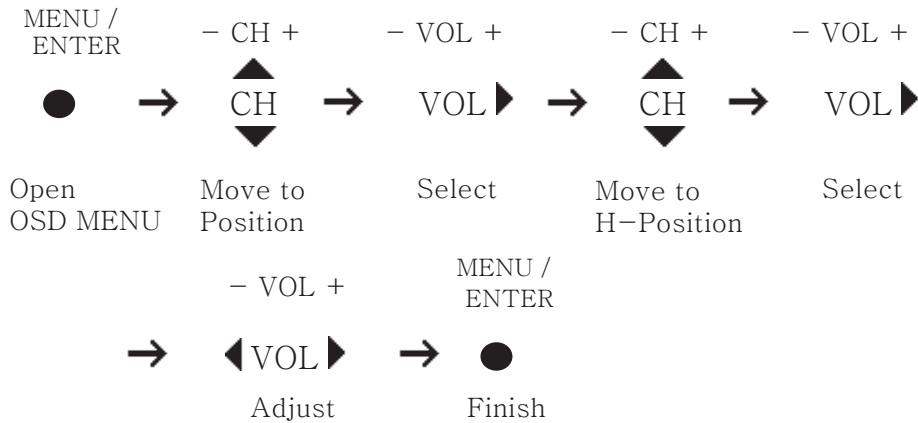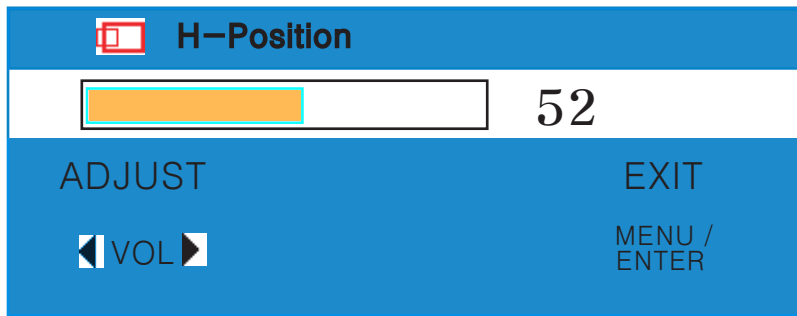



– Vertical Position Adjustment

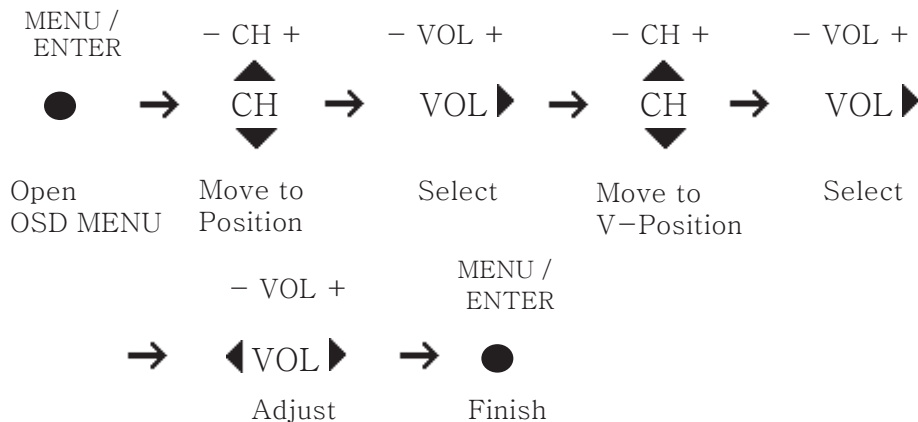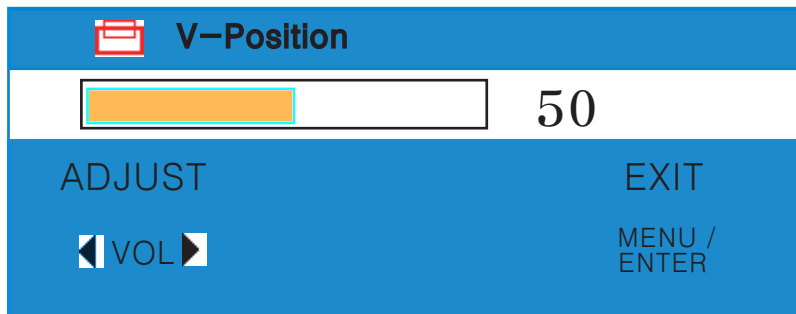  





Utility

  - H Flip

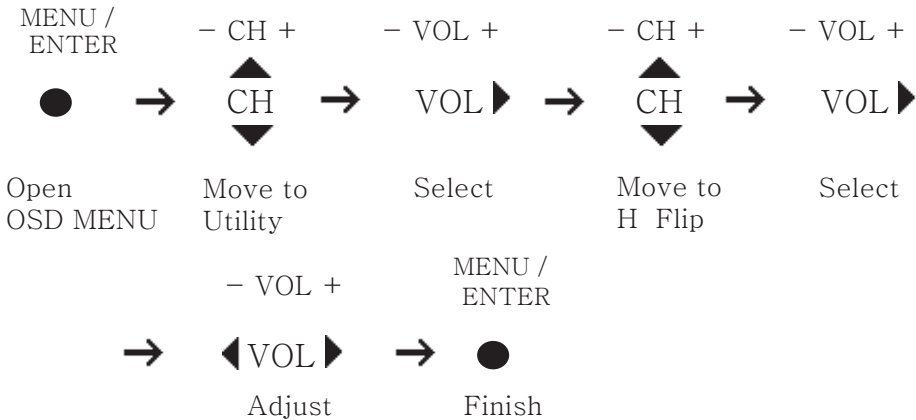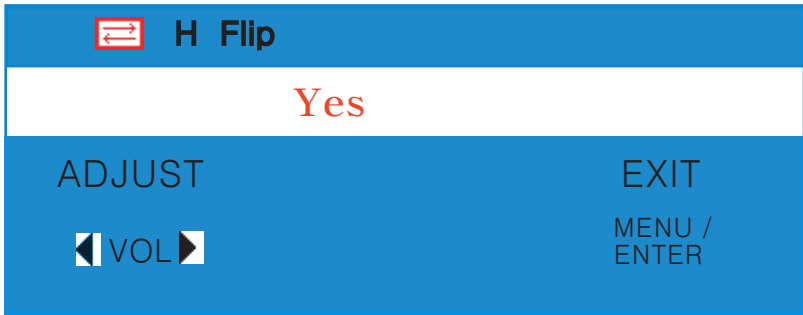

- V Flip

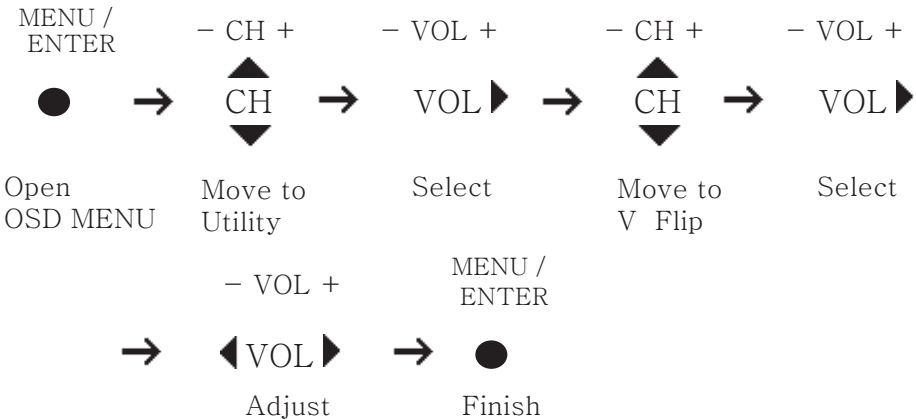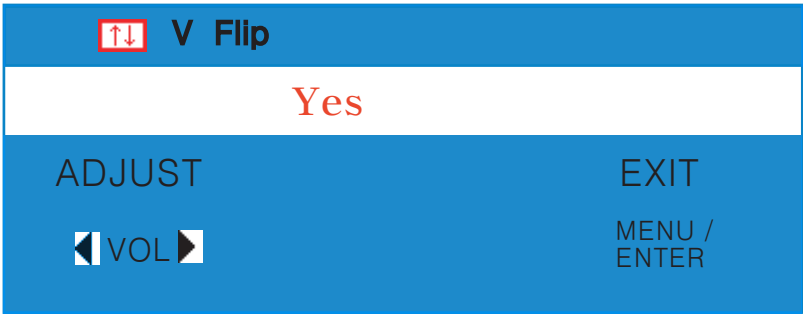  

– Capture



Capture

 
Yes

No

MOVE
▲
CH
▼

SELECT
VOL ▶

EXIT
MENU /
ENTER

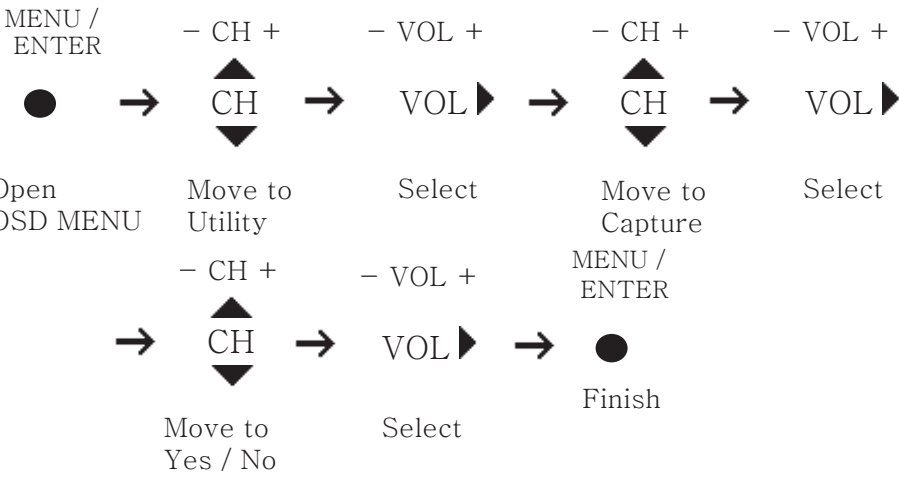

– Factory Preset



Factory Preset

 
Yes

No



MOVE
▲
CH
▼

SELECT
VOL ▶



EXIT
MENU /
ENTER

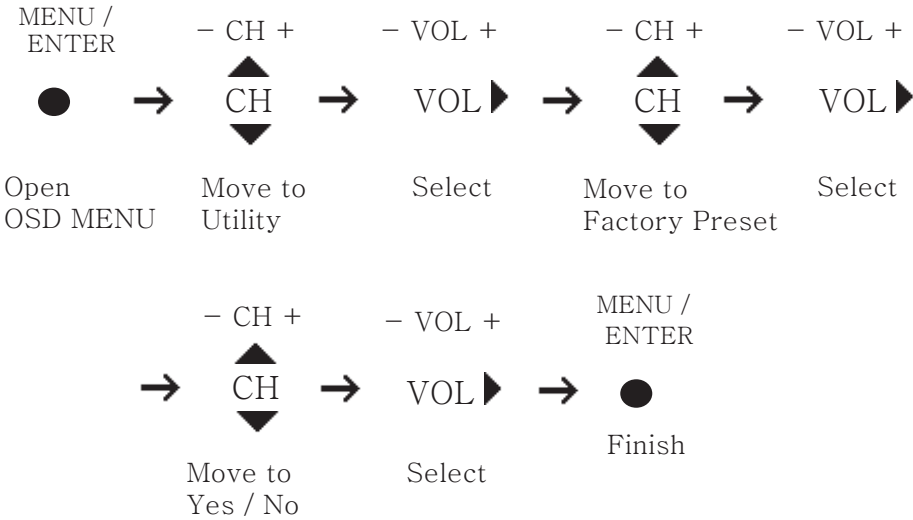



– OSD Timeout

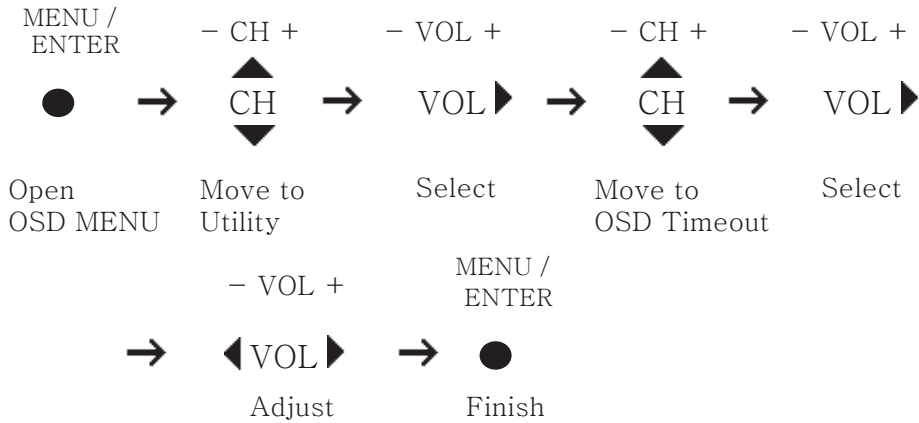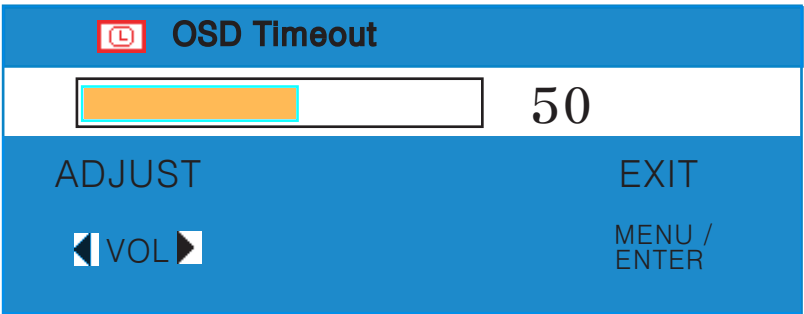  

 
 
- OSD Position Adjustment
- Horizontal Position Adjustment

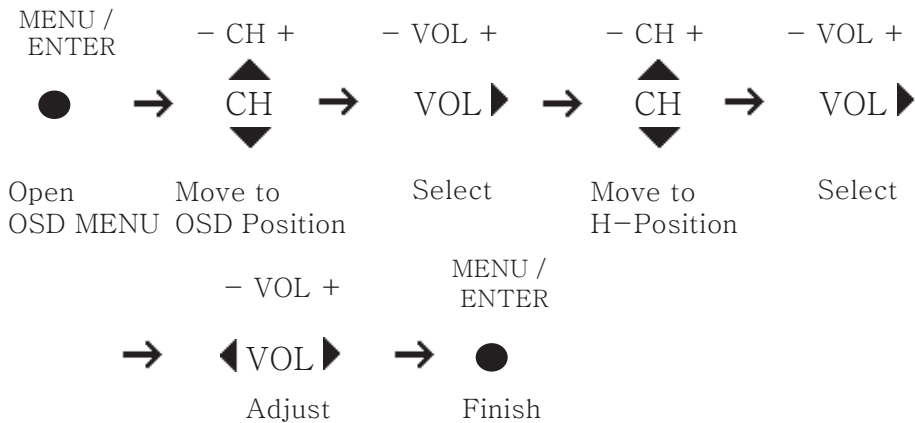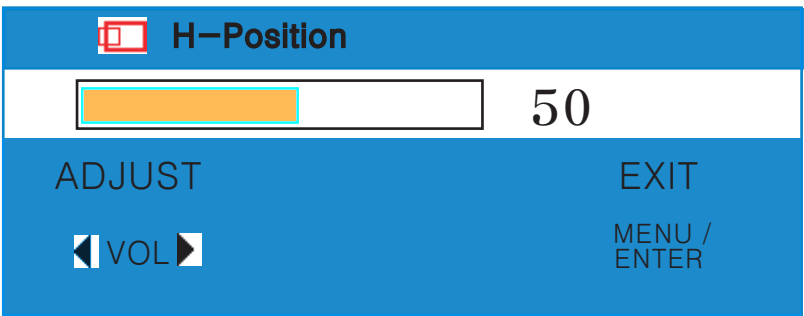

Vertical Position Adjustment

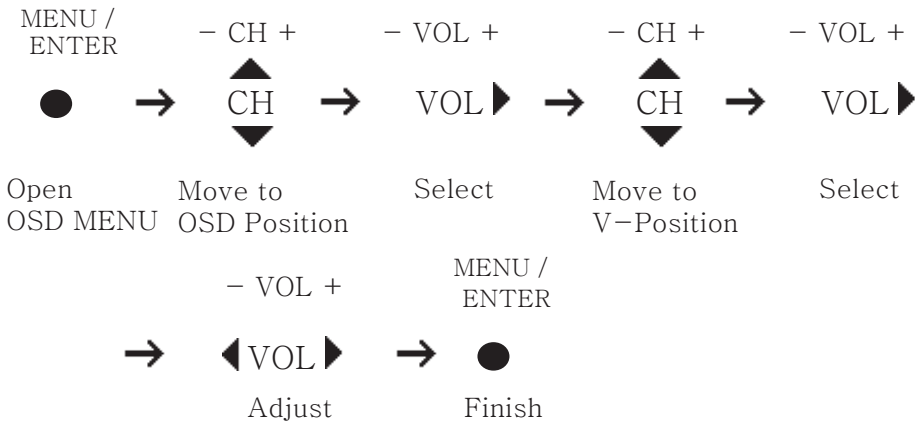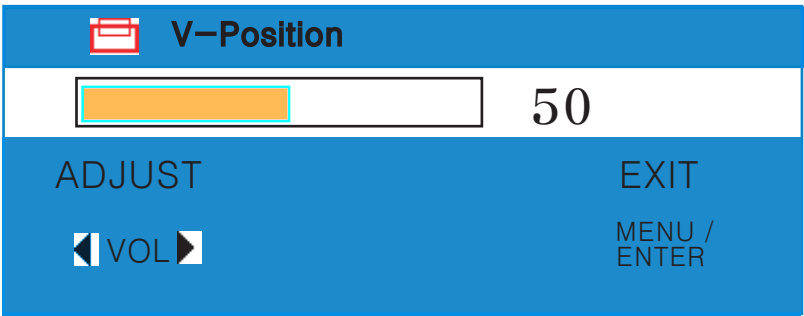  

– Language Selection

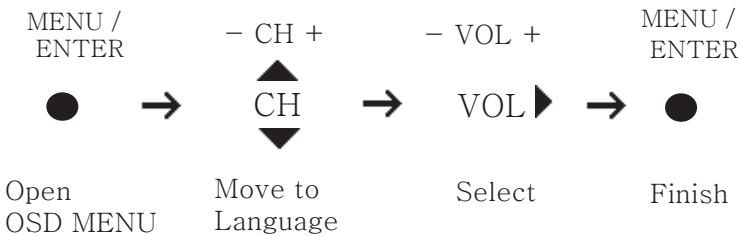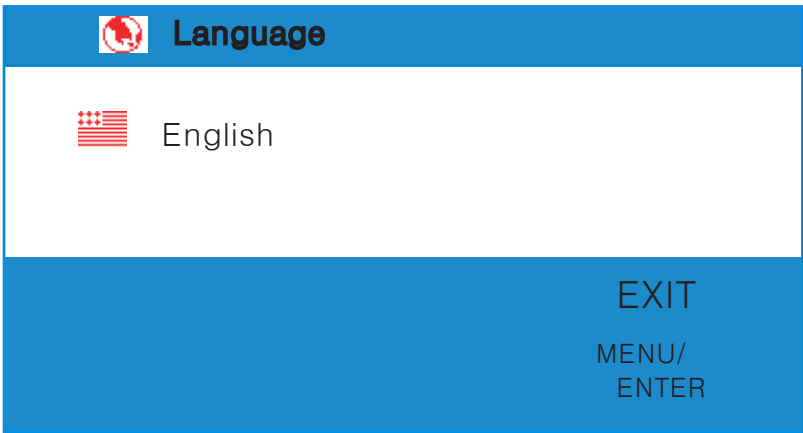  

– Information

