 
 


TURBO TUNERS™


WITH NEON GLOW SPINNING RIMS

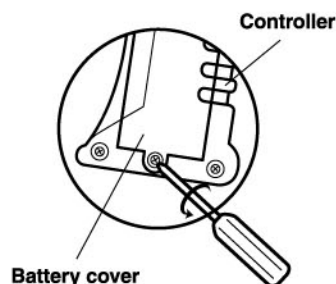


- 1) To remove the controller battery lid, use screwdriver to turn the screw in counter-clockwise.

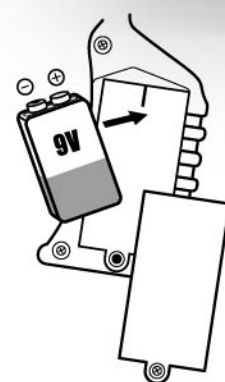

- 2) Install 1x9V size alkaline battery with polarity as shown inside battery compartment. Before operating the controller, make sure the antenna is fully extended.

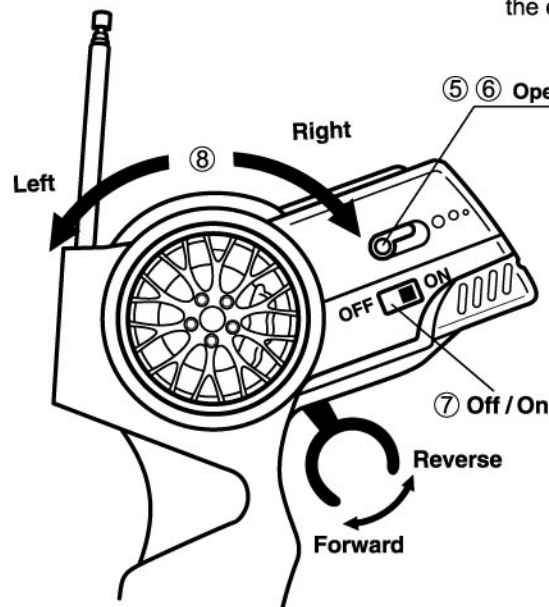



- 5) The controller is full function. Switch on the controller from off to on and the indicating light will come on.
- 6) When the indicator light becomes low, it is time to replace batteries.
- 7) To make the car go, switch on the on/off button, push the trigger forward or reverse.
- 8) The car will turn left and right when the left and right wheel is turned. The car will only turn left and right when it is moving in forward or reverse.

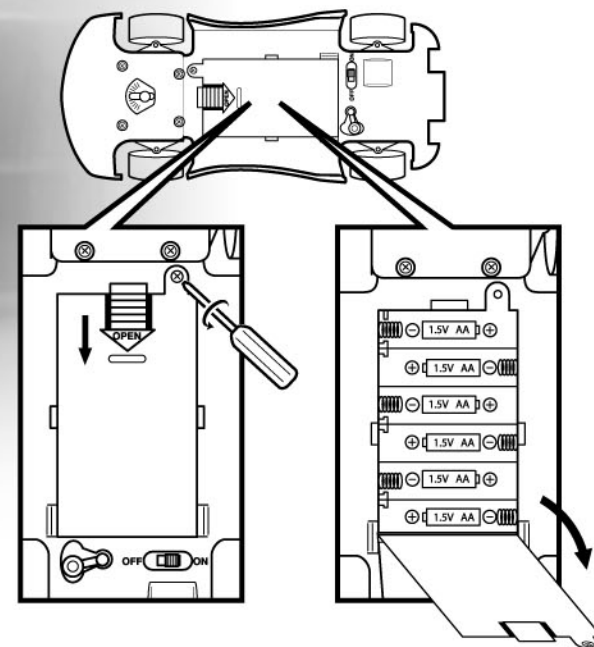

- 3) To open the car battery lid, use screwdriver to turn the screw in counter-clockwise.

- 4) Install 6xAA size alkaline battery with polarity as shown inside battery compartment.

- 9) The head light will come on when the car is moving forward. The rear light will come on when the car is moving in the reverse direction.

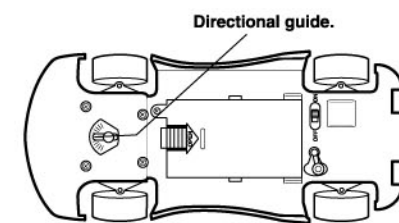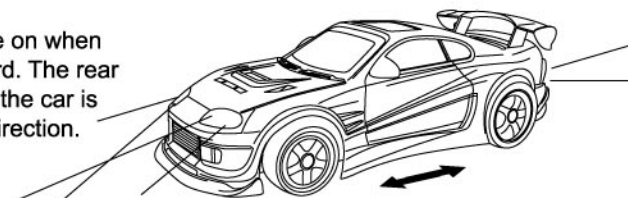

- 10) Occasionally the car will sway left or right while moving in forward or reverse direction. To correct this, adjust the direction guide on the bottom of car as shown in the illustration on the right. This may need to be done a few times while operating the car. For best results operate on a smooth dry surface. Radio waves control this toy and can easily be interrupted. Avoid using near phones or electrical lines. The manufacturer is not responsible for radio or TV interference caused by unauthorized modification of this equipment. Such modification could void the users authority to operate the equipment.

WARNING:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Old batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.