

• Charging Bluetooth speaker

1. Plug micro USB tip into the micro USB port on the back of the Bluetooth speaker
2. Plug USB tip into USB compatible wall charger or USB port of PC
3. During charging, the red indicator turns on and it will die out when the speaker is fully charged. Please disconnect the USB cable.
4. Fully charged time: around 1 hour
5. Play time: 2-3 hours



 
• Product's Specifications

1. Speaker: D36mm (120HZ-20KHZ)
2. Lithium Polymer battery: 150mAh(DC 5V)
3. SNR: $\geq 90\pm 2$ dB
4. Material: aluminium alloy



Bluetooth mini speaker

USER MANUAL

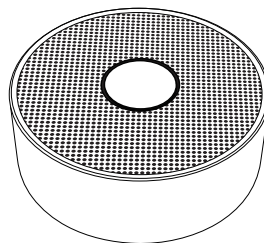

A



 
 
Line in cable
LINE IN/
Bluetooth/OFF
USB

• What is in box:

- Bluetooth speaker
- USB charging cable
- Manual

• Line-in function:

Switch to the Line in mode, the blue indicator will turn on. Connect Bluetooth speaker and the music device with the line in cable.

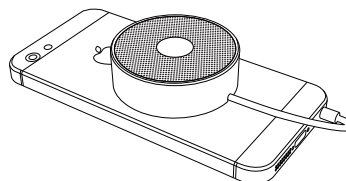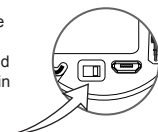

• Bluetooth Instruction (Note: The device is B33, pair code: 0000)

1. Making switch to the middle, make it discoverable and ready for pairing. The status indicator blinks blue.
2. On your Bluetooth device, turn on Bluetooth and scan for devices in the Bluetooth menu.
3. Select "B33" when it appears on device list. (If a pass code is requested, enter 0000). The blue status indicator stops blinking once pairing is established and is ready for use.

B

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: To satisfy FCC RF exposure requirements for this device, a separation distance of 5 mm or more should be maintained between the antenna of this device and persons during operation.

To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.