

6. Using Message Functions

6-1. VMS (Voice Mail Service)- Voice Message

When Voice Messages arrive, the MESSAGE LED turns on and you can hear the MESSAGE tone.

- Pick up the handset.
- Press [MESSAGE].
- Press [MENU].
- Select the messages by using [UP]/[DOWN].
- Press [MENU].
- If you want to erase the voice message, press [MENU] and then press [MENU].
- If you want to hear the voice message, refer to the service provider for the dialing number to voice mail server.

MESSAGES
> 0 Voice
0 Page/MSG
[ok]



No VoiceMail
Information
Received.
[quit]

Voice message arrived

VOICE MAIL
7/23 12: 59a
1 New Msg

- Press [MESSAGE]

MESSAGES
> 1 Voice
0 Page/Msg
[ok]

- Press [MENU].
- Press [UP]/[DOWN] or [*]/[#] to scroll message.

7/23 12:59a
VOICE Mail
018-810-6601

1 New
Message
[erase | quit]

- Press [MENU] to erase.
- Press [RECALL] to quit.


ERASE
This
message?
[Yes] [no]

- Press [MENU] to erase or [RECALL] to remain the message.


6-2. Text Message Service

When Text Messages arrive, the MESSAGE LED turns on and you can hear the MESSAGE tone.

- Press [MESSAGE].
- Press [DOWN].
- Press [MENU].
- Select the messages by using [UP]/[DOWN].
- Press [MENU].

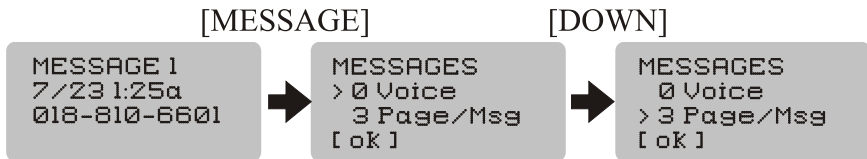

Message arrived

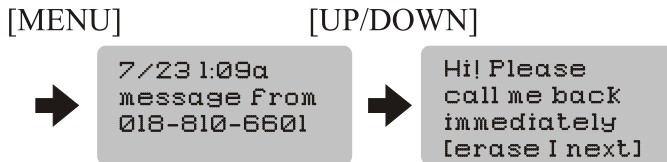

[*]/[#] to scroll

- Press [MENU] to erase this message or press [RECALL] to see the next message.

```

7/23 1:25a
MESSAGE From
018-810-6601
  
```

- Press [MENU] to erase or [RECALL] to remain.
- Whether, erasing the current message or not, the next message will be displayed.
- * After all new messages are displayed, message LED turns off.

6-3. Stored Message


- Press [MESSAGE].
- Press [DOWN].
- Press [MENU], then the beginning of the messages are listed.
- Scroll by [UP]/[DOWN] to choose the the stored message.
- Press [MENU] to erase or press [RECALL] to see the message.



View and Send Stored MO Short Messages

You can view and send the stored MO(Mobile-Originated) short messages.

- Press [MESSAGE].
- Press [DOWN] twice.
- Press [MENU], then the beginning of the messages are listed.
- Scroll by [UP]/[DOWN] to select one of the messages.
- Press [MENU] to erase or press [RECALL] to see the selected message.
- If you press [RECALL], you can see the whole message body.
- Press [MENU] to send the selected message.
- Press [MENU].
- Input the phone number you want to call.
- Press [MENU].
- Press [MENU].
- Input the phone number you want to be called back.
- Press [MENU].

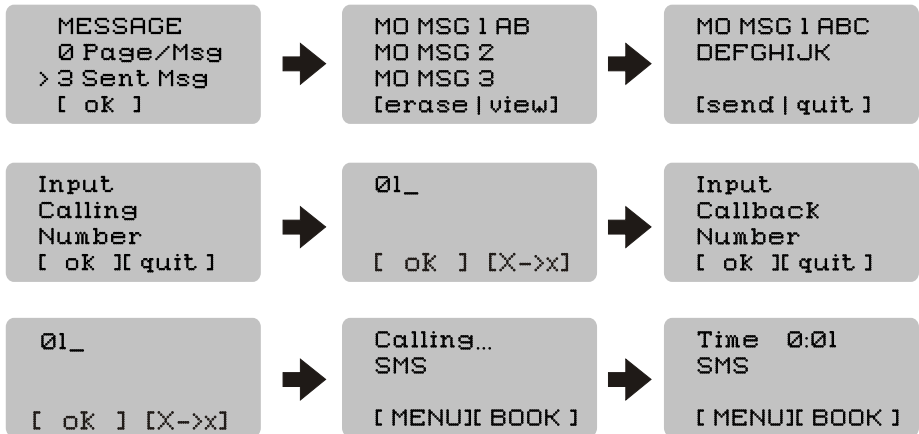

6-4. Message Receiving Time

- The received time is displayed at the top of the message.

```

7/23 1:25a
MESSAGE From
018-810-6601
  
```


6-5. Deleting Message

- You can erase the displayed message by pressing [MENU], and then pressing [MENU].

7. Data Services

- Connect your personal computer to the data port of terminal by a one-to-one serial cable.(9 pins)
- Refer to the service provider for the detailed settings of your personal computer.

III. Menu Mode

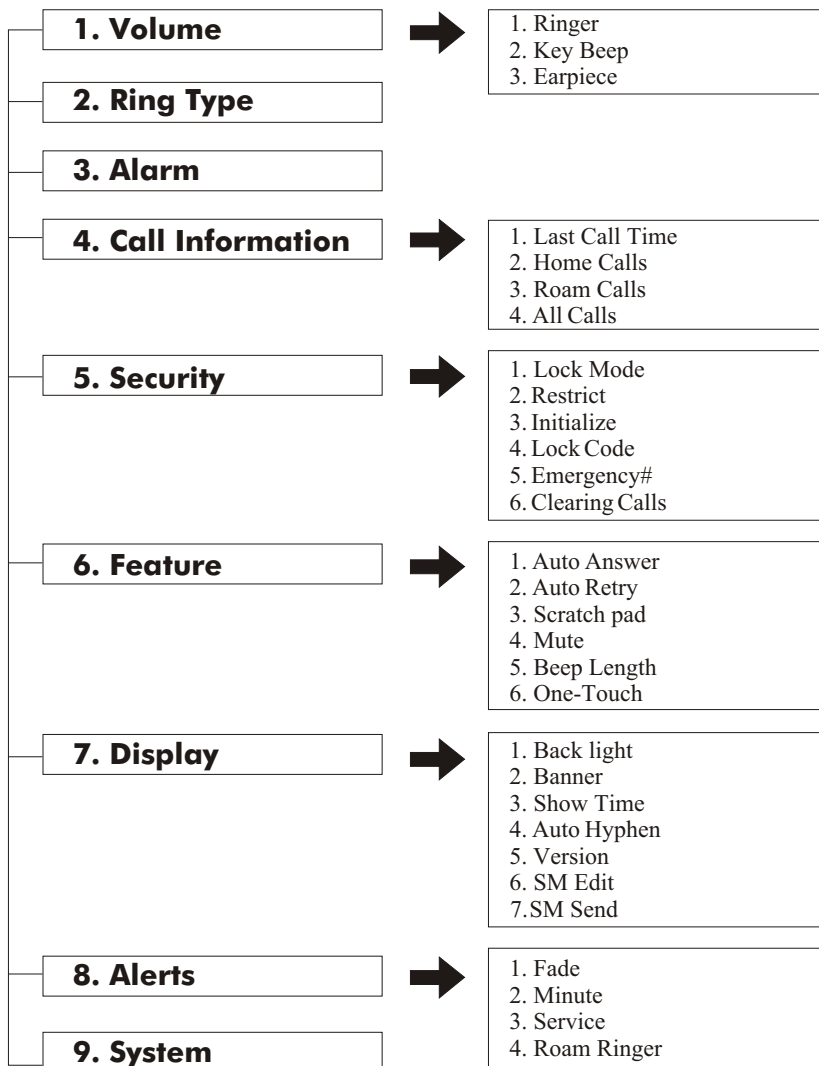


1. Volume

1-1. Ringer [11]

To adjust ringer volume,

- Press [MENU].
- Press [1].
- Press [1].
- Adjust the Volume by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].


* In MENU mode [*] or [#] keys operate the same as the [UP]/[DOWN].

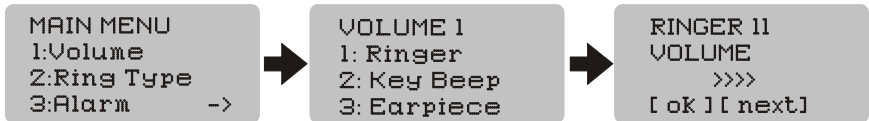

1-2. Key Beep [12]

To adjust key beep volume,

- Press [MENU].
- Press [1].
- Press [2].
- Adjust the Volume by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

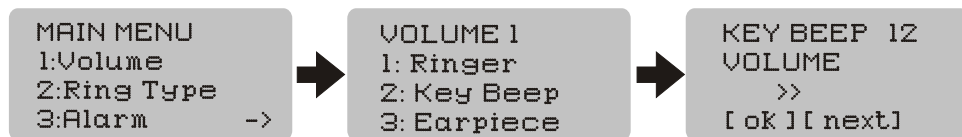

1-3. Earpiece [13]

To adjust key beep volume,

- Press [MENU].
- Press [1].
- Press [3].
- Adjust the Volume by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

