 



b. Everyday Alarm

- Press [MENU].
- Input hour by pressing 2 digits.
- Input min by pressing 2 digits.
- Press [MENU].

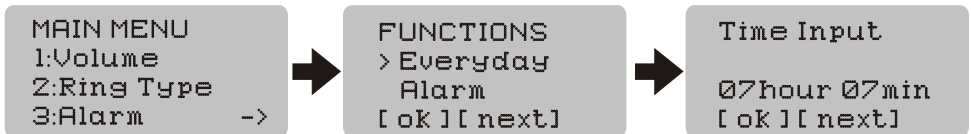

c. Onetime Alarm

 - Press [MENU].
- Input Date and Time by pressing 2 digits.
- Press [MENU].

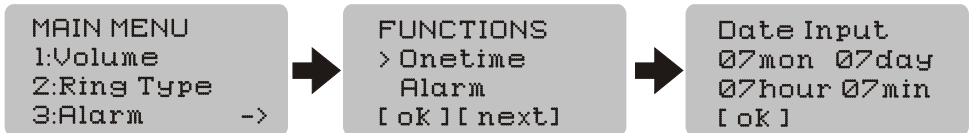


4. Call Information

4-1. Last Call [41]

If you want to know last call time,


- Press [MENU].
- Press [4].
- Press [1].
- Press [MENU].

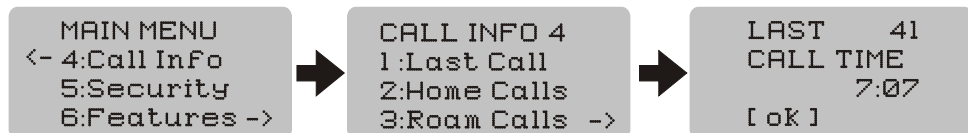

4-2. Home Calls [42]

If you want to know both the total call time of home call and the number of calls,


- Press [MENU].
- Press [4].
- Press [2].
- Press [MENU] or press [RECALL] to reset time.

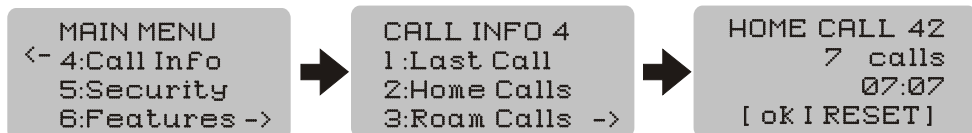

4-3. Roam Calls [43]

If you want to know both the total roam time and the number of calls.


- Press [MENU].
- Press [4].
- Press [3].
- Press [MENU] or press [RECALL] to reset time.

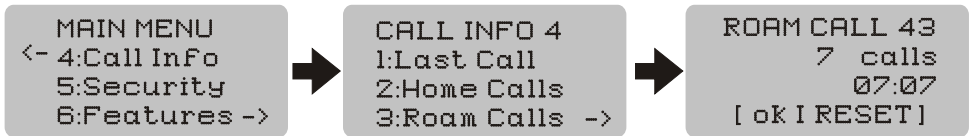

4-4. ALL Calls [44]

If you want to know your total call time,

- Press [MENU].
- Press [4].
- Press [4].
- Press [MENU].

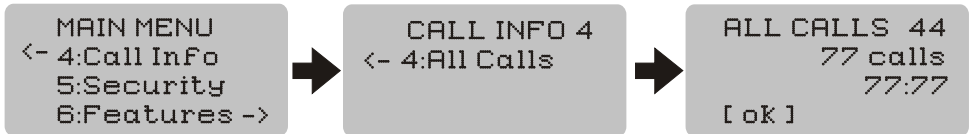

5. Security

To enter into the security mode,

- Press [MENU].
- Press [5].
- Enter Lock Code.

* The default value of lock code is the last 4 digits of phone number.
If the phone number is 777-7777, the lock code will be "7777".



5-1. Lock Mode [51]

To lock the phone,

- Press [MENU].
- Press [5].
- Enter Lock Code.
- Press [1].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].



* If you want to unlock the phone in lock mode,

- Press [MENU].
- Enter lock Code.

* never: Always unlock mode .

* now: Always lock mode until you unlock the phone.

* on power up: Lock mode whenever turn on the phone.