 


5-2. Restrict [52]

If you want to restrict outgoing calls to phone numbers that are stored in memory location 01 to 99 and not allow new entries to be saved to or erased from the phone book.


- Press [MENU].
- Press [5].
- Enter Lock Code.
- Press [2].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].



5-3. Initialize [53]

If you want to erase the setting menu,


- Press [MENU].
- Press [5].
- Enter Lock Code.
- Press [3].
- If you want to initialize, press [Menu].
- Input new code again.
- Press [MENU].

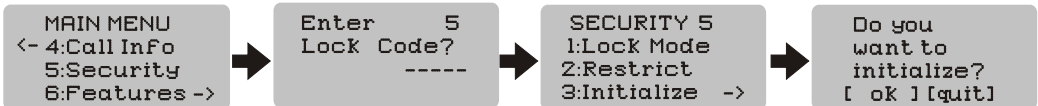

5-4. Lock Code [54]

If you want to change the code, press new lock code,


- Press [MENU].
- Press [5].
- Enter Lock Code.
- Press [4].
- In put new code.
- Press [MENU].

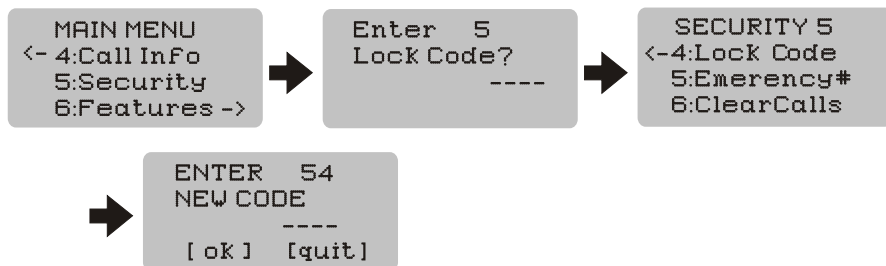

5-5. Emergency# [55]

You can store up to ten numbers to call when you are in emergency condition. In spite of locking or restricting the phone, you can call the stored emergency number and the call is kept until the called party answer.

- Press [Menu].
- Press [5].
- Enter Lock Code.
- Press [5].
- If you want to edit emergency number, press [Menu] and edit a phone number.
- If you finished editing, press [ok] to store the emergency number.
- If you want to edit another emergency number, press [RECALL] and repeat above procedure.
- If you want to finish, press [END].

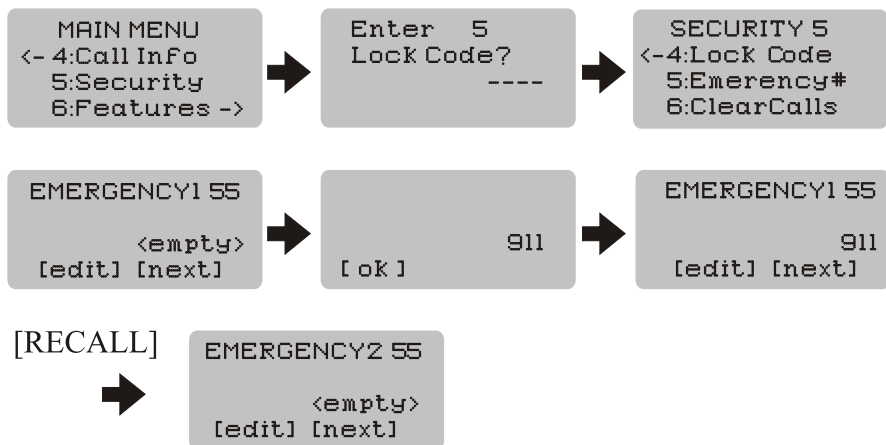


-You can store up to nine numbers.

5-6. Clearing calls [56]

If you want to clear the call list,

- Press [MENU].
- Press [5].
- Enter Lock Code.
- Press [6].
- Press [MENU].

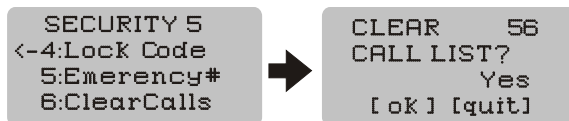


6. Features

6-1. Auto Answer [61]

Use this function to set the phone to automatically answer an incoming call on your setting.

- Press [MENU].
- Press [6].
- Press [1].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* off / 1ring / 3rings / 5rings

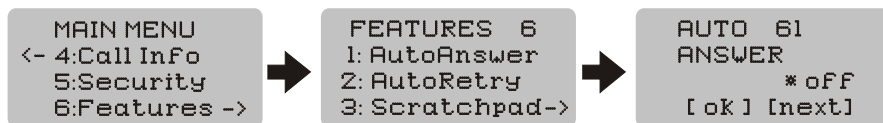


6-2. Auto Retry [62]

Use this function to set the length of time that the phone will wait before automatically redialing a number when the system is busy.

It will redial on your setting.

- Press [MENU].
- Press [6].
- Press [2].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].


* off / 5seconds / 10seconds / 20seconds

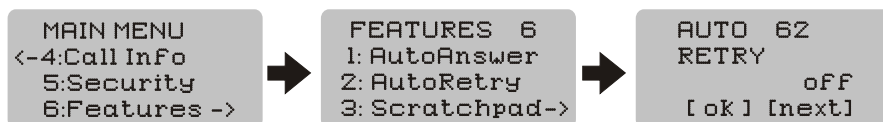

6-3. Scratch pad [63]

Use this function to store phone numbers during a call.
No keypad feedback line is produced when key presses are made.
Scratch pad is available only when in a call. When the scratch pad is activated, the standard in-call display is removed from the display.

- Only be used during a call

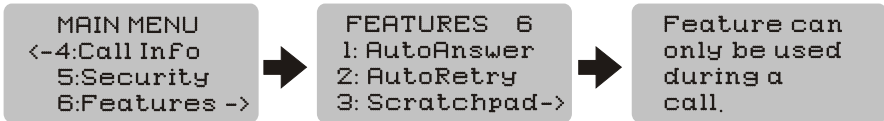

- This function is used for storing phone number during a call.
- During a call, press [MENU], press [6], press[3].

Time 1:03
"02-3497-0100"
[add][quit]

- Press a number you want to store.

018-810-6601
[add][quit]

- Press [MENU] to store phone number to call list or press [RECALL] to quit.

Number
Stored in
Calls List

- After the call, you can find a number stored in call list by pressing [RECALL] twice.