 


6-4. Mute [64]

Use this function to switch the microphone on or off during a call.
This is available during a call.

- Press [MENU].
- Press [6].
- Press [4].
- Only be used during a call.

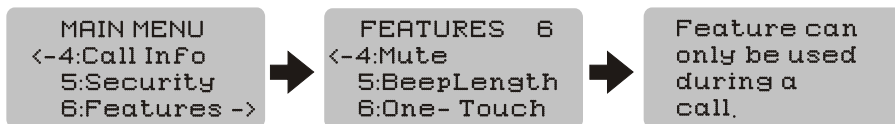


6-5. Beep Length [65]

If you want to adjust beep length,

- Press [MENU].
- Press [6].
- Press [5].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].


* normal / long

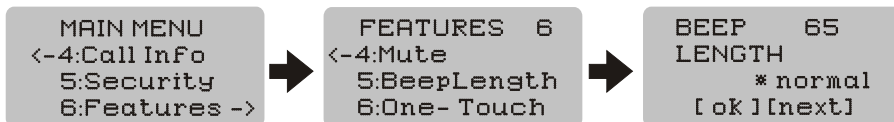

6-6. One-Touch [66]

- Press [MENU].
- Press [6].
- Press [6].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* enable / disable

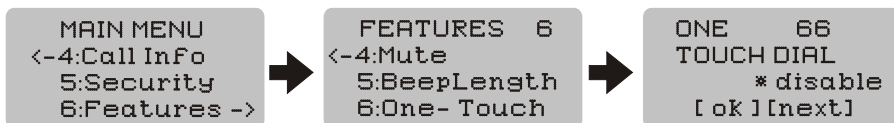

7. Display

7-1. Back light [71]

Use this function to set the LCD and keypad backlighting on your setting.

If you want to change lighting time,

- Press [MENU].
- Press [7].
- Press [1].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* 5seconds / 10seconds / 30seconds / always on / always off



7-2. Banner [72]

Use this function to enter a personal greeting that is displayed when the phone power up.

If you want to change banner,

- Press [MENU].
- Press [7].
- Press [2].
- Press [RECALL].
- Input new banner.

* If you want a small letter, press [RECALL].

* If you want a space, press [#].

- Press the key until the last spell of the banner is input.
- Press [MENU].




7-3. Show Time [73]

If you want to make display date and time information in LCD,

- Press [MENU].
- Press [7].
- Press [3].
- Select "yes" by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* yes / no

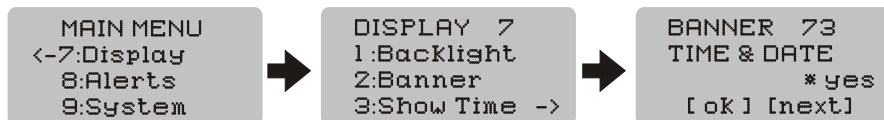


7-4. Auto Hyphen [74]

To display hyphen in phone number (Hyphenation),

- Press [MENU].
- Press [7].
- Press [4].
- Select "yes" by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* on / off

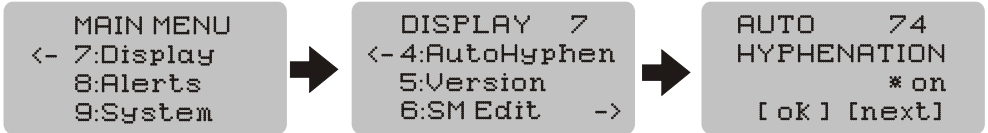

7-5. Version [75]

To check the version of phone,

- Press [MENU].
- Press [7].
- Press [5].
- Press [RECALL] to see more information.
- Press [MENU].

