


7-6. SM Edit [76]

To edit the short message you want to send,

- Press [MENU].
- Press [7].
- Press [6].
- Press [RECALL].
- Input new short message.

- * If you want a small letter, press [RECALL].
- * If you want a space, press [#].
- * Maximum 108 characters are available.


- Press the key until the last spell of the short message is input.
- Press [MENU].

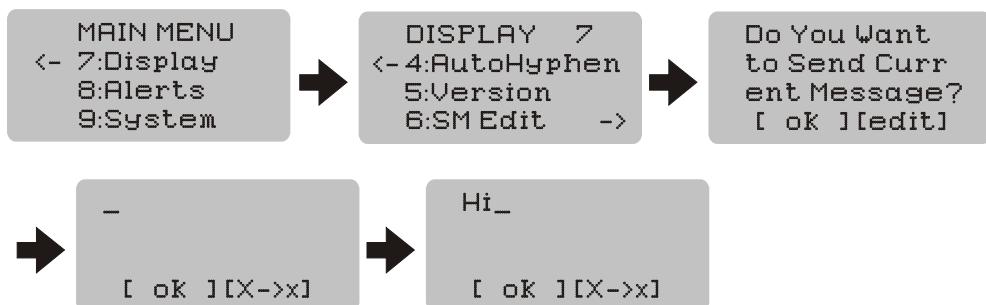

7-7. SM Send [77]

To send the short message,

- Press [MENU].
- Press [7].
- Press [7].
- Press [MENU].
- Input the phone number you want to call.
- Press [MENU].
- Press [MENU].
- Input the phone number you want to be called back.
- Press [MENU].

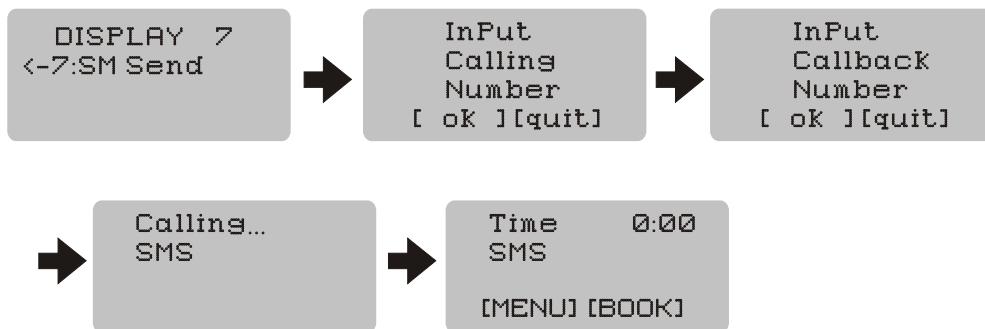


8. Alerts

8-1. Fade [81]

Use this function to set an alert to beep when the call is missed. If "on" and the call is missed, you can hear the beep sound and the message that the call was missed is displayed.

- Press [MENU].
- Press [8].
- Press [1].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* on / off

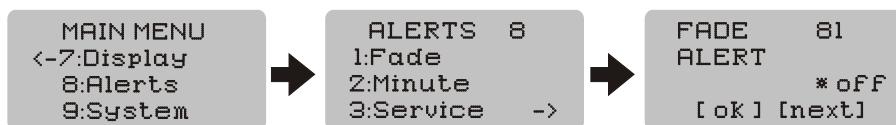


8-2. Minute [82]

Use this function to set an alert to make beep on 10 seconds before the end of every minute during a call.

- Press [8].
- Press [2].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* on / off

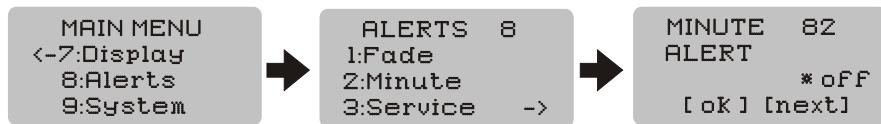


8-3. Service [83]

If the service alert is on, the terminal beeps when it is no service state. If the service alert is off, the terminal does not beep when it is no service state.

- Press [MENU].
- Press [8].
- Press [3].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* on / off

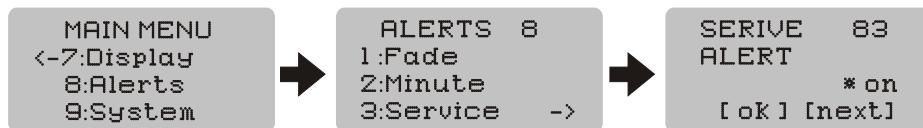

8-4. Roam Ringer [84]

Use this function to set the ringer to make sound (on) or not sound (off) upon reception of a roam call.

The roam ringer sound is distinct from other ringers.

- Press [MENU].
- Press [8].
- Press [4].
- Select mode by using [UP]/[DOWN] or [*]/[#] or [RECALL].
- Press [MENU].

* on / off



9. SYSTEM


Data / Fax [91]

If you want to select the mode of next incoming call,

- Press [MENU].
- Press [9].
- Press [1].
- Select the mode by pressing [UP]/[DOWN], [RECALL] or [*]/[#].
- Press [MENU].

* Off/fax for next call/fax until powered off/modem for next call/modem until powered off.

- Scroll by [UP] / [DOWN]

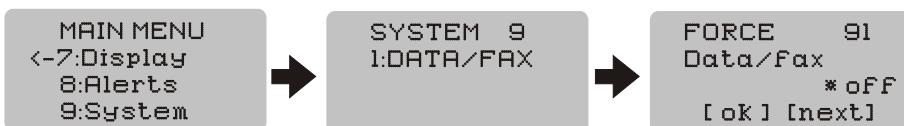

IV. Appendix

Troubleshooting

- Pick up the handset.
- You can hear a dialtone.
- Dial the desired Phone number.
- Press [SEND] or just wait for 8 seconds to make a call.

Problem	What To Do
There is no indication on the LCD screen	Make sure the terminal is turned on. If the switch is on, turn off the terminal and then turn it on again.
No Service message is displayed on the LCD screen.	The WLL terminal must be placed in the location where service coverage is available. If necessary, move the terminal to the serviced location.
Your terminal beeps or you can hear nothing in the handset.	Your handset is not properly placed. Place the handset normally.
Battery LED is turned off, and the terminal beeps periodically.	The backup battery is discharged. Switch to the external power supply..
There is no ring when a call comes.	The ringer is switched off. Press [UP] button several times to adjust the ringer volume

In case that the simple remedy steps does not work help with Terminal, contact to the local agency from where you have purchased the product, or a service center and or a qualified technician will to solve the trouble.