

Copyright © Huawei Technologies Co., Ltd. 2013.

All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI

HUAWEI, and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS

MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Contents

Getting to Know the MU709s-6	1
Dimension.....	1
Position of RF Connectors.....	2
Pin Definitions	3

Thank you for purchasing HUAWEI MU709s-6 HSPA+ mini PCIE Module (hereinafter referred to as the MU709s-6)


Note:

- This manual briefly describes the dimension, the position of RF connectors and Pin definitions.
- You are recommended to read the manual before using the MU709s-6.

Getting to Know the MU709s-6


Dimension

- The package of the mini PCIE module is 52 pin PCIE with a dimension of 51 mm × 30.4 mm × 3.3 mm. It is applied to the user interface board, and can be used as a wireless terminal in a network environment.

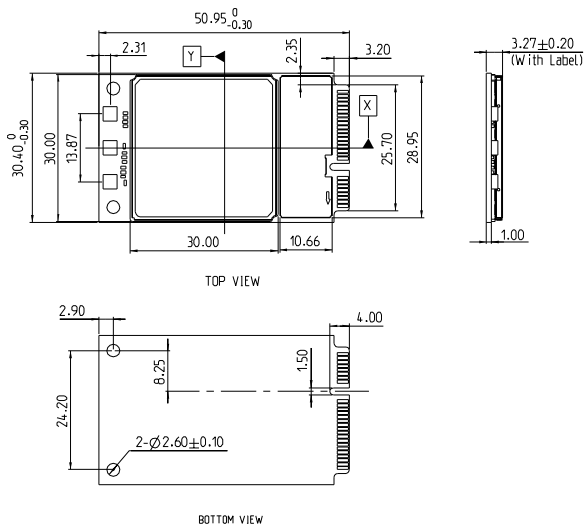


Position of RF Connectors

The PCIe Adapter module provided two antenna connectors (MAIN_ANT and AUX_ANT) for connecting the external antennas.

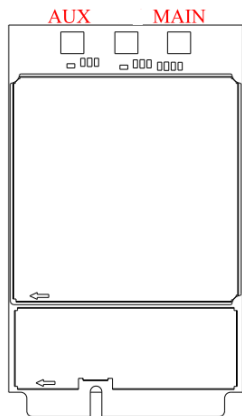

Pin Definitions

- The sequence of mini-PCIE interface is shown below.

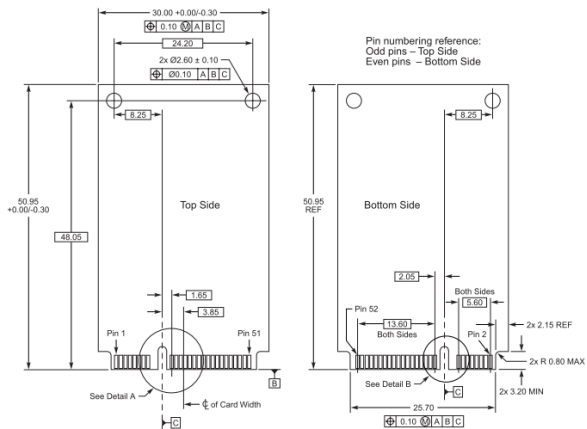

- The Pin definitions of the MU709s-6 Mini PCIe interface is shown below.

■

PIN No.	Pin Name		I / O	Description	DC Characteristics (V)		
	Mini PCI Express Standard Description	HUAWEI Pin Description			Min.	Typ.	Max
1	WAKE#	WAKE#	O	OC 门. 用来唤醒主机.	-0.3	-	-
2	3.3Vaux	VCC_3V3	P	3.3 V DC 电源	3.0	3.3	3.6
3	COEX1	NC	-	不连接	-	-	-
4	GND	GND	-	地	-	-	-
5	COEX2	NC	-	不连接	-	-	-
6	1.5 V	NC	-	不连接	-	-	-
7	CLKREQ#	NC	-	不连接	-	-	-
8	UIM_PWR	UIM_PWR	O	USIM 卡电源	-	1.8/2.8 5	-
9	GND	GND	-	地	-	-	-
10	UIM_DATA	UIM_DATA	I/O	USIM 卡数据信号	-0.3	1.8/2.8 5	2.1/3 .05
11	REFCLK-	NC	-	不连接	-	-	-
12	UIM_CLK	UIM_CLK	O	USIM 卡时钟信号	-0.3	1.8/2.8 5	2.1/3 .05
13	REFCLK+	NC	-	不连接	-	-	-

PIN No.	Pin Name		I / O	Description	DC Characteristics (V)		
	Mini PCI Express Standard Description	HUAWEI Pin Description			Min.	Typ.	Max
14	UIM_RESET	UIM_RESET	O	USIM 卡复位信号.	-0.3	1.8/2.85	2.1/3.05
15	GND	GND	-	地	-	-	-
16	UIM_Vpp	NC	-	不连接	-	-	-
17	Reserved	Reserved	-	保留引脚，不连接	-	-	-
18	GND	GND	-	地	-	-	-
19	Reserved	Reserved	-	保留引脚，不连接	-	-	-
20	W_DISABLE#	W_DISABLE#	-	用来禁止模块无线通信功能。 目前不支持此功能。	-	-	-
21	GND	GND	-	地	-	-	-
22	PERST#	RESIN_N	-	Reset module Active-low	-	-	-
23	PERn0	NC	-	不连接	-	-	-
24	3.3Vaux	VCC_3V3	-	3.3 V DC 电源	3.0	3.3	3.6

PIN No.	Pin Name		I / O	Description	DC Characteristics (V)		
	Mini PCI Express Standard Description	HUAWEI Pin Description			Min.	Typ.	Max
25	PERp0	NC	-	不连接	-	-	-
26	GND	GND	-	地	-	-	-
27	GND	GND	-	地	-	-	-
28	1.5 V	NC	-	不连接	-	-	-
29	GND	GND	-	地	-	-	-
30	SMB_CLK	NC	-	不连接	-	-	-
31	PETn0	NC	-	不连接	-	-	-
32	SMB_DATA	NC	-	不连接	-	-	-
33	PETp0	NC	-	不连接	-	-	-
34	GND	GND	-	地	-	-	-
35	GND	GND	-	地	-	-	-
36	USB_D-	USB_D-	I / O	USB D-	-	-	-
37	GND	GND	-	地	-	-	-
38	USB_D+	USB_D+	I / O	USB D+	-	-	-

PIN No.	Pin Name		I / O	Description	DC Characteristics (V)		
	Mini PCI Express Standard Description	HUAWEI Pin Description			Min.	Typ.	Max
39	3.3Vaux	VCC_3V3	P	3.3 V DC 电源	3.0	3.3	3.6
40	GND	GND	-	地	-	-	-
41	3.3Vaux	VCC_3V3	P	3.3 V DC 电源	3.0	3.3	3.6
42	LED_WWAN #	LED_WWAN #	O	LED 指示信号, 用来指示模块的工作状态 低电平有效	-	-	-
43	GND	GND	-	地	-	-	-
44	LED_WLAN#	NC	-	不连接	-	-	-
45	Reserved	PCM_CLK	O	PCM 时钟信号	-0.3	2.6	2.9
46	LED_WPAN#	NC	-	不连接	-	-	-
47	Reserved	PCM_DOUT	O	PCM 数据输出	-0.3	2.6	2.9
48	1.5 V	NC	-	不连接	-	-	-
49	Reserved	PCM_DIN	I	PCM 数据输入	-0.3	2.6	2.9
50	GND	GND	-	地	-	-	-
51	Reserved	PCM_SYNC	O	PCM 同步信号	-0.3	2.6	2.9

PIN No.	Pin Name		I / O	Description	DC Characteristics (V)		
	Mini PCI Express Standard Description	HUAWEI Pin Description			Min.	Typ.	Max .
52	3.3Vaux	VCC_3V3	P	3.3 V DC 电源	3.0	3.3	3.6

