



HUAWEI T710

GSM Mobile Phone

USER GUIDE

Copyright © 2008 Huawei Technologies Co., Ltd.



Huawei and other Huawei trademarks are the trademarks or registered trademarks of Huawei Technologies Co., Ltd. in the People's Republic of China and certain other countries. All other trademarks mentioned in this manual are the property of their respective holders. The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base, Bantian, Longgang, Shenzhen 518129,
People's Republic of China
Tel: +86-755-28780808 **Global Hotline:** +86-755-28560808
E-mail: mobile@huawei.com **Website:** www.huawei.com

Contents

1 Know your phone .1	Entering Eng(ABC and abc)..... 10
Your Phone..... 1	Entering Numbers
Keys and Functions 10
Screen Icons	Entering Symbols
2 Start.....4 10
Installing the SIM Card and Battery 4	5 Messages 11
Charging the Battery	Edit and Send SMS
Power on/off 11
Using the Function Menu..... 6	Edit and Send MMS
Phone Lock 12
PIN/PUK	View SMS/MMS 13
Locking the Keypad	6 Contacts..... 13
..... 7	Add New Contacts
3 Calling.....7 13
Making a Call..... 7	Search
Answering a Call .8 14
Voice Mail Server 8	7 Multimedia 14
Speed Dial	Camera
..... 9	Video Recorder . 15
4 Text Input9	Video Player 15
Changing the Text Input Modes..... 9	FM Radio
 16
	Sound Recorder 17
	8 Network Connection
 17
	Network Settings
 17

 
Network
Connection..... 18
PUSH 18

**9 Warnings and
Precautions..... 18**

1 Know your phone



 


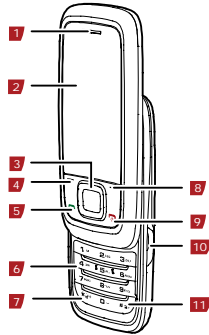



 

Your Phone

The following figure is a sketch of the phone. The actual product may differ.








 


1	Earpiece	7	* key
2	Screen	8	Right soft key
3	Navigation keys	9	End key
4	Left soft key	10	Charger /Earpiece interface
5	Dial key	11	# key
6	Number key		

Keys and Functions

Press ...	To...
	<ul style="list-style-type: none">• View the Dialed calls in the standby mode.• Make or answer a call.
	<ul style="list-style-type: none">• Power on or off the phone (by pressing and holding it).• End a call or reject an incoming call.• Return to the standby .
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none">• Display the Profiles interface , the Inbox interface , the Write Message interface , and the Camera interface  in the standby mode.• During a call, you can press  to increase the volume and press  to decrease the volume.

Press ...	To...
<div data-bbox="571 159 619 185" style="border: 1px solid black; padding: 2px; display: inline-block;">□ -</div> <div data-bbox="571 215 619 241" style="border: 1px solid black; padding: 2px; display: inline-block;">□ 0-9</div>	<ul style="list-style-type: none"> • Enter numbers, letters and symbols. • Speed-dial phone numbers in the standby mode (by pressing and holding the 2-9 keys). • Enter the number of a contact quickly in the standby mode (by pressing one or more of the 1-9 keys and then pressing #). • Enter the voice mailbox in the standby mode (by pressing and holding the 1 key).
<div data-bbox="571 365 619 392" style="border: 1px solid black; padding: 2px; display: inline-block;">* #</div>	<ul style="list-style-type: none"> • Enter the * symbol. • After entering a telephone number and holding this key (then you will see "P" on the screen), enter the extension number. • Display the list of punctuations in the editing mode.
<div data-bbox="571 517 619 544" style="border: 1px solid black; padding: 2px; display: inline-block;">#</div>	<ul style="list-style-type: none"> • Enter the # symbol. • Change a text input mode in the editing mode. • Press and hold it enter to FM in standby mode.

 
Screen Icons

Icon	Description
	It indicates the signal strength.
	There are new messages.
	The phone is roaming.
	Call forward is activated.
	Alarm is activated.
	Keypad is locked.
	It indicates the battery charge level.
	There are missed calls.

2 Start

Installing the SIM Card and Battery

 
Make sure that the golden area on the SIM card is facing downwards and the cut-off edge is correctly aligned with the card holder.

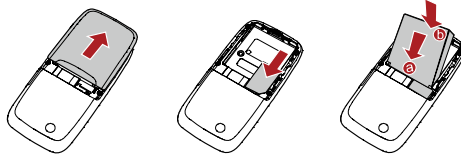


Charging the Battery

When the battery power is low, the phone will issue a warning sound and pop-up message; if the battery is too low, the phone will automatically shutdown. Please charge the battery in time.

1. Connect the charger to the charger interface on the side of your phone.





2. Connect the charger to an AC power socket.
3. During the charging, the charging icon is displaying in animation.

 If the battery is completely discharged, you may need to wait a few minutes before the charging indicator appears on the screen.






 
 
 

4. When the charging icon becomes static, the battery is fully charged. Disconnect the charger from the AC power socket.
5. Disconnect the charger from the phone.

Power on/off

If the phone is power on, press and hold  about 3 seconds to power off.

If the phone is power off, press and hold  about 3 seconds to power on.

Using the Function Menu

1. In the standby mode, press  (**Menu**) or  to display the **Menu** interface.
2. Press  to scroll to a menu item.
3. Press  (**Select**) or  to display the menu.
4. Display the submenu in either of the ways:
 - Press  to scroll to a submenu item and press  (**Select**) to display the submenu.
 - Press the number key corresponding to the number of a submenu to display it.
5. Press  (**Back**) to return to the previous menu or quit the function menu.
6. Press  to return to the standby mode.

Phone Lock

The phone lock protects your phone from unauthorized use. The default phone lock code is 1122. You can change it into any numeric string of 4 to 8 digits.

If the phone lock function is enabled, you need to enter the correct phone lock code when the phone is powered on or in the standby mode.

PIN/PUK


The personal identity number (PIN) protects your SIM card from unauthorized use. The PIN unlocking key (PUK) can unblock the blocked PIN. Both PIN and PUK are


 
delivered with the SIM card. For details, consult your service provider.

If you enter wrong PINs for three times consecutively, the phone asks you to enter the PUK code.

If you enter wrong PUKs for ten times consecutively, the SIM card is invalidated permanently. Contact your service provider for a new card

Locking the Keypad

 
Cover the slide to lock the keypad. When the keypad is locked, you can press  to answer an incoming call or make emergency calls.







In the standby mode, you can press  and  to unlock the keypad.

When the **Keypad lock** function is enabled, if there is no operation on the phone for a preset period in the standby mode, the keypad is locked automatically.







3 Calling



Making a Call

1. In the standby mode, enter a phone number.
- To make an international call, press  (two times) to enter the international long distance code of "+". Then enter the number to be dialed, in the format of "country code + region code + phone number".

 

- To call a number with an extension, press  (three times) to insert "P" between the phone number and the extension number.
 - 2. Press  to dial the number.
 - 3. Press  to end the call.
-  • When the phone is locked, enter the lock code to unlock the phone first; otherwise, you can make emergency calls or answer calls only.
- You can dial calls by call log, contacts, SMS and MMS.
 - During a call, you can press  to increase the volume and press  to decrease the volume.

Answering a Call

When there is an incoming call, you can press  **(Accept)** to answer it, or press  **(Reject)** or  to reject it. Press  **(Mute)** can shut up the ringing, then press  **(Reject)** to reject it. Press  (Options), then select **Answer** to answer it.

If the **Cover answer** function is activated, you can cover to answer an incoming call. If the **Anykey answer** function is activated, you can press any key except  and  to answer an incoming call.

Voice Mail Server

The fast dial number of Voice Mail Server is . After it is activated, you can press and hold  to use.

Select **"Menu > Messages > Voice Mail Server > Options > Edit"**, edit the number.




(The realization of functions needs network support, before use it is necessary to apply for enabling of this service.)

Speed Dial


Number 2~9 can be set as speed dial key for 8 frequency numbers. In standby mode, press and hold number can speed dial.

Set speed dial:


 
 


1. Select **"Menu > Contacts > Speed Dial > Set Number"**;
2. Select an **"Empty"**, press  (**Options**);
3. Select **"Edit"**, open the Contact List;
4. Select the number you want to use as the speed dial.

4 Text Input

Changing the Text Input Modes

The indicator of the current text input mode is displayed on the screen. In the editing mode, press  to change the input mode.



- In the editing mode, press  (**Delete**) once to delete the letter on the left of the cursor.
Press and hold  (**Delete**) to delete all the letters at a time.
- In the "ABC" or "abc" input mode, press  repeatedly to select and enter the commonly used punctuations.
- In any input mode(except "123" input mode) , press  to enter a space. In the "ABC" or "abc" input mode, press  once to enter a space, twice to enter "0".

Entering Eng(ABC and abc)




In the "ABC" or "abc" input mode, you can press a key labeled the desired letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

Entering Numbers

- In the "123" input mode, press a key labeled the desired number.
- In the "ABC" or "abc" input mode, press a numeric key repeatedly until the desired number appears on the screen.

Entering Symbols

1. In any input mode, press  to display a symbol list.

2. Press  to scroll to the desired symbol.
3. Press  or  to enter the selected symbol.



5 Messages



Your phone support the SMS and MMS. It can store as mang as 500 short messages, MMS storage number by phone decide by remaining storage space.



- MMS service needs service provider support, before use please confirm your SIM card supports this service or consult relevant service provider.


Edit and Send SMS

1. Select "**Menu > Messages > SMS > Write Message**".
2. Edit the short message. Press  (**Options**) to insert object, format text, input method.
3. Finish editing, press  (**Options**):
 - **Send**: entering phone number or search from **Contacts**.
 - **Save and Send**: send the message and save it to **Inbox**.
 - **Save**: save the message to **Drafts**.
 - **Send to Many**: send to several recipients.
 - **Send by Group**: select a group to send.

4. Press  (OK) or  send the message.


Edit and Send MMS


1. Select "Menu > Messages > MMS > Write MMS".


2. Select "To", "Cc" or "Bcc", press  (Edit).

3. Add number/Email of "To", "Cc" or "Bcc".

4. Select **Subject**, press  (Edit) to add subject.

5. Select "Edit Content", press  (Edit) to edit the MMS.

When editing, press  (Options), then add picture, add audio, add attachment, add slide before, preview, slide timing.

6. Finish editing, press  (Options) and select "Done" to exit.

7. Press  (Done) :

- **Send Only**: send MMS.
- **Save and Send**: send MMS and save it to **Inbox**.
- **Save to Drafts**: save MMS to **Drafts**.
- **Send Options**: setup the send options.
- **Exit**: Quit the "Write MMS", you can choose whether to save the MMS you just edited.



- Your phone support several pages attachments (such as PPT).
- Wireless networks limit the size of MMS messages. If you insert graphics size exceed the limit, then the phone will send pictures to narrow.

View SMS/MMS

When you receive SMS or MMS,press

 
 


(View/Play).If you want to view later,press



(Back).

View the SMS or MMS later , you can refer to following steps:

1. Select "Menu > Messages > SMS (MMS) > Inbox".It will display the unread messages.
2. Select one message , press  (Options) to open.
3. Press  (Options) to answer the message.

 
 
 



Open the message, make sure to carefully. MMS objects may contain malicious software, as well as other potential harm to your phone.


6 Contacts

Add New Contacts

1. Select "Menu > Contacts > Add New Contact".



2. Press  (**Options**) to save the contact "**To SIM**" or "**To Phone**".
3. Edit contact.
If you want to save to SIM , you can only edit name and number.
4. Finish editing,press  (**Done**), pop-up message to preserve the contact person.
5. Press  (**Yes**) to save;press  (**No**) to exit.


 

Search

1. Select "**Menu > Contacts > Quick Search**" .
2. Enter name , or the first letter of name.
3. Press  (**Options**), then search.





7 Multimedia

Camera

1. In standby mode , press  or select "**Menu > Multimedia > Camera**" .
2. Press  (**Option**) :
 - "**Photos**".
 - **Camera Settings**: setup with "**EV**", "**AE Meter**" , "**Banding**" , "**Delay Timer**" , "**White Balance**" , "**Scene Mode**" and "**Shutter Sound**".
 - **Image Settings**: setup "**Image Size**" and "**Image Quality**".


- **Effect Settings** : setting the special effects you want to take photos used.
 - **Restore Default**: set the **Camera** settings to restore default.
3. In "**Camera**" interface , press  to take photos.
 4. Press  (**Continue**) to save the photo to "**Photos**" ;press  (**Delete**) to delete the photo.



 

Video Recorder

1. Select "**Menu > Multimedia > Video Recorder**" , enter to recorder preview interface.
2. Press  (**Options**) :
 - **Video Recorder Settings**: setup "**White Balance**" , "**EV**" , "**Night Mode**" , "**Banding**" , "**Video Quality**".
 - **Effect Settings** : setup the special effect you want to use record.
 - **Restore Default**: set the **Video Recorder** settings to restore default.
3. Press  to **start/stop**.
4. Press  to adjust "**EV**".
5. Press  to stop recording,press  (**Yes**) to save the video to phone;press  (**No**) to delete it.

Video Player


 





1. Select "**Menu > Multimedia > Video Player**".


2. Select one video , press  to play.
When it is playing , you can do the following options:

- Press  to adjust the volume.
- Press  or  to pause/play.
- 3. Press  (**Stop**) to stop playing.

FM Radio





Before using FM Radio, need to plug earphone as antenna. In order to ensure the effectiveness, do not pull out the earphone or earphone's wire bending.

1. Connect the earphone first.
2. Press and hold  to enter to FM Radio in standby mode ; or select "**Menu > Multimedia > FM Radio**"
3. Press  to broadcast.
When it is broadcasting, you can do the following options:
 - Press  to adjust the volume.
 - Press  to minitrim, $\pm 0.1\text{Hz/once}$.
 - Press  (**Options**) ,select "**Preset Auto Search**" to search channels and save to channel list.
 - Press  (**Options**) , select "**Settings**" to setup "**Background Play**", "**Skin**" , "**Loud Speaker**" and so on.
 - Press  (**Options**) , select "Record" to record the current program and save .

4. Press  (**Stop**) to stop.

Sound Recorder

You can record AMR / WAV format file with your phone.






1. Select "Menu > **Multimedia** > **Sound Recorder**"
2. Press  (**Options**) , select "Record" to start.
3. When it is recording,press  (**Pause/Continue**)
or  , press  (**Stop**) to stop recording.You can save the recorded file.

8 Network Connection

WAP service needs network supported, regarding the availability, price and taxation of WAP service, please consult your network operator or the service provider that provide you with the service you need.


Network Settings

Setup the data account:

1. Select "**Menu** > **Settings** > **Network Settings** > **Data Account**".
2. Select your service provider from list.
Press  (**Edit**) or  to open.
3. Setup the data account with the information provide by your service provider'.
4. Press  (done) , pop-up message to preserve.
5. Press  (**Yes**) to save; press  (**No**) to exit.

Network Connection

After the completion of the network settings, you can browse the web with phone.

1. Select "Menu > WAP > Input Address".
2. Input address. Press * Key can input symbol.
3. Press  (Options), select "Done". Browser will open the website you input.



Browse the Web, the phone keys' function may vary depending on the services, please operate with the on-screen instructions.

PUSH

PUSH refers to your service provider for the service information issue. It can be a text message, or a WAP service address. You can choose to read, to add new bookmarks, added to the white list or delete PUSH information.

9 Warnings and Precautions

Electronic Device

- Power off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
- Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device

manufacturer to confirm whether the radio wave affects the operation of this device.

- Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where phone use is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, power off your phone and do not take out, install or charge the battery, to avoid explosion and fire. Areas with inflammables and explosives include, but are not limited to:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Power off bi-direction wireless equipment"

- Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with the hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, power off the phone and take out the battery. In areas where phone use is prohibited, power off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Power off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an

induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.

- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- Keep the ambient temperature between 0°C and 45 °C while the battery is being charged. Keep the ambient temperature between –20°C and 60°C for storing the battery. If the ambient temperature is too low (especially below 0°C) or too high, the capacity and life of the battery will be reduced.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charger from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not power on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.


- While using the mobile phone, observe the local laws and regulations, and respect others' privacy and legal rights.

Clearing and Maintenance

- Before you clean or maintain the phone, power off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charger. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the locally authorized service center for help.
- Do not dismantle the mobile phone or accessories. Only an authorized service center is allowed to maintain the mobile phone.

Environment Protection

- Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste or fire. Otherwise, explosion may occur.

- This HUAWEI device complies with Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- : This symbol indicates that the equipment carrying this mark must NOT be thrown into general waste but should be collected separately and properly recycled under local regulations.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.

- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.
- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.

- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

SAR INFORMATION

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types T710 (FCC ID: QIST710) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.388 W/kg and when properly worn on the body is 1.255 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Section 15.21 Information to user.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Section 15.105 Information to the User

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.