

1. Working Frequency: 312MHZ
2. The Transmitter & receiver shall be kept away from water & damp. The battery is strictly followed Battery standard. These notices are required for avoiding damage the electric elements & lasting Products used.
3. The available distance between Transmitter & Receiver is 150ft(in vast field). Do not over this Distance always!
4. If the “Red Lights” on the Transmitter does not work. Please check whether the battery positive & Negative is correct!
5. If the “Red Lights” on Transmitter can work, but the Doorbell Receiver don’t work. Please check:
 - (1) Whether the battery positive & negative is correct
 - (2) Whether the distance between Transmitter & Receiver is available
 - (3) Whether the selection code is complied
6. Do not install the transmitter on “IRON DOOR” to avoid influence. If the receiver is installed Beneath Door or Window will be more effective for use.