

## REMOTE UNIT

### Inserting batteries

The remote unit uses two "AA" batteries. To install or replace the batteries, please follow these steps:

1. Remove kickstand base.
2. Unscrew the screw on the back of the compartment and remove the cover.
3. Insert the batteries observing the correct polarity.
4. Replace the battery cover on the unit and seal by re-screwing tightly.
5. When a "Low Battery" symbol  appears on the part of Outdoor Temperature, please replace batteries of the remote unit.
6. At few occasions (interfered by environment, for instance), the LCD display might be abnormal, and then reload the corresponding batteries until it is ok.
7. After installation of the new batteries, the setup procedures need to be performed. (See Setting the remote transmitter(s)

### Setting the remote transmitter(s)

There are 2 buttons inside the back of remote.

- 1)  $^{\circ}\text{C}/^{\circ}\text{F}$ --- To change the remote displays Centigrade or Fahrenheit
- 2) TX --- To test communication between remote and main unit

NO. TX13 REV: 00