

QUICK START GUIDE

Wireless Audio System

PD 7040

Connect your units

Step One - Transmitter


1. Insert battery.



Open the battery door according to this direction.




Put the battery into the compartment. Pay attention to the polarity.

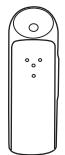

Close the battery door.


2. Rotate the jack head anticlockwise and the blue light will be turned ON.

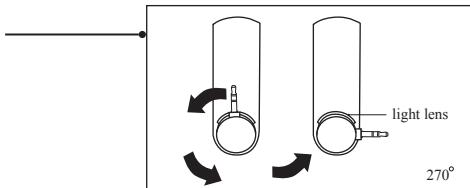


3. With the 270 degree swivel jack head, you can connect the transmitter with your audio player.

Step Two - Receiver

1. Connect the provided adaptor to the receiver and power supply. It is well-connected when the blue light on the receiver is ON.

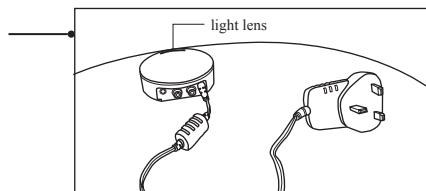

2. Connect your audio system / speaker / earphone to the line-out jack or RCA jack on the back of the receiver.

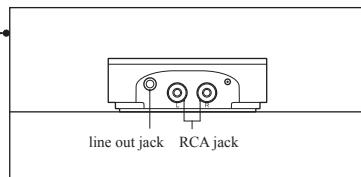

Noted: when line-out jack is connected, the output to the RCA jack is muted.

QUICK START GUIDE

Wireless Audio System

PD 7040

Step Three - Make the connection

1. Ensure both lights on the transmitter and receiver is turned ON.
2. Switch on your audio player and start playing music.

Troubleshooting

Trouble

No Signal / Sound received

Solution

- Check if there is any battery / low battery in the transmitter. If the light indicator on the transmitter is flashing, replace with a fresh AA battery.
- Check if the receiver is well connected with the adaptor and power supply. Make sure the light indicator on the receiver is ON.
- Check if your portable player is working.
- **Pairing:** If all units are confirmed in well-connection, but still, there is no signal received, you may need to do the pairing procedure to search for signal.
 - a . Switch on the transmitter and receiver (blue light on without flashing).
 - b . Hold the channel button (next to the USB port) of the transmitter till the blue light is OFF.
 - c . Before the blue light of the transmitter is ON again (~5 seconds), Short press the channel button (at the bottom of the case) of the receiver.
 - d . After the light of the transmitter is ON again, connect with your devices and test it again.

Noise / Poor sound quality

- The transmission range of the units are about 33 feet.
- Any blocking between the transmission may lead to noise or unstable sound quality

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes and modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.